




Smoke & CO Listener Z-Wave Technical Manual



Ring Smoke & CO Listener

Instructions to locate Z-Wave DSK/QR code

Follow Device inclusion instructions provided in Ring Alarm mobile applications to locate QR code and enter PIN Code

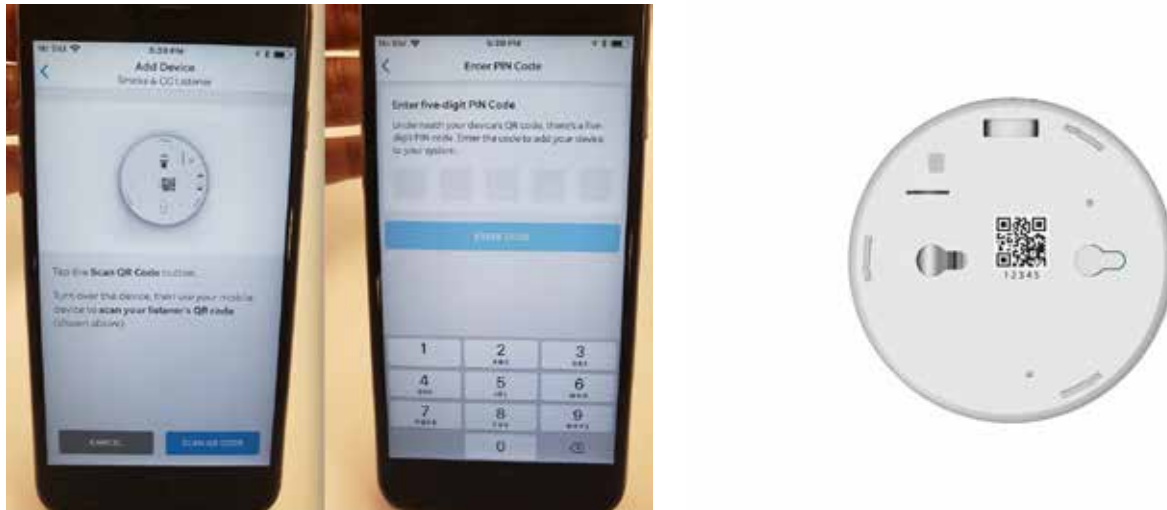

Factory Reset Instructions

Press and hold the Setup button for 10 seconds. When the LED ring stops blinking, Listener will reset.

This process disconnects the Listener from Ring Alarm. To begin using the Listener again, repeat the setup process in the Ring app.

“Use this procedure only in the event that the network primary controller is missing or otherwise inoperable.”

Association CC:

This sensor has one Association groups of 1 node. Group 1 is the lifeline group who will receive unsolicited messages relating to Smoke/CO Siren detected/not detected notifications, case tampering notifications, and low-battery notifications.

Parameter No.	Description	Size in Bytes	Value description	Default
1	Configures how often the sensor should send an unsolicited Battery Report to the Lifeline.	2	255 to 4200 seconds in 255 second increments that the sensor should wait between sending unsolicited battery reports.	4200
2	Configures the sensor to be able or not able to “hear” CO Detectors in addition to Smoke Detectors.	1	1: Smoke Detector Siren 2: Smoke+CO Detector Siren	1
3	Starts the “Installation Test” Mode	1	0: Cancel Installation Test Mode 1: Start Installation TestMode	0

To review your warranty coverage, please visit www.ring.com/warranty.

© 2020 Ring LLC or its affiliates.

Ring, Always Home, and all related logos are trademarks of Ring LLC or its affiliates.