




# Manual For Pangolin T Series iPhone

## Client

### 1. Launch interface

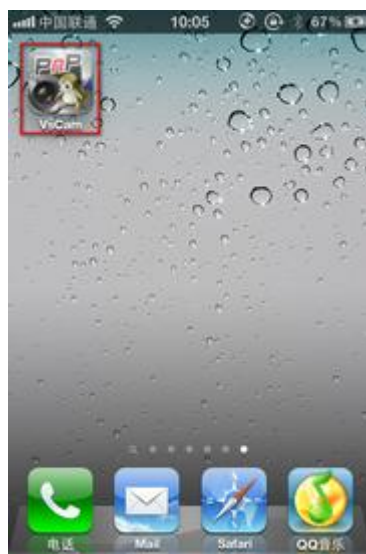


### 2. Add a new IP-Camera

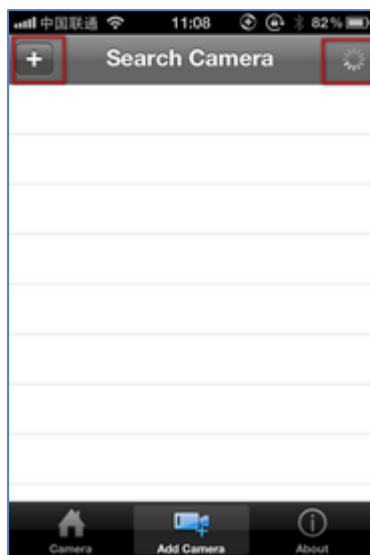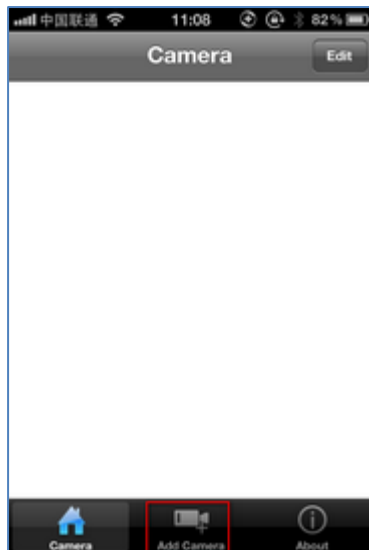

Procedure to add a new IP-Camera:

1. Press "Add Camera" label
2. From the pop out window: press "+" label; or press search label(To automatically search available Cameras on LAN)
3. Then fill the require information;

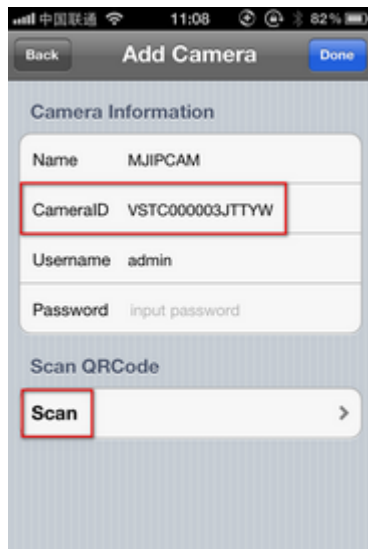


#### 4.Camera Information:

- 1) Name--Can be changed to anyone you like
- 2) Camera UID--Input manually or Scan QR Code(Strongly recommended)
- 3) Username--admin (Default)
- 4) Password--Blank (Default)

On finish filling all items, then job is done.

#### 3.Choose the Wireless network you like

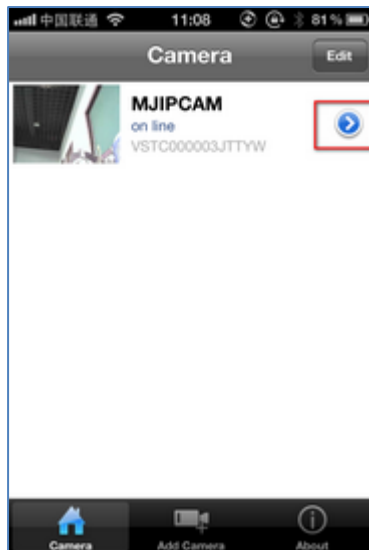

**Procedure to configure wireless network:**


- 1) Choose the right Camera which is to be configured
- 2) Press the blue triangle, then will pop out a new interface on the right side
- 3) Press WIFI Setting
- 4) Choose one from the available wireless network:



For example, choose "VStarcam", and then fill in password to access wireless network.

Finally press "Done", then job is done.


#### **4. Manual for each function**

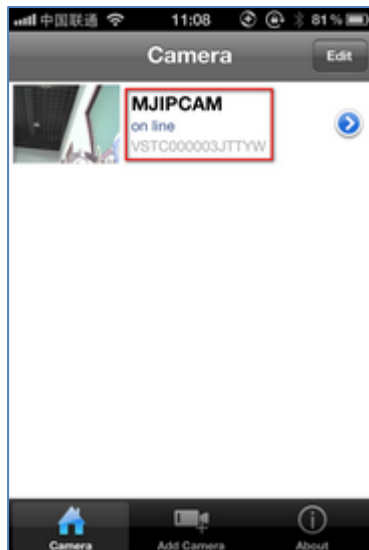

From the available Camera , choose the on line one, press it ;

When mobile successfully receives video from the camera,  
then will display an interface on the right side.

## 5. Introduction

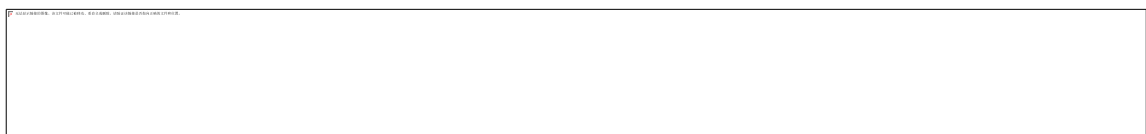

### Function description (from left to right)

1) Cruising vertically

- 2) Cruising horizontally
- 3) Image flip(up to down)
- 4) Image flip(left to right)



**Function description(From left to right)**

- 1) Snapshot
- 2) Monitor/Mute
- 3) Intercom
- 4) Image flip
- 5) Brightness adjustment
- 6) Resolution adjustment-- (When network condition is bad, turn it down)