




Champion Power Equipment, Inc., Santa Fe Springs, CA USA

MODEL #100882

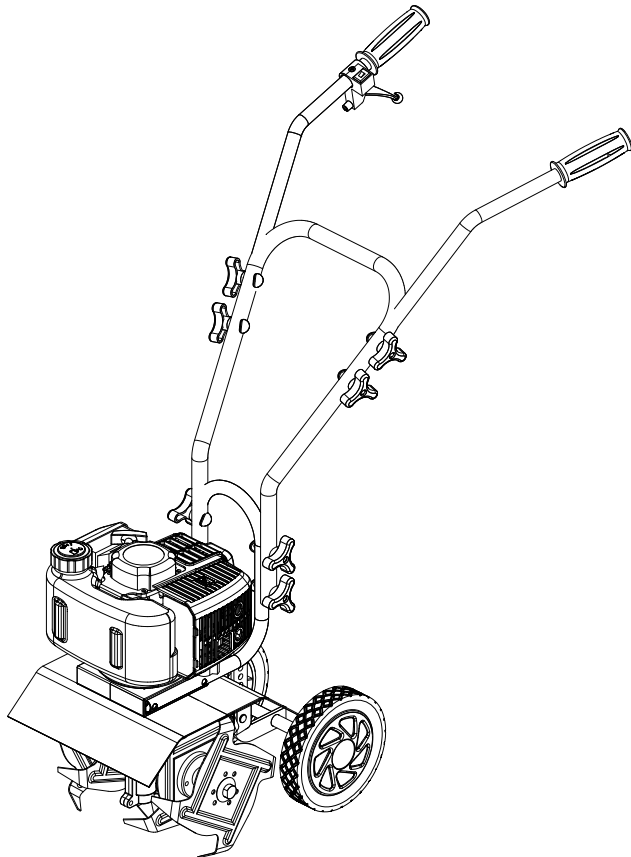

PARTS INFORMATION

CULTIVATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS


Cultivator Diagram..... 3

Cultivator Parts List 4

Engine Diagram 6

Engine Parts List 7

CULTIVATOR DIAGRAM

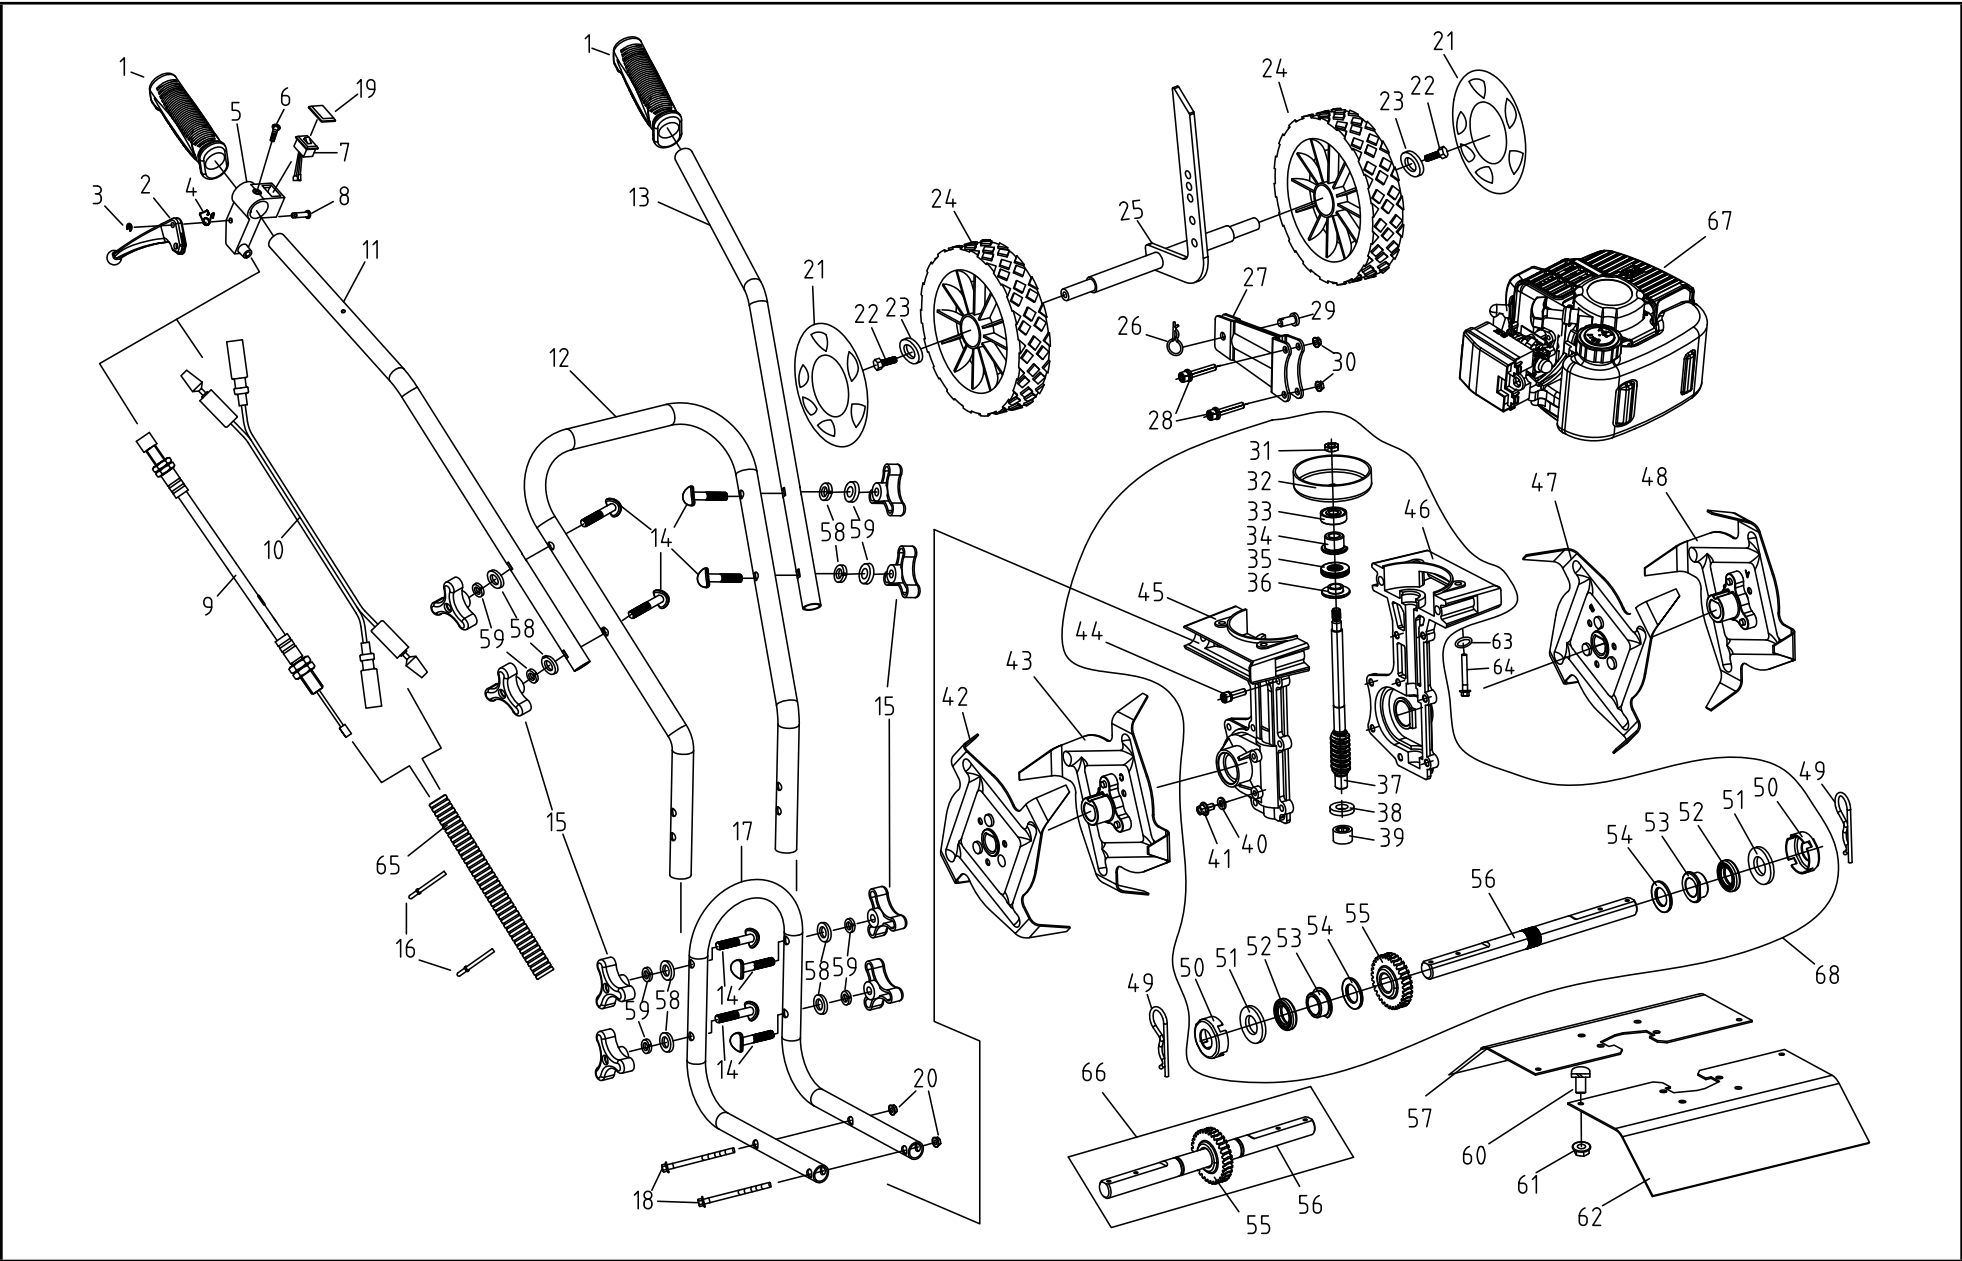


CULTIVATOR PARTS LIST

#	Part Number	Description	Qty.
1	2320091377	Cover, Handle	2
2	2320091338	Throttle Lever	1
3	2320090975	Circlip Ø3.5	1
4	2320104231	Torsional spring	1
5	2320091337	Throttle Bracket	1
6	2310003906	Screw ST4.8 x 19	1
7	2320123806	Switch Assembly	1
8	2320104230	Pin	1
9	2320106894	Throttle Cable Assembly	1
10	2320090287	Connector Wire	1
11	2320090565	Right Handle	1
12	2320090564	Middle Handle	1
13	2320090561	Left Handle	1
14	2320090988	Curved-Head Bolt M8 x 45	8
15	2320091339	Knob nut M8	8
16	2310001734	Tie Strap	5
17	2320090563	Lower Handle	1
18	2310003907	Bolt M8 x 150	2
19	2320059838	Switch Cover	1
20	2310003908	Lock Nut M8, Flange	2
21	2320121537	Wheel Cup	2
22	2310003909	Bolt M6 x 12	2
23	2310003910	Washer Ø6	2
24	2320090292	Wheel Assembly	2
25	2320106908	Axle Assembly	1
26	2320090995	R clip Ø3	1
27	2320090568	Bracket Assembly	1
28	2310004441	Bolt M6 x 35	2
29	2320106895	Clevis Pin 8 x 18	1
30	2310003920	Lock Nut M6, Flange	2

#	Part Number	Description	Qty.
31	2310004158	Nut M8	1
32	2320106207	Clutch Drum	1
33	2310003937	Roller Bearing 629-2RS	1
34	2320088857	Flange Bushing, Worm Shaft	1
35	2310004438	Needle Roller Thrust Bearing	1
36	2320093333	Bearing Thrust Reducer	1
37	2320111467	Worm Shaft	1
38	2320098053	Washer	1
39	2310004157	Drawn Cup Needle Roller Bearing	1
40	2320055620	Seal Washer	2
41	2310004160	Bolt M6 x 10	2
42	2320106902	Tine D Assembly	1
43	2320106901	Tine C Assembly	1
44	2310004442	Bolt M6 x 20	6
45	10304101	Left Gear Housing	1
46	10304100	Right Gear Housing	1
47	2320106900	Tine B Assembly	1
48	2320106898	Tine A Assembly	1
49	2320106903	R clip	2
50	2320104924	Dust Cap	2
51	2320088862	Fiber Washer	2
52	2310003849	Seal FB19 x 32 x 6.5	2
53	2320088861	Flange Bushing, Tine Shaft	2
54	2320088860	Washer 2	2
55	2320088866	Worm	1
56	2320103366	Tine Shaft	1
57	2320121538	Fender Guard 1, Yellow	1
58	2310000769	Flat Washer Ø8	8
59	2310003916	Lock Washer Ø8	8

#	Part Number	Description	Qty.
60	2310004876	Bolt M5 x 16 GB / T9074.13	2
61	2310004025	Lock Nut M5	2
62	2320121539	Fender Guard 2, Yellow	1
63	2310000106	Lock Washer Ø6	4
64	2310003912	Bolt M6 x 40	4
65	2320092108	Housing, Throttle Cable & Connector Wire	1
66	19002144	Combined Shaft	1
67	80308228	Engine	1
68	19002085	Transmission Assembly	1

ENGINE DIAGRAM

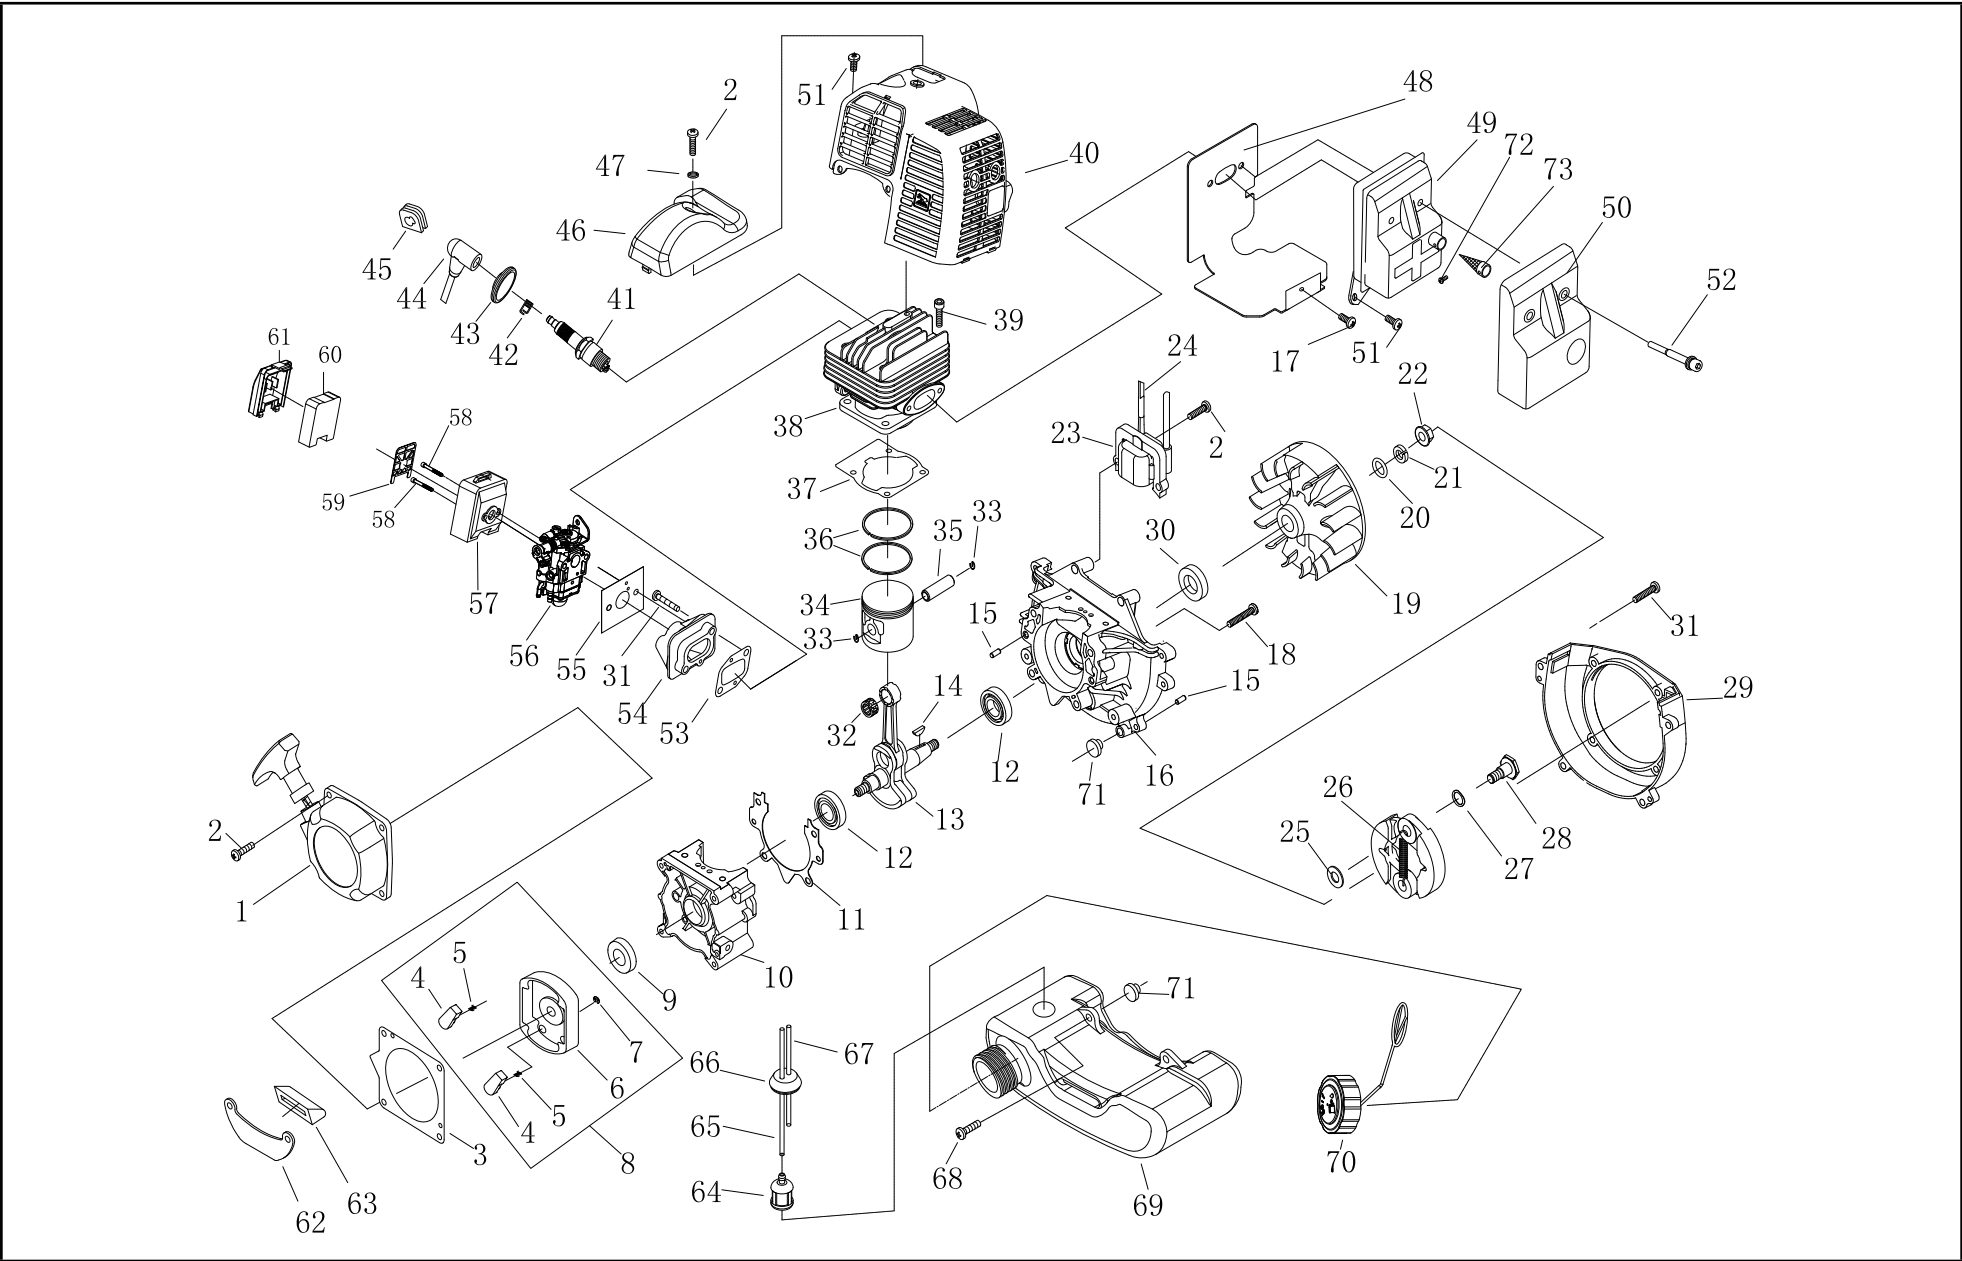

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	2320106891	Starter Assembly	1
2	2310003892	Screw M5 x 20	7
3	2320008967	Gasket, Starter	1
4	2320034480	Start Claw	2
5	2320039918	Start Spring	2
6	2320039919	Start Reel	1
7	2310000177	Stop Ring 4	2
8	2320060040	Start Reel Assembly	1
9	2320088343	Oil seal	1
10	10302749	Crankcase, Rear	1
11	2320059733	Gasket, Crankcase	1
12	2310002694	Bearing 6202/P6	2
13	10200889	Crankshaft/Connecting Rod Assembly	1
14	2310000056	Key 3 x 5 x 13	1
15	2310000935	Pin 4h8 x 10	4
16	10302746	Crankcase, Front	1
17	2310003901	Screw M4 x 12	1
18	2310003904	Screw M5 x 30	4
19	2320106878	Fan, Engine	1
20	2310000769	Washer Ø8	1
21	2310003896	Lock Washer Ø8	1
22	2310003895	Nut M8	1
23	2320106879	Ignition Coil Component	1
24	2320073280	Cord Component	1
25	2320008369	Flat Washer B	2
26	2320065833	Expander	1
27	2320049788	Wave Spring Washer	2
28	2320028659	Screw Pin	2
29	10302822	Fan Cover	1
30	2320001284	Oil seal	1

#	Part Number	Description	Qty.
31	2310003893	Screw M5 x 25	6
32	2320029199	Bearing, Connecting Rod	1
33	2320027110	Circlip, Piston Pin	2
34	2320050831	Piston	1
35	2320008661	Piston Pin	1
36	2320048282	Piston Ring Assembly	2
37	2320050467	Gasket, Cylinder	1
38	10301805	Cylinder	1
39	2310003898	Screw M5 x 20	4
40	2320121536	Guide Cover Assembly	1
41	2320007046	Spark Plug, L8RTC	1
42	2320007063	Spring, Spark Plug	1
43	2320106881	Spark Plug Cap	1
44	2320106870	Cap	1
45	2320094566	Plug	1
46	2320090288	Top Cover	1
47	2320028123	Insulation Gasket	1
48	2320106496	Gasket, Muffler	1
49	2320127219	Muffler Assembly	1
50	2320036825	Cover, Muffler	1
51	2310003894	Screw M5 x 12	2
52	2310003888	Screw M6 x 60-12.9	2
53	2320008715	Gasket, Admitting Pipe	1
54	2320056326	Admitting Pipe	1
55	2320008636	Gasket, Carburetor	1
56	2320121674	Carburetor Assembly	1
57	2320106893	Air Cleaner Housing	1
58	2310003903	Screw M5 x 50	2
59	2320090969	Plate, Filter	1
60	2320086676	Filter	1

#	Part Number	Description	Qty.
61	2320100673	Air Cleaner Cover	1
62	2320016552	Stand, Fuel Tank	1
63	2320003287	Rubber Cover	1
64	2320047780	Fuel Filter	1
65	2320121534	Fuel Inlet Pipe	1
66	2320091481	Seal Plug	1
67	2320121535	Fuel Return Pipe	1
68	2310003900	Screw M5 x 16	2
69	2320091479	Fuel Tank	1
70	2320091480	Fuel Tank Cap Assembly	1
71	2320090299	Rubber washer	2
72	2310005007	Screw M3 x 8	1
73	2320127218	Spark Arrester	1