


HOMPANY

Quick Start Guide


SmartVac 13

Cordless Vacuum
Cleaner

Hompany Support Team:
EN: support@hompany.top
EU: service@hompany.top

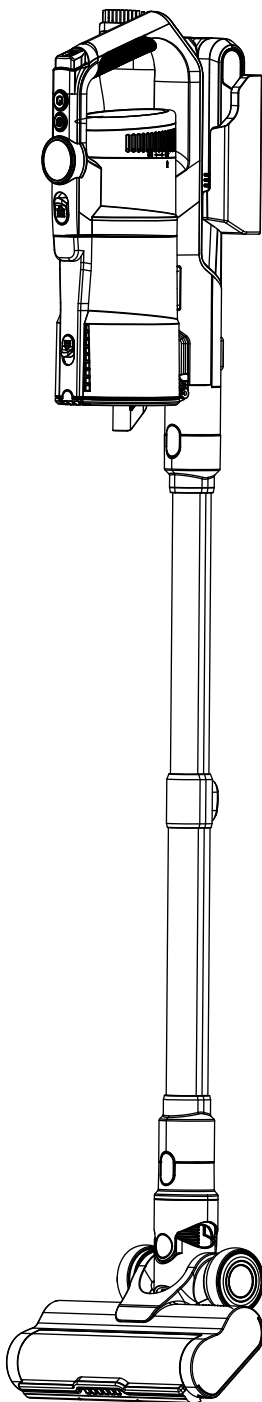

Installing Desired Cleaning Accessory

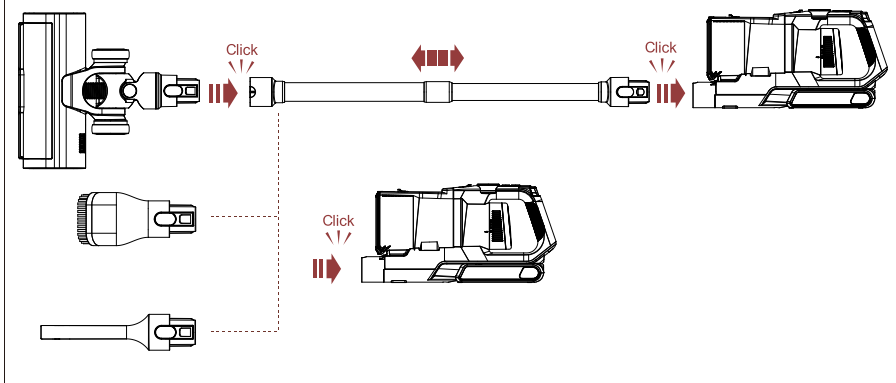

Power Mode and speed switch

Switch Button

ON/OFF button

100 %


MIN MID MAX

Boot into "MID" Mode


Touch the "UP" Key Set to "MAX" Mode

Touch the "UP" Key Again Switch to "MIN" Mode


Recharging on the storage wall-mount

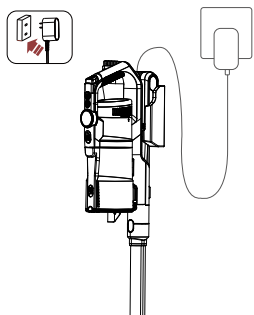

Charging separately

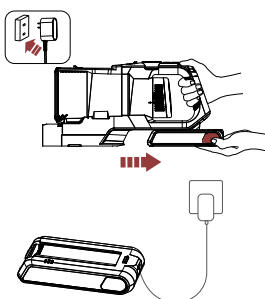


Power display

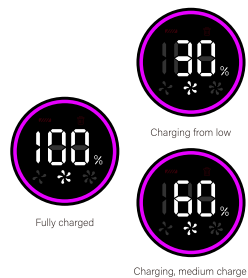


Empty the dust bin


1

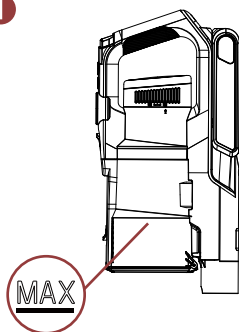


2

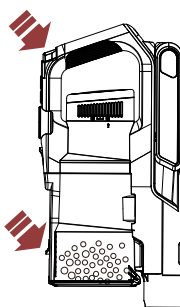






3

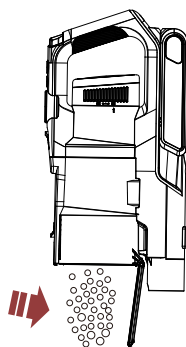

4

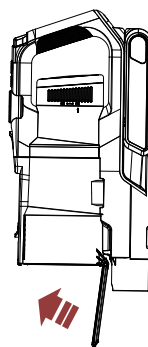

Clean the Electric Floor Brush

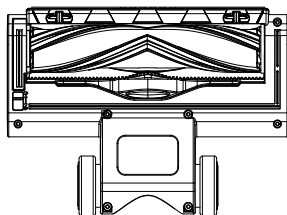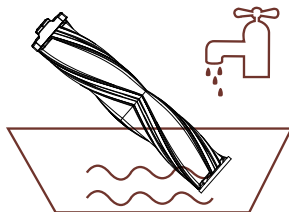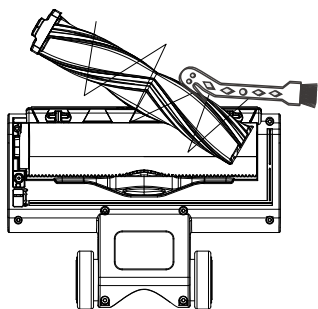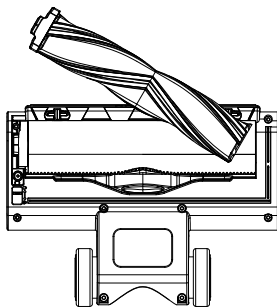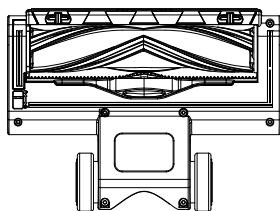







Dust Cup Cleaning





⚠ IMPORTANT!

Wash filters with cold water at least every month.

    
Ensure the filters are completely dry before refitting.

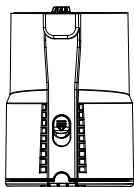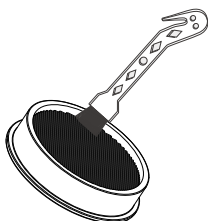


Remove the Dust Cup

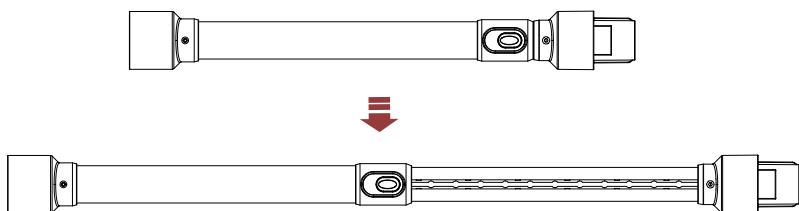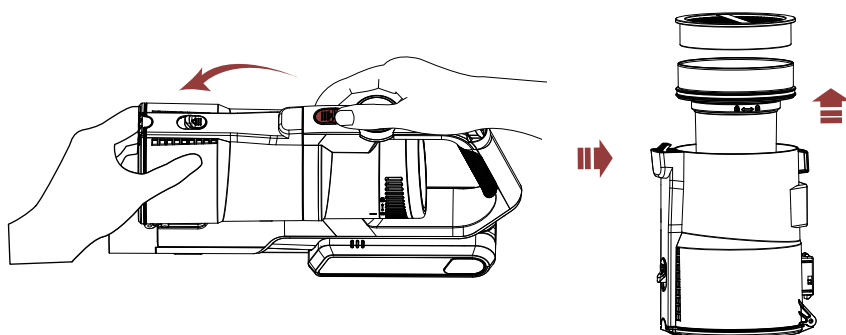


Prohibited operations

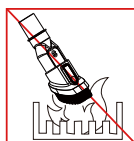


Do not use
SmartVac 13
near open flames.

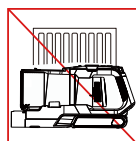


Do not store
SmartVac 13
near heat sources.

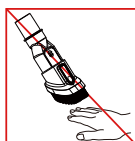

Do not put your hands
near the brush bar
when SmartVac 13
is running.

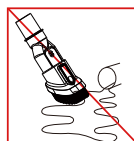

Not applicable for
picking up liquids.

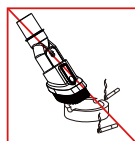

Not applicable for
picking up burning
objects.



Email to HOMPANY Official Customer Service:

EN: support@hompantop.com

EU: service@hompantop.com

We are always here to help you for any questions.



EN



EU