

VINGLI 5-Drawer Storage Cabinet

ASSEMBLY INSTRUCTION



Thank you for purchasing from VINGLI!

Please contact us via email if parts are missing or damaged, we will gladly ship your replacement parts free of charge.

A IMPORTANT

THIS INSTRUCTION OOKLET CONTAINS INPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

RETURN & WARRANTY

Thank you for choosing our product!

We would like to take this opportunity to thank you for choosing VINGLI.

We hope that you are completely satisfied with your purchase, and enjoy it for years to come.

Your satisfaction is our highest pursuit.

Return policy

VINGLI believes you will absolutely love your furniture, but if for some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service organization can answer most concerns and can assist you with any questions you may have about your new product.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

Warranty

VINGLI warrants this product to be free from defects in material and workmanship agrees to remedy any such defect. This warranty covers one year from the date of original purchase. This is solely limited to be repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in anyway.

Components repaired or replaced warranted through the remainder of the original warranty period only. The defective components will be repaired or replaced without charge, subject to the terms and conditions described above.

For help with assembly, identifying parts, product information or to order parts, please contact us freely.

1

BEFORE STARTING

Before Using Product



Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.



- □ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
- ☐ Prepare a flat and Philips screwdriver (not included) A Power Screwdriver is recommended



■ Work in a spacious area and near where the unit will be used. preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.



☐ For a smooth assembly process, we suggest you keep a lite tightness. for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

A WARNING:

- -Do not allow children to climb on unit
- -Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over, it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- Avoid sharp objects or corrosive chemicals to prevent damage to the product
- -During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards

ASSEMBLY TIPS



OVERALL SIZE:

73 X 40 X 120cm 28.74 X 15.75 X 47.24inch

FEATURES:

MDF Board+Solid Wood



Estimated Time for Assembly

3-4 Hours




Estimated People for Assembly

Estimated People for Assembl

Caution:

- 1. This product is designed for home use and not intended for commercial use.
- 2. This product contains small compents. Please ensure that they are kept away from samll childern.
- 3.Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

IDENTIFY PARTS

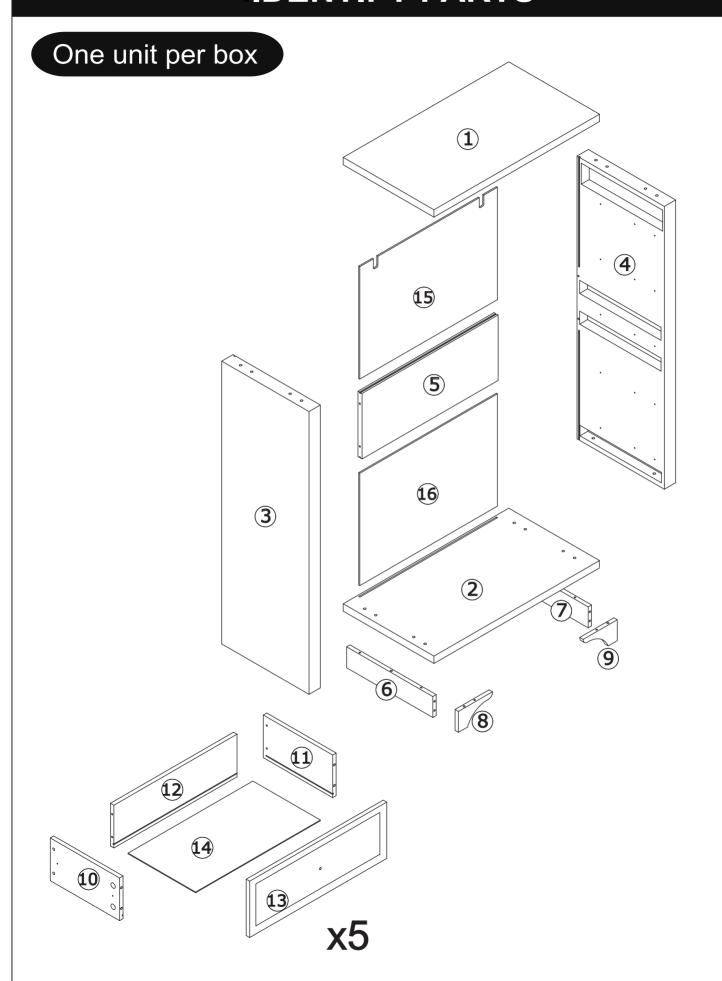


COMPONENTS









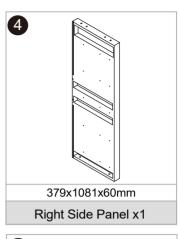




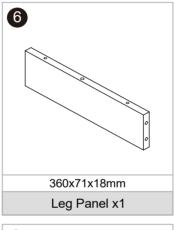





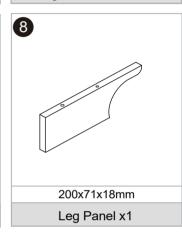





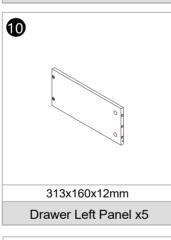


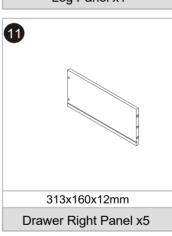


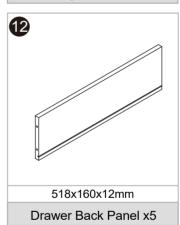

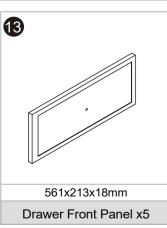

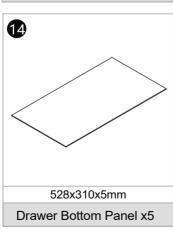

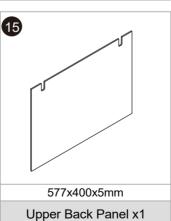


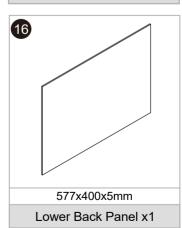


COMPONENTS






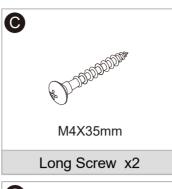

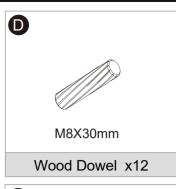





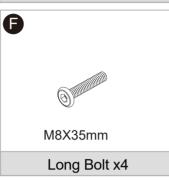







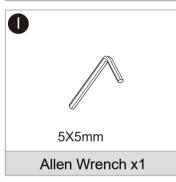


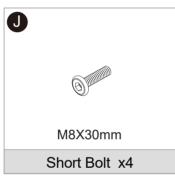

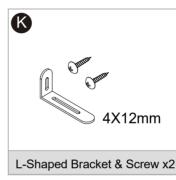




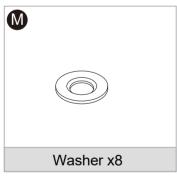

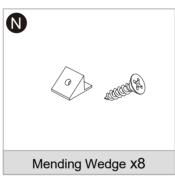




Assembly guide for cam bolt (A) and cam lock (B) Make sure to align the arrow of the cam lock with the direction of the bolt head. Do not over tighten.

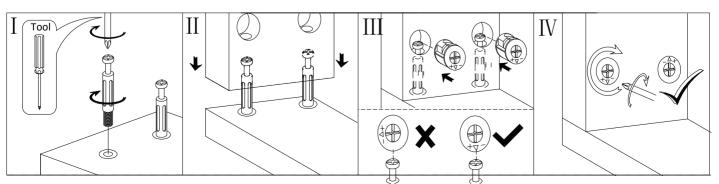



STEP 1

Press down the lever on the metal slide (G) to divide it into two parts, G-1 and G-2.

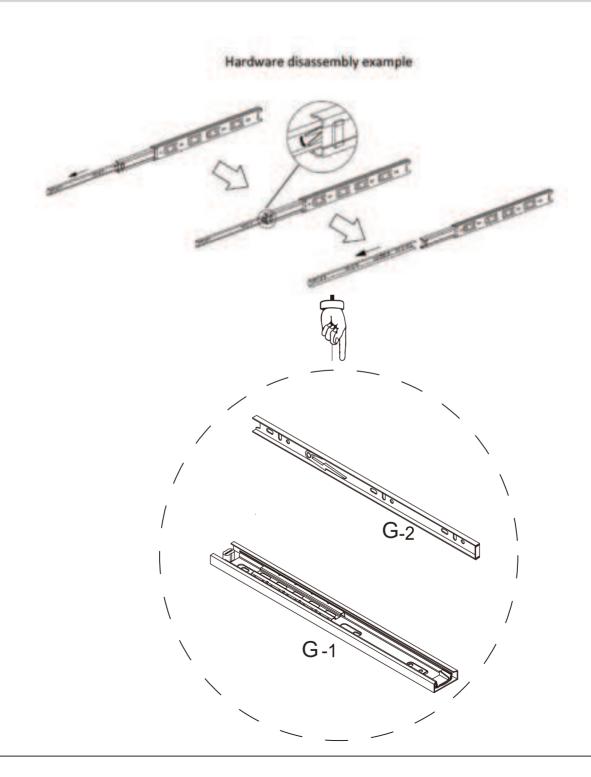

A x 2




G x5

 


H x 15





- 1.Fix the metal slide (G-1) with short screw (H) in the correct hole position on the left side panel (3).
- 2. Screw the cam bolt (A) into the left side panel (3).

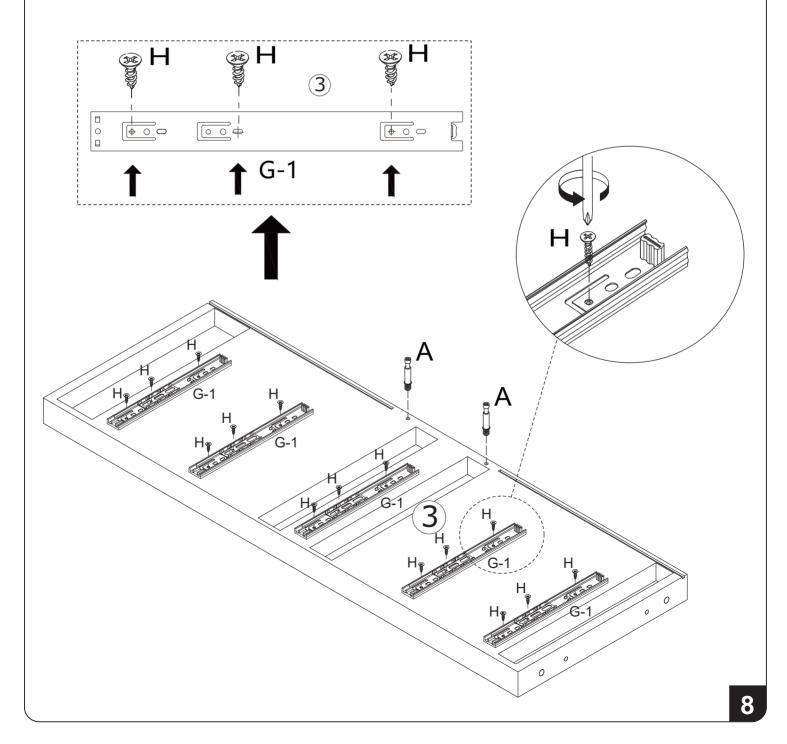



 
- 1.Fix the metal slide (G-1) with short screw (H) in the correct hole position on the right side panel (4).
- 2. Screw the cam bolt (A) into the right side panel (4) as shown below.

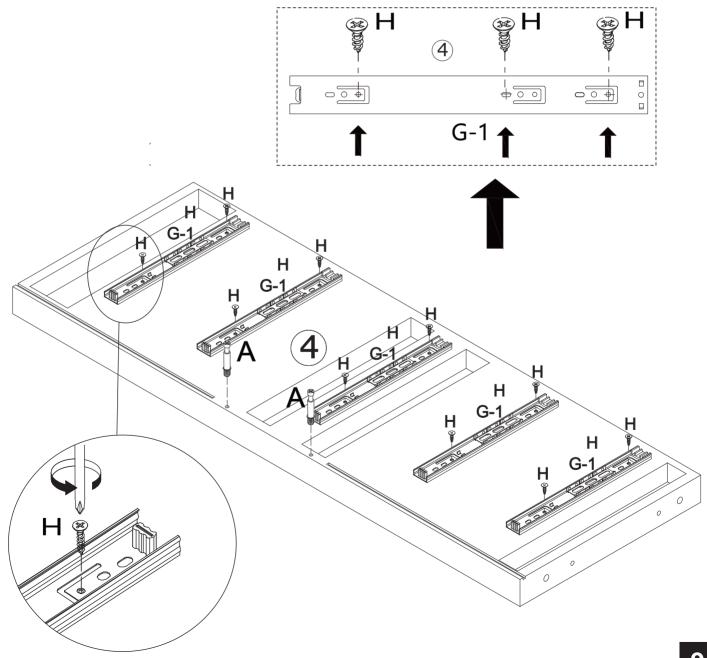




STEP 4


Attach the connecting panel (5) to the left side panel (3) and right side panel (4) with cam lock (B).

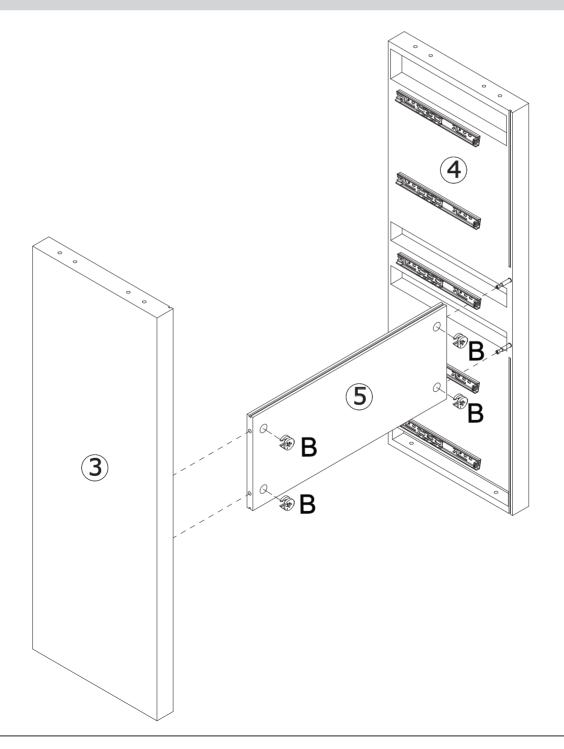

STEP 5


Insert the lower back panel (16) as shown below.

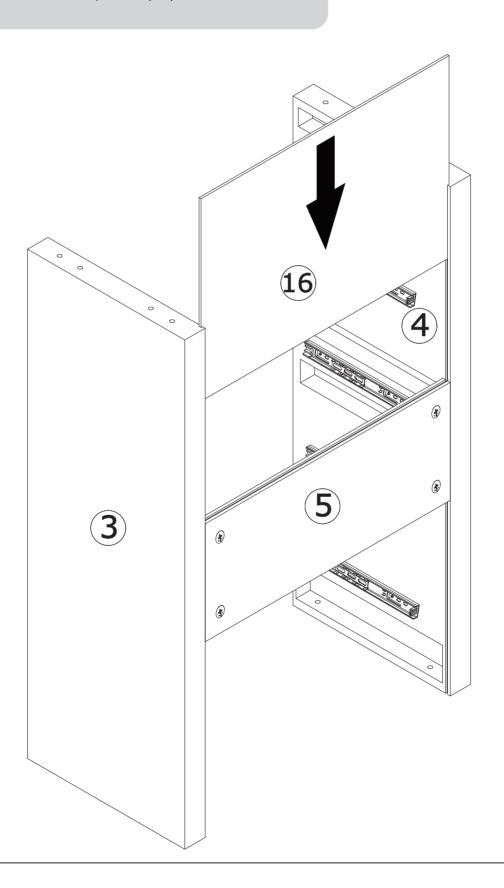

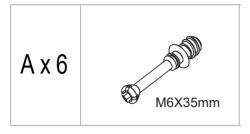

STEP 6

Screw the cam bolt (A) into the bottom panel (2).

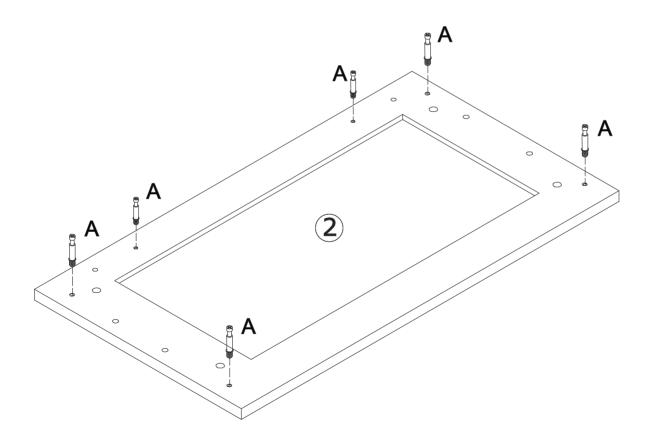

D x 4



F x 4




M x 4



1 x 1




- 1.Insert the wood dowel (D) into the panel (3)(4).
- 2.Install the bottom panel (2) with long bolt (F), washer (M) and allen wrench (I).

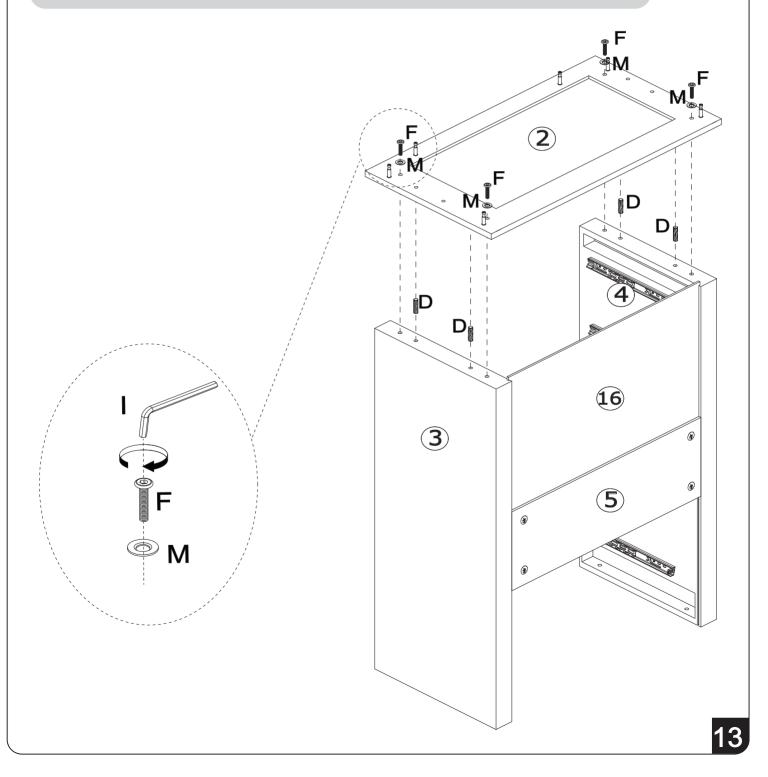




- 1. Screw the cam bolt (A) into leg panels (8,9).
- 2. Connect the leg panel (9) to the leg panel (7) and connect the leg panel (8) to the leg panel (6) using the cam lock (B).

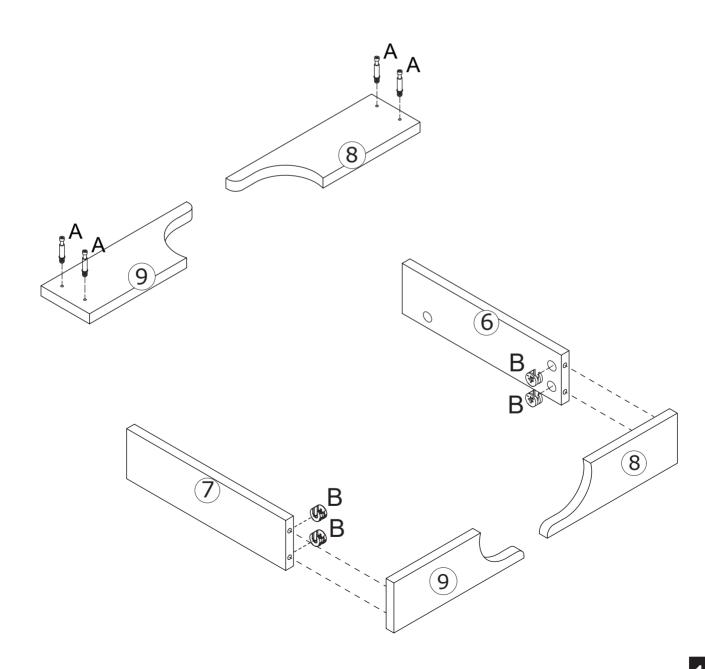




STEP 9


Connect the leg panels (6,7,8,9) to the bottom panel (2) with the wood dowel (D) and cam lock (B) as shown below.

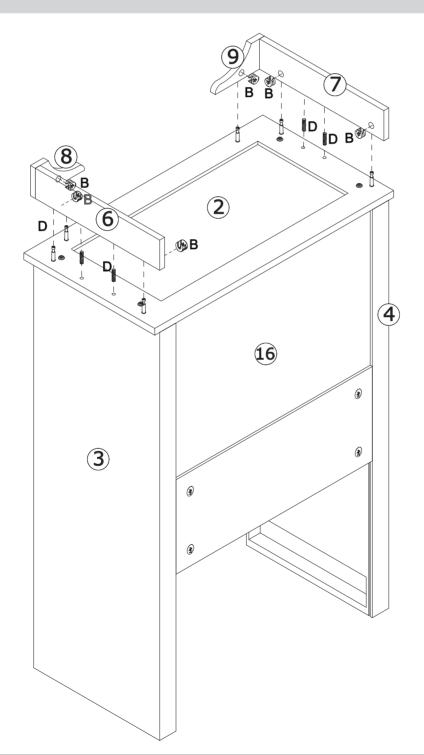

STEP 10

 
Insert the upper back panel(15) as shown below.

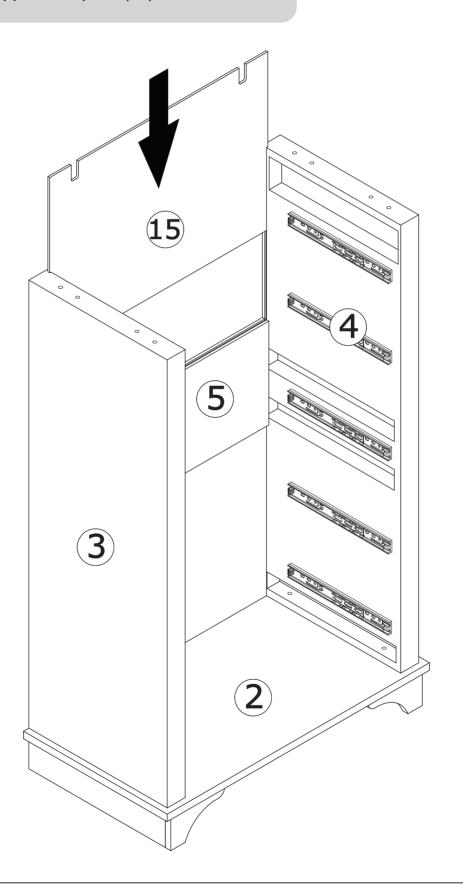





STEP 11

Fix the L-shaped bracket (K) on top panel (1).

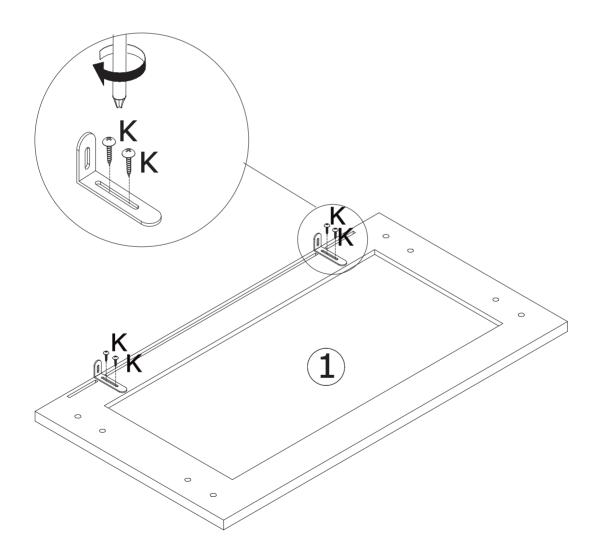

 
- 1. Insert the wood dowel (D) into the side panels (3,4).
- 2. Install the top panel (1) with short bolt (J), washer (M) and allen wrench (I).

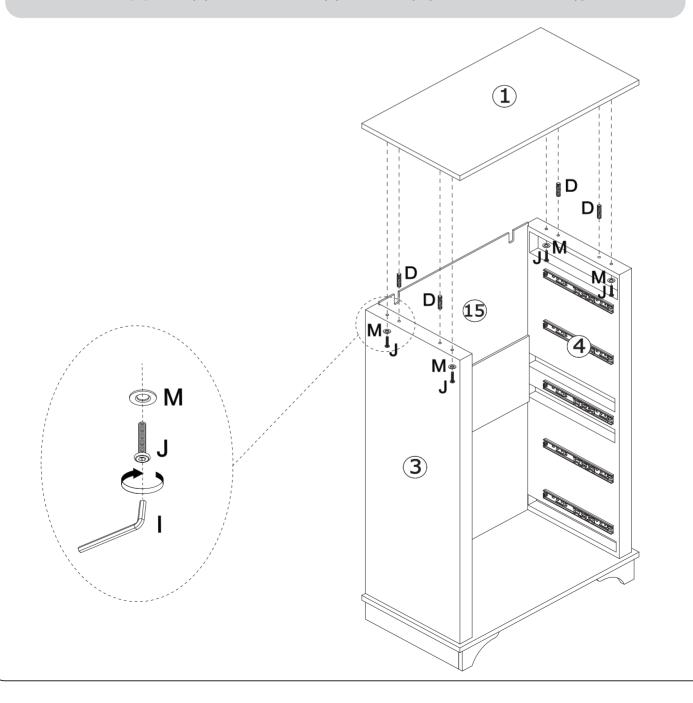



STEP 13

Insert the mending wedge (N) into the gap in the back panel and fix it with screw (N).

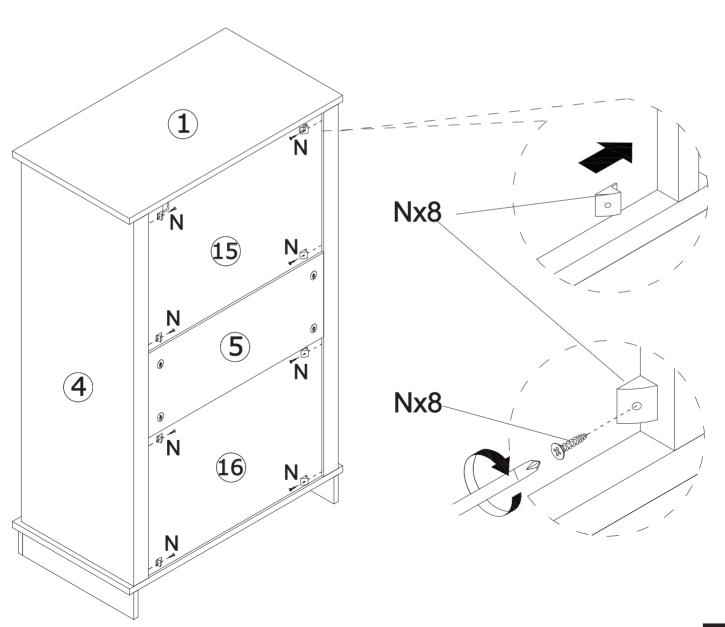

C x 2




Lx2




6X6X40mm


- 1. Drill holes in the wall and insert the anchor (L) into the holes.
- 2. Use long screw (C) to pass through the L-shaped bracket and secure the cabinet to the wall

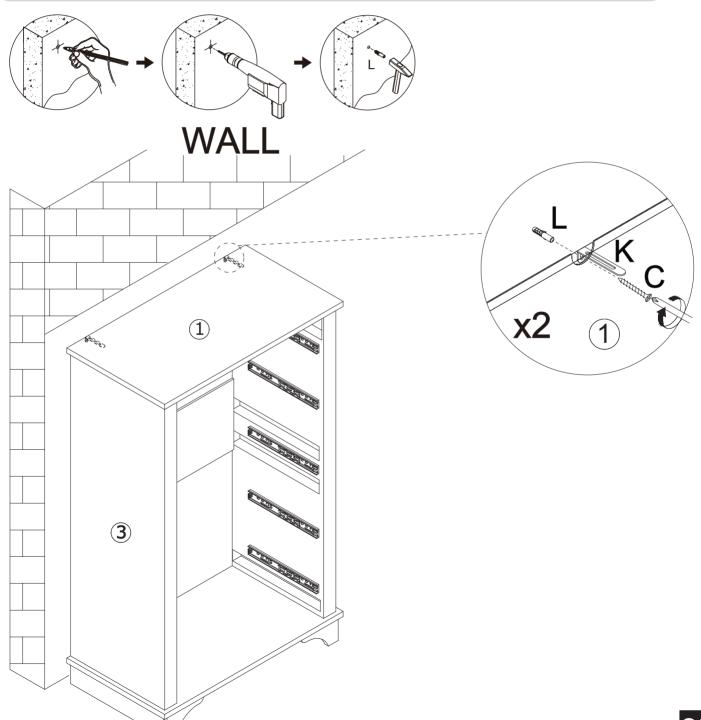



 
- 1.Attach the drawer left panel (10) and drawer right panel (11) to the drawer back panel (12) with long screw (O), and then repeat this step 4 times.
- 2.Install the drawer bottom panel(14), and then repeat this step 4 times.

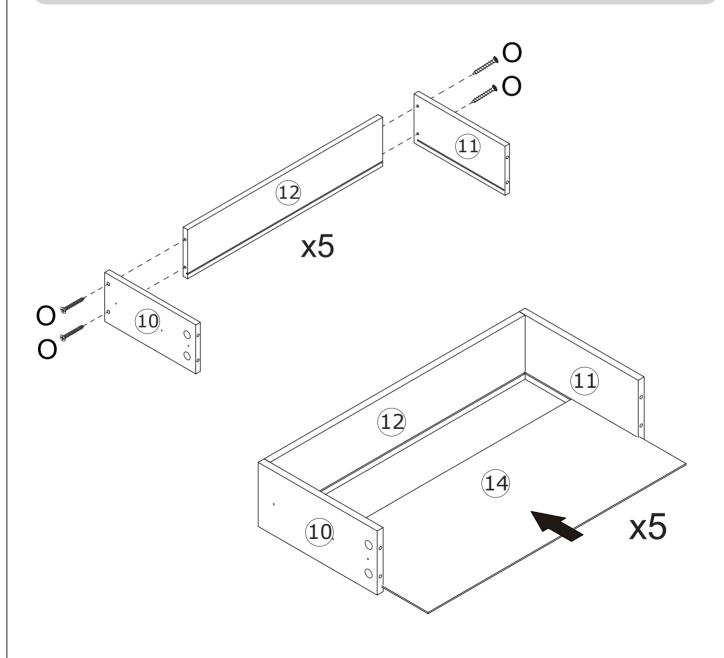



STEP 16

Screw the cam bolt (A) into the drawer front panels (13).

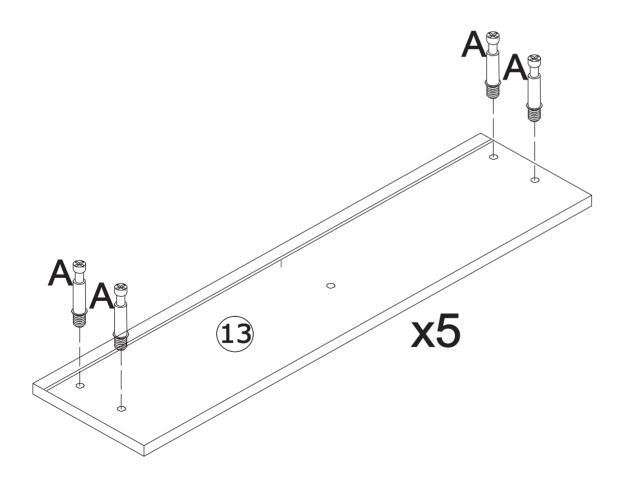


B x 20




E x 5



 
- 1. Install the drawer front panel (13) with cam lock (B) as shown below.
- 2. Attach the knob (E) to the panel (13) with screw (E).

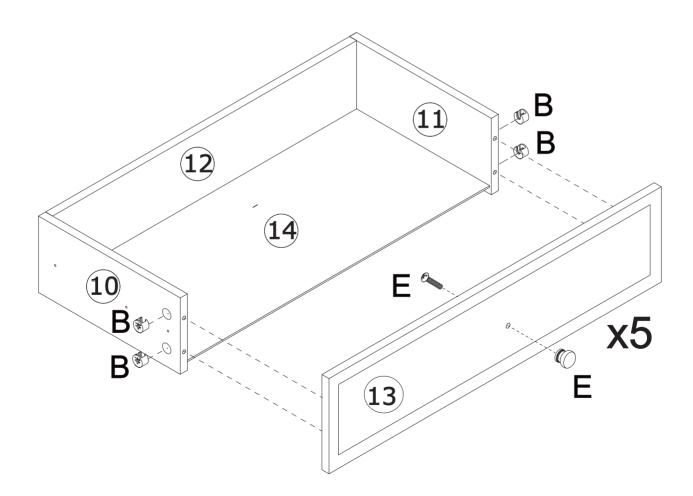




STEP 18


Fix the metal slide (G-2) with short screw (H) in the correct hole position on the drawer side panels as shown below.

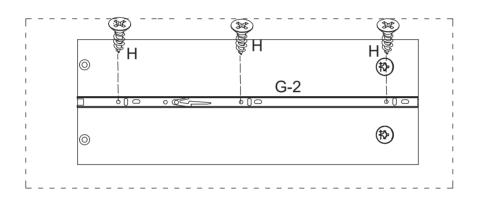

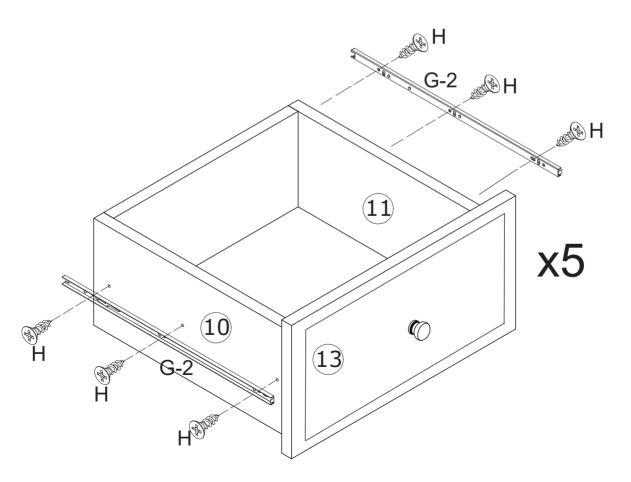

STEP 21


Align the slides on the drawer and cabinet, and then gently push the drawer into the cabinet.

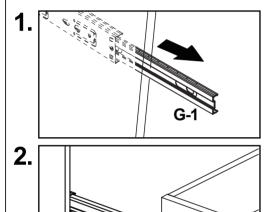



Drawer Disassembly

If you need to remove the drawer, lift the lever on the left side slide upward and push down the lever on the right side slide, then slowly pull out the drawer.

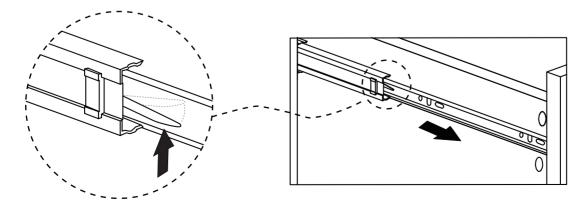

FAQs

1. What should I do when I received a defected item?

Please feel free to contact VINGLI customer service via the link where you purchased this item with your order ID, pictures of the defective areas to us. We are eager to help you to make it right.

2.Is it easy to put the screws to the panels?

Yes. As long as you follow the instrusction and use the correct screws and put it in the correct holes, it is easy to screw it into pre-drilled holes.

3. What should I do if I have a problem with the drawers not closing flush?

The problem with the drawers not closing flush is usually caused by the assembly of the drawer slides. Here are the solutions as below:

- 1)Please check whether the slide rail is damaged, for example, the ball of the slide rail has fallen out, if so, please ask us for replacements of the drawer slides;
- 2)Refer to the assembly manual to check if the holes for the slide rail are assembled correctly. If there is no problem with the assembly, but the slide rail is stuck in the process of pushing in, please release the entire draweras you did the first time you removed the drawer slides, and then push it back in again.

Any query, please contact us directly.

Supplementary Instructions for Safe Use

English



WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French



ATTENTION





Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper. ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir. Ceci est une étiquette permanente. Ne pas enlever!

German



WARNUNG





Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht. Dies ist ein dauerhaftes Etikett. Nicht entfernen!