



bonsaii

Paper Shredder C237-B

Instruction Manual

6-sheet Cross Cut Shredder



**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP IT FOR FUTURE REFERENCE.**

Please give us a chance to make it right and do better!
Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped.

Customer Service:

✉ : customer-care@bonsaii.com

TIPS:

Thank you for choosing our product!

To ensure that the machines are free of quality issues, we conduct 100% inspections.

However, some shred papers may remain in the basket or on the blades during machine testing. If this causes any discomfort or inconvenience, please contact our customer service and we will provide better service for you. Thank you!



IMPORTANT!

1. Please read and keep the manual for future reference.
2. Carefully read each step and follow the correct sequence of operation.
3. Please place the equipment on a flat and stable surface to prevent tipping over, as this may cause the machine to crack or become unusable.
4. The device should be placed as close as possible to an accessible wall outlet.
5. Do not disassemble, modify or repair the device on your own to avoid electric shock, injury or damage to the machine.
6. When you empty the basket, move the device, or do not need to use the device for a period of time, make sure the device is turned off and unplug the power plug to prevent fire or electric shock.
7. Do not use flammable liquids, gases, water or cleaners to clean the device to avoid fire or electric shock.
8. Do not use the device in a high temperature, high humidity, or heavily dusty environment to prevent fire, electric shock, or machine malfunction.
9. Do not put tape, carbon copy paper, fabric, plastic film, etc. into the device for shredding to avoid damage to the machine.
10. Do not damage or process the power cord, and do not place heavy objects on the cable to avoid fire, injury or electric shock.
11. If smoke or odor occurs during use, immediately turn off the power and stop using it to prevent fire or electric shock.
12. Do not use the shredder or power cord if it is damaged or defective to avoid fire or electric shock.
13. Do not shred greeting cards with sound chips or batteries to avoid fire or electric shock.

IMPORTANT SAFETY INTRODUCTIONS BEFORE FIRST USE



User information / safety instructions.



WARNING



Please do not allow children to use the machine.

* There are sharp blades inside the machine so as to avoid injury. Please be sure to exercise caution when using it.



Please do not put your hand close to the shredder blades and the paper feed opening.

* There are sharp blades inside the machine so as to avoid injury. Please be sure to exercise caution when using it.



Please do not let hair near the shredder's feed opening.

* If your hair is accidentally sucked in, please use the "reverse function" to remove the danger.



Please keep your clothing or some small items away from the feed opening of the paper shredder, such as ties, necklaces, sleeves, jewelry, etc.



Please don't use inflammable liquids, gases water and cleaner to clean the machine.



* To avoid fire accident.



Please kindly don't touch the sharp edges to avoid injury .



This equipment is not intended for use by children. Avoid touching the media feed opening with the hands, clothing or hair. Unplug this equipment when not in use for an extended period of time, Hazardous moving part is in this equipment, keep body parts away from moving parts.



It cannot be over 6 sheets in one time for the quantity of shredding.

One folded sheet of paper equates to 2 sheets of paper.

Heavier paper, humidity or other than rated voltage may reduce capacity.

 
85% Maximum sheets per pass to avoid jams.

KNOW YOUR SHREDDER



- ① Control panel (Control shredder's four status "REV", "OFF", "FWD", "AUTO")
- ② Reverse Position ("Release the paper")
- ③ Auto Position (Turn on)
- ④ Forward (compulsorily work)
- ⑤ OFF (Turn off)
- ⑥ Power light (work status in green)
- ⑦ Indicator light (Overheating in red)
- ⑧ Paper feed opening
- ⑨ Basket
- ⑩ Shredder's handle
- ⑪ Transparent Window

For safety reasons, shredder will operate only if the shredder head is in correct position and used with supplied basket.

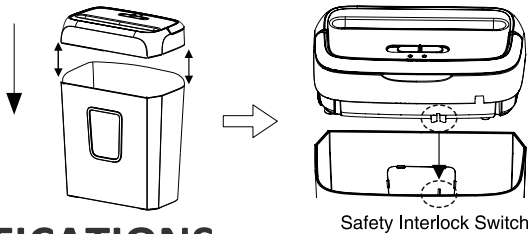

TECHNICAL SPECIFICATIONS

Voltage	220-240VAC, 50Hz		
Shred Capacity	6 sheets/time(A4 80g/m²) One sheet of credit card/time	Feed Opening (L*W)	220 x 4.0mm 8.66 x 0.16 Inches
Shred Type	Cross Cut	Shred Paper Size	13/64×45/64 Inches 5x 18mm
Basket Capacity	13L	Shreddable Medium	Paper,credit card, staple,clips
Product Size (L*W*H)	300×180×362mm 11.81*7.09*14.25Inches		

***ONE FOLDED SHEET OF PAPER EQUATES TO 2 SHEETS OF PAPER**
Heavier paper, humidity or other than rated voltage may reduce shredding capacity.



WARNING!

1. Bin Full:

The wastebasket will become full around 15~16 shredding passes (6 sheets per pass) of use. Empty the wastebasket when you see shredded materials fill the window to prevent paper jams.

Never let the wastebasket become full. This will lead to shredded materials being pulled back up into the shredder and cause jams.



Empty wastebasket when the window is filled

2. No Trash bag:

If using a plastic bag to line the wastebasket, please remove it. This may cause the shredder not to operate properly.



No Trash bag

Do not shred:



**Large paper clips
CDs/DVDs**



**Window envelopes, insulated
envelopes or unopened junk mails**



Adhesive materials



Newspaper



**Continuous
computer paper**



Cardboard

 


**Credit card made
by metal**



**Laminated document
and magazines**


OPERATING INSTRUCTIONS




1. Plug in and move “control panel” from OFF to AUTO position, “Power Light” in green. (feed papers , clips , staple or credit card to feed opening).




 
Continuous operation around 3 minutes.



 
2. When finished shredding or no need to use it, please set to OFF.



  Jam: Please move “control panel” from “Auto” to “REV” position and pull out the jammed paper.

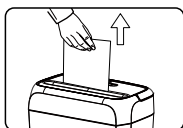

 * Move “control panel” from “REV” to FWD position for 3-5 seconds staying (repeat the operation around 2-3 times if get a very serious jam)




Overheat (power light is in green and indicator light in red, need to wait for cooling down). ⌚ **Cool down around 40 minutes**




Max.6 sheets: If it is over the capacities ,please take out the excess papers .

 
PRODUCT MAINTENANCE



 
Plug in and move “control panel” from OFF to AUTO position, “Power Light” shows green light. (Feed one shredder Lubricant pack to shred)



 Move “control panel” from Auto to “REV” position for 2-3 seconds staying and don’t pull out the shredder lubricant pack.



 
Move “control panel” from REV to AUTO position to shred the shredder lubricant pack for 3-5 seconds staying and repeat the operation for 2-3 times till the shredder lubricant pack is fully shredded.




When finished shredding or no need to use it , please set to OFF.



* Only use the professional shredder Lubricant pack to maintain the shredder such as Bonsaii shredder Lubricant 24-Pack (LS24)/12-Pack (LS12).(no cleaner, inflammable liquids, gases oil etc... )

TROUBLESHOOTING

Malfunction	Reason	Solution
The shredder does not work	The power plug doesn't connect to the power supply.	Make sure the unit is plugged in and that the outlet is in good working order.
	The shredder switch is not set to the "AUTO/ON" position.	Make sure the plug is inserted into the correct power outlet, and flip the switch to the "AUTO/ON" position, the power indicator lights up.
	Overheating with extended use.	In the event that the shredder has shred continuously beyond the maximum running time and overheated, the unit will automatically shut off. If this happens, switch the shredder off for 40 minutes or longer before resuming normal operation.
	Safety interlock switch not to operate properly. 	Make sure the shredder head is correctly seated onto the included wastebasket, with all the words and icons facing towards you. The head unit is particularly designed to work only with the integrated wastebasket. The shredder is equipped with a safety interlocking mechanism, which prevents the shredder from working when the head unit is lifted, removed, or accidentally knocked over. The shredder will not function until the head unit is properly assembled as pictured.
	Using plastic bag to line the wastebasket.	Please remove it. This may cause the shredder not to operate properly.
	The basket is full.	Empty the basket.
	The activation sensor of the shredder is located near the center of the feed slot.	Be sure to feed directly into the center area to activate the machine (especially applies to smaller pieces of paper or credit cards)
	Damage of power cable.	Please replace the power cable with the same parameters by professional person or contact with our customer service.
	Defective of machine.	Please kindly contact with our customer service.
Won't shred MAX sheets	Paper jam.	NEVER SHRED THE FOLLOWING ITEMS: Large paper clips (remove small clips whenever possible) Envelopes (especially windowed or glued flaps) Adhesive materials such as labels, stickers, or glued paper Newsprint, tissue, or any similar thin paper stock Transparencies, film, or laminated documents Continuous forms or paper rolls Cardboard / Corrugated board or fabric Plastic or hard items (except Credit Cards & CDs if applicable)

Malfunction	Reason	Solution
Won't shred MAX sheets	Paper jam.	<p>1) Lift up the shredder and check whether the outlet is blocked by paper. If there is a lot of paper attached to the outlet, please disconnect the power supply, manually remove the paper at the outlet, and then place the shredder on the basket correctly. Move "control panel" from "REV" to FWD position for 3-5 seconds staying (repeat the operation around 2-3 times if get a very serious jam)</p> <p>2) Switch the shredder to Reverse (REV) mode. While in Reverse, the shredder will back up and loosen the jammed paper. If required, you may need to tug and remove several sheets to effectively clear the machine. When jammed paper is loosened or removed, switch back to the Auto-On mode to continue shredding. Repeat steps if needed.</p> <p>3) With stubborn situations where the reverse function does not help, you may need to clean the jammed paper with shredder oil (cooking oil is acceptable, but don't use aerosol). Start by drizzling oil into the feed slot where the paper is jammed. Let it soak for about 30 minutes to completely saturate. Turn the shredder to Auto-On (or FWD) mode. If required, an index card or a rigid sheet of cardstock (old greeting card or folded file folder) can be fed into the shredder to help push the jammed paper through.</p> <p>4) With the shredder unplugged, you may use a set needle-nose pliers or tweezers to remove the blockage.</p>
The shredder is constantly running while in "Auto (On)" mode.	Paper dust and other foreign objects cover the mechanical sensor. The location of mechanical sensor is in the middle of shredder's feeding opening look like a small plastic divider.	It is possible that the activation sensor, which starts the shredder, is blocked with paper. Insert an index card or any rigid sheet of cardstock (old greeting card or folded file folder), directly in the center of the feed slot, while applying force to help push the jammed paper through. This will usually clear any paper blocking the activation sensor and feed slot.
The shredder runs in "Rev (Reverse)" mode but not in "Auto (On)" mode.	It is also possible that the feed slot has become blocked with paper.	Insert an index card or any rigid sheet of cardstock (old greeting card or folded file folder), directly in the center of the feed slot, while applying force to push the jammed paper through. This will usually clear any paper blockage.

Disposal:



Directive 2012/19/EC concerning the handling, collection, recycling and disposal of electrical and electronic equipment and their components ('waste electrical and electronic equipment', known as WEEE).

The crossed symbol on a rubbish container indicates that the machine or device is not allowed to be disposed of, but must be handed over to an appropriately equipped collection point for proper recycling or disposal.

Directive:



This machine corresponds to the requirements according to EU Directive 2014/30/EU entitled 'Electro-Magnetic Compatibility' 2014/35/EU entitled 'Low-Voltage Directive'.



The product corresponds to the requirements according to UK Directive regulation technical documentation as well as the UK declaration of conformity the required UKCA marking .



The packaging materials have been selected for their environmental friendliness and ease of disposal and are therefore recyclable. Dispose of packaging materials that are no longer needed in accordance with applicable local regulations.

LIMITED WARRANTY

Warranty Period: Machines are covered by a 2-year limited warranty and cutters are warranted for 2 years from the date of your original retail purchase from us. The warranty is not transferable to any subsequent purchaser or recipient of the product.

We stand by our product and offer a 30-day money-back guarantee. During this time, you could return the item without paying any extra fee if there is a manufacturing defect in it. Please rest assured that the returns are free and easy if there is a manufacturing defect. Otherwise, it would be the customer's responsibility to cover the shipping fee. Products on sale are also returnable.

If the product isn't meeting your expectations, please email within 30-days of receipt. We will help you to either return or exchange your product. Your original form of payment will be refunded in full once the full return is complete. After 30-days orders may be subject to a 20% restocking fee and all shipping and handling charges will be the responsibility of the customer. Additional return details are listed below. After 60-days the purchase from Bonsaii is non-refundable.

If you receive a damaged product, you must notify Bonsaii within 48 hours of delivery. Bonsaii will investigate the claim and notify the freight company about the damage. Please retain all packaging in the event that Bonsaii or the freight company needs to inspect it. These investigations may take several days but merchandise replacements will be processed as soon as possible.

For product arrived defective or damage, We're sorry to hear that your Bonsaii product arrived in less than perfect condition. We'd like to resolve this issue right away with the help of our Customer Support Team and Quality Assurance team. They'll need to know a bit of information on your order as well as the issue you're experiencing with your Bonsaii product. To report your issue, please reach out to our Customer Support team by emailing customer-care@bonsaii.com with your order number. We may need you to make a short video, or take some pictures of the defects of the product and send them to customer-care@bonsaii.com. After a preliminary analysis on the video or pictures, we will send you a brand new replacement right away if it is confirmed to be defective on its arrival. If we determine that you have misrepresented Bonsaii product's condition and that product is not defective, we will send you the right instructions and help you to use the product correctly.

In line with our policy of continuous development we reserve the right to change this product, packing and documentation specification without notice.

If you have any questions or any confusions, Please kindly contact with us:
customer-care@bonsaii.com.



Manufacture: Bonsen Electronics Limited

📍 : No.11-12, Lun Pin Chong Industrial Zone San Tun
Community, Hou Jie Town 523941 Dongguan City,
Guangdong PEOPLE'S REPUBLIC OF CHINA

✉ : customer-care@bonsaii.com

UK	REP
----	-----

TANMET INT'L BUSINESS LTD
9 Pantygraigwen Road, Pontypridd,
Mid Glamorgan, CF37 2RR, UK
tanmetbiz@outlook.com

Made in China