 
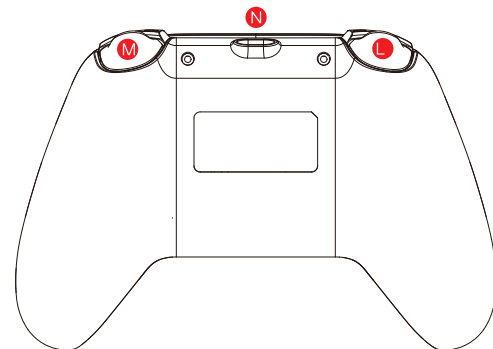 


## SPECIFICATIONS

|                             |                                            |
|-----------------------------|--------------------------------------------|
| <b>Model Number</b>         | : WGP13S                                   |
| <b>Number of Buttons</b>    | : 19                                       |
| <b>Connectivity</b>         | : StrikeSpeed Wireless, Wired              |
| <b>Thumbstick Type</b>      | : Hall-Effect                              |
| <b>Trigger Type</b>         | : Hall-Effect                              |
| <b>Face Button Type</b>     | : Membrane                                 |
| <b>Turbo</b>                | : Yes                                      |
| <b>Vibration</b>            | : 4-level Adjustable                       |
| <b>Programmable Buttons</b> | : 12                                       |
| <b> polling Rate</b>        | : 1000 Hz                                  |
| <b>Battery Capacity</b>     | : 600 mAh Li-ion                           |
| <b>Battery Life</b>         | : Up to 20 Hours                           |
| <b>Size</b>                 | : 156*104*60 mm                            |
| <b>Weight</b>               | : 187 ± 1 g                                |
| <b>Power Rating</b>         | : 3.7V≈180 mA                              |
| <b>Compatibility</b>        | : Windows 7 or later, Switch, Android, PS3 |

## PRODUCT TOUR

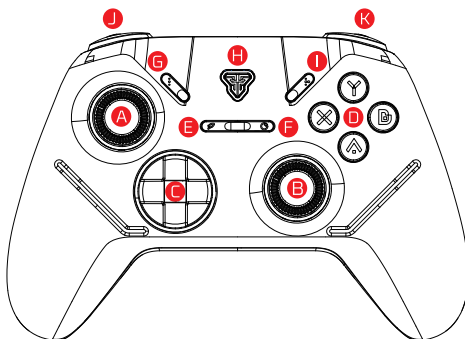

### EN

- |                           |                        |
|---------------------------|------------------------|
| <b>A</b> Left Thumbstick  | <b>J</b> Left Bumper   |
| <b>B</b> Right Thumbstick | <b>K</b> Right Bumper  |
| <b>C</b> Directional Pad  | <b>L</b> Left Trigger  |
| <b>D</b> Action Buttons   | <b>M</b> Right Trigger |
| <b>E</b> Turbo Button     | <b>N</b> USB C Port    |
| <b>F</b> Snap Button      |                        |
| <b>G</b> Select Button    |                        |
| <b>H</b> Home Button      |                        |
| <b>I</b> Start Button     |                        |

### ZH

- |               |                   |
|---------------|-------------------|
| <b>A</b> 左摇杆  | <b>J</b> LB 按钮    |
| <b>B</b> 右摇杆  | <b>K</b> RB 按钮    |
| <b>C</b> 方向键  | <b>L</b> LT 按钮    |
| <b>D</b> 操作按钮 | <b>M</b> RT 按钮    |
| <b>E</b> 连发按钮 | <b>N</b> USB C 接口 |
| <b>F</b> 分享按钮 |                   |
| <b>G</b> 选择按钮 |                   |
| <b>H</b> 主页按钮 |                   |
| <b>I</b> 开始按钮 |                   |

### JP

- |                    |                   |
|--------------------|-------------------|
| <b>A</b> 左ジョイスティック | <b>J</b> 左バンパー    |
| <b>B</b> 右ジョイスティック | <b>K</b> 右バンパー    |
| <b>C</b> 方向パッド     | <b>L</b> 左トリガー    |
| <b>D</b> アクションボタン  | <b>M</b> 右トリガー    |
| <b>E</b> ターボボタン    | <b>N</b> USB-Cポート |
| <b>F</b> 共有ボタン     |                   |
| <b>G</b> 選択ボタン     |                   |
| <b>H</b> ホームボタン    |                   |
| <b>I</b> スタートボタン   |                   |

### ID

- |                           |                       |
|---------------------------|-----------------------|
| <b>A</b> Thumbstick kiri  | <b>J</b> Bumper Kiri  |
| <b>B</b> Thumbstick Kanan | <b>K</b> Bumper Kanan |
| <b>C</b> Pad Pengarah     | <b>L</b> Pemicu Kiri  |
| <b>D</b> Tombol Aksi      | <b>M</b> Pemicu Kanan |
| <b>E</b> Tombol Turbo     | <b>N</b> USB C Port   |
| <b>F</b> Tombol Snap      |                       |
| <b>G</b> Tombol Select    |                       |
| <b>H</b> Tombol Beranda   |                       |
| <b>I</b> Tombol Start     |                       |

### ES

- |                             |                            |
|-----------------------------|----------------------------|
| <b>A</b> Palanca izquierdo  | <b>J</b> Gatillo Izquierdo |
| <b>B</b> Palanca derecho    | <b>K</b> Gatillo Derecho   |
| <b>C</b> Pad direccional    | <b>L</b> Gatillo LT        |
| <b>D</b> Botones de acción  | <b>M</b> Gatillo RT        |
| <b>E</b> Botón turbo        | <b>N</b> Puerto USB tipo C |
| <b>F</b> Botón de compartir |                            |
| <b>G</b> Botón de selección |                            |
| <b>H</b> Botón de Inicio    |                            |
| <b>I</b> Botón de Inicio    |                            |

### KR

- |                   |                   |
|-------------------|-------------------|
| <b>A</b> 왼쪽 조이스틱  | <b>J</b> 왼쪽 버튼    |
| <b>B</b> 오른쪽 조이스틱 | <b>K</b> 오른쪽 버튼   |
| <b>C</b> 방향 패드    | <b>L</b> 왼쪽 트리거   |
| <b>D</b> 액션 버튼    | <b>M</b> 오른쪽 트리거  |
| <b>E</b> 터보 버튼    | <b>N</b> USB C 포트 |
| <b>F</b> 공유 버튼    |                   |
| <b>G</b> 선택 버튼    |                   |
| <b>H</b> 홈 버튼     |                   |
| <b>I</b> 시작 버튼    |                   |

 
Join the Fantech  
Discord  
Community



FANTECHWORLDOFFICIAL  
SUPPORT@FANTECHWORLD.COM

FANTECH\_WORLD  
FANTECH WORLD

FANTECH WORLD  
FANTECHWORLDOFFICIAL

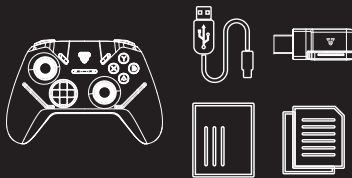

## ANY QUESTIONS?

Thanks for choosing Fantech.  
If you have any question or need any help with your products,  
please do not hesitate to contact us.

[support@fantechworld.com](mailto:support@fantechworld.com)

WGP13S  
**SHOOTER III**  
MULTI-PLATFORM GAMEPAD



## QUICK START GUIDE

PANDUAN CEPAT [ID]  
快速入门指南 [ZH]



## DOWNLOAD


To further customize your setting, please visit our website  
and download the software (if applicable).



[www.fantechworld.com](http://www.fantechworld.com)

## HOW TO CONNECT

### WIRED CONNECTION

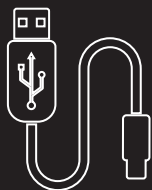

PC






PS3



NS

### 2.4GHZ CONNECTION

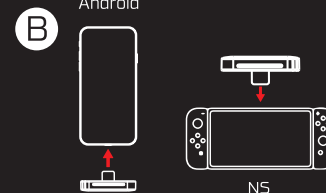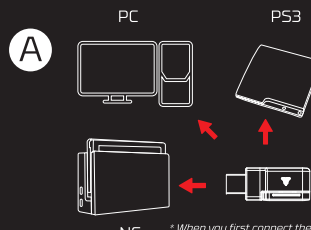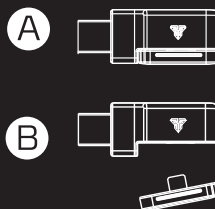

\* When you first connect the dongle, you'll need to pair it.  
Press the "Home" button for 5 seconds to initiate  
the pairing process.

### LED INDICATOR



**X-Input**

(PC, Android)



**D-Input**

(PC, Android, Emu)



**S-Input**

(Emu, PS3, NS)

\* On PC, to toggle from X-Input to D-Input, press the home button for 3 seconds.

\* On Android, LED will only show D-Input notification as small picture above.  
Switch from D-Input to X-Input by pressing the home & snap buttons  
simultaneously for 3 seconds.

### FACTORY RESET



1. Press and hold the select button and R3 simultaneously.
2. Hold them for 10 seconds until the gamepad vibrates and all the indicator lights illuminate to activate.

\* After successfully resetting the gamepad,  
it will enter a locked state requiring you to  
plug in a wire to unlock it.

### TURBO MODE



1. To use the turbo effect, hold the Turbo button & press the action button you want to assign.
2. To clear the turbo effect, hold the Turbo button & press the button that you've already assigned.

\* The turbo function can be applied to  
these buttons:  
Action buttons, LT, RT, RB, LB.

### MACRO MODE



1. Press & hold the turbo button until the gamepad vibrates to activate.
2. Begin recording your macro, allowing up to 63 button inputs within a 5-minute window.
3. Press the turbo button again to stop recording & to execute the macro, press the turbo button twice.
4. To clear the macro, press & hold the turbo button until the gamepad vibrates, then press again the turbo button.

\* The macro function can be applied to:  
these buttons:  
Action buttons, LT, RT, RB, LB,  
directional pad.