 
 
USB 4K Ai Video Bar



User Manual

What's in the box

 




USB 4K Ai Video Bar X 1

Camera Remote Control X 1









AC Adapter X 1


Quick Installation Guide X 1


Overview

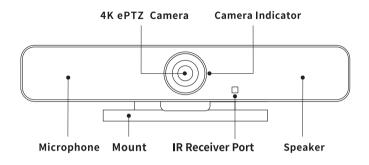

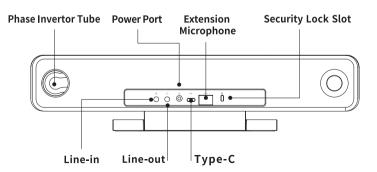

Type-C **Easy Set-Up** Connect the Video Bar to PC/conference host via USB cable, and connect the PC/conference host to TV via HDMI cable. **HDMI Port USB Port** TV HDMI Port

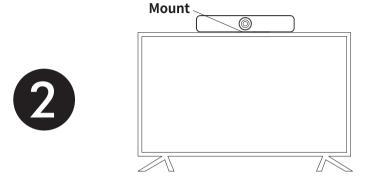

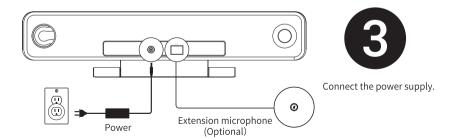



In computer/conference software settings, choose the source of camera, microphone and speaker from the usb video bar.

Camera indicator light status

The camera indicator light will turn blue when camera program is opened or under running; It will turn red when microphone is muted. For other normal conditions, the light will be green.

Camera preset settings

Adjust the camera view to the position you want to preset, then long press 1 (or 2, 3) button for 2 seconds. After a hint tone, camera preset 1 is set successfully. Repeat the above steps, press 1, 2, 3 keys respectively, you can set 3 preset positions in total. Repeating the same key will overwrite the previous preset and update it to the latest preset.

Camera Remote Control

