

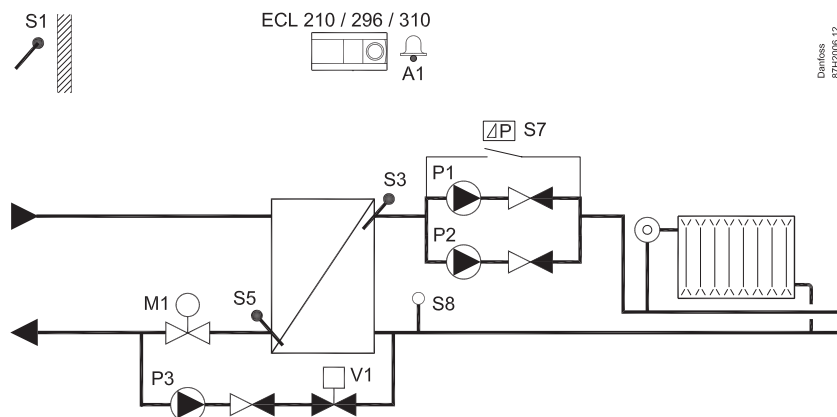
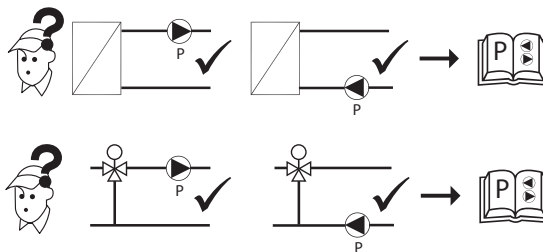
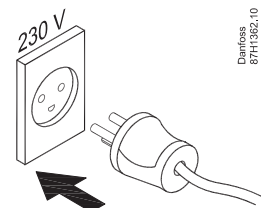
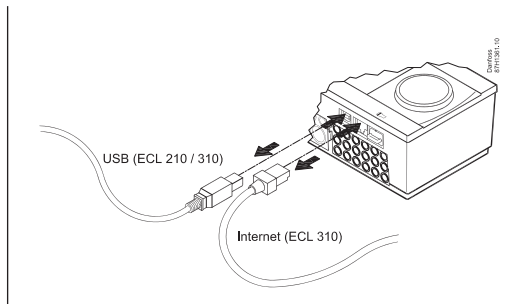



ECL Comfort 210 / 296 / 310, A231 / A331
(code no. 087H3805)

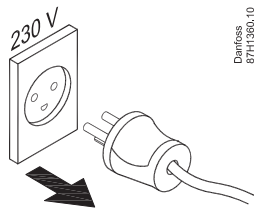


A231.2:

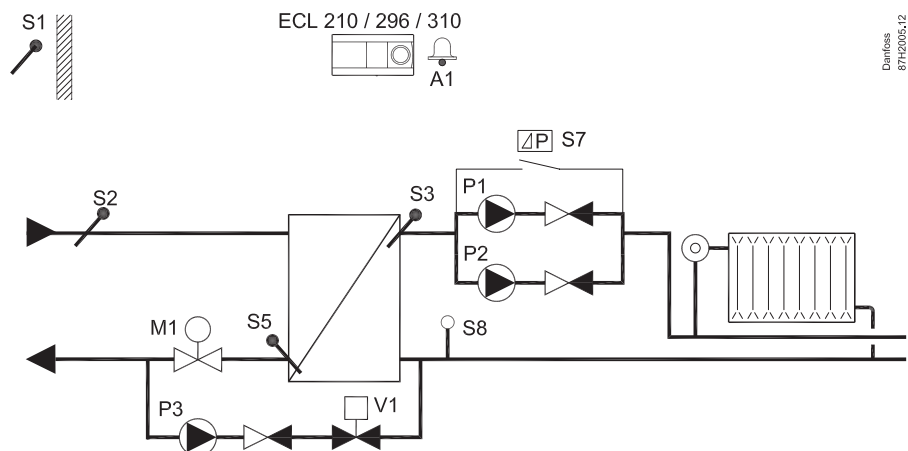

A331.1:

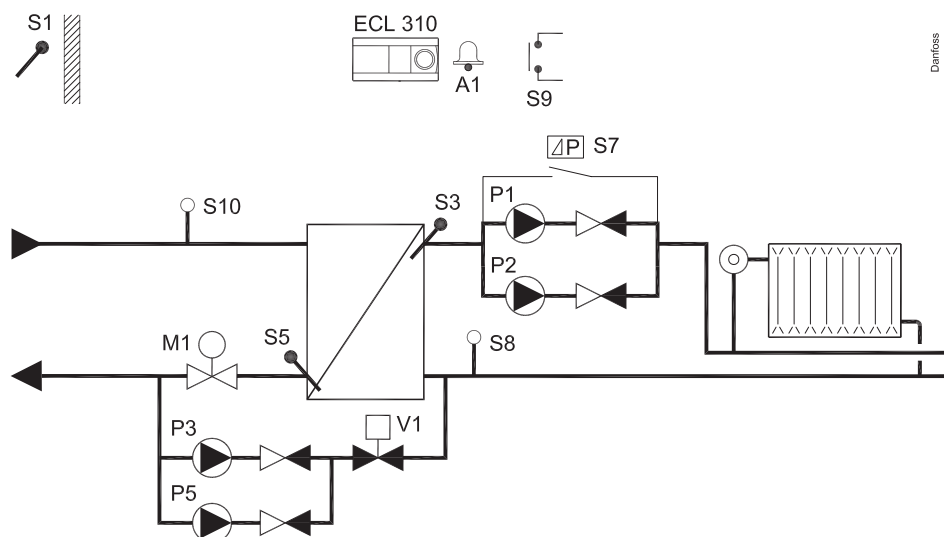


A331.2:

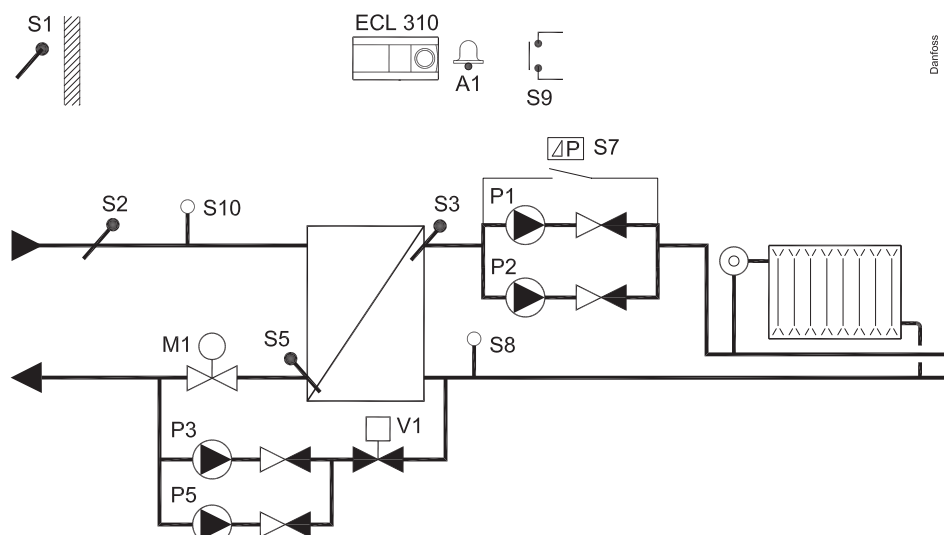


ECL Comfort 210 / 296 / 310:

230 V a.c.


R		4 (2) A / 230 V a.c.
R		
Tr		0,2 A / 230 V a.c.

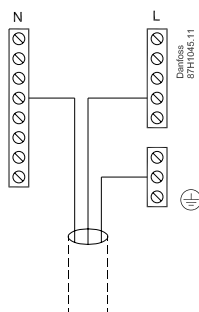

230 V a.c., A231.1 / A231.2

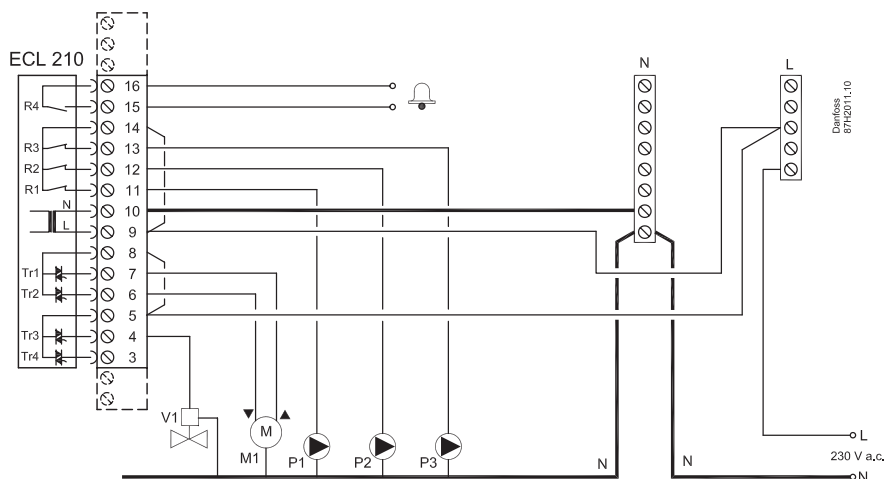

230 V a.c., A331.1 / A331.2

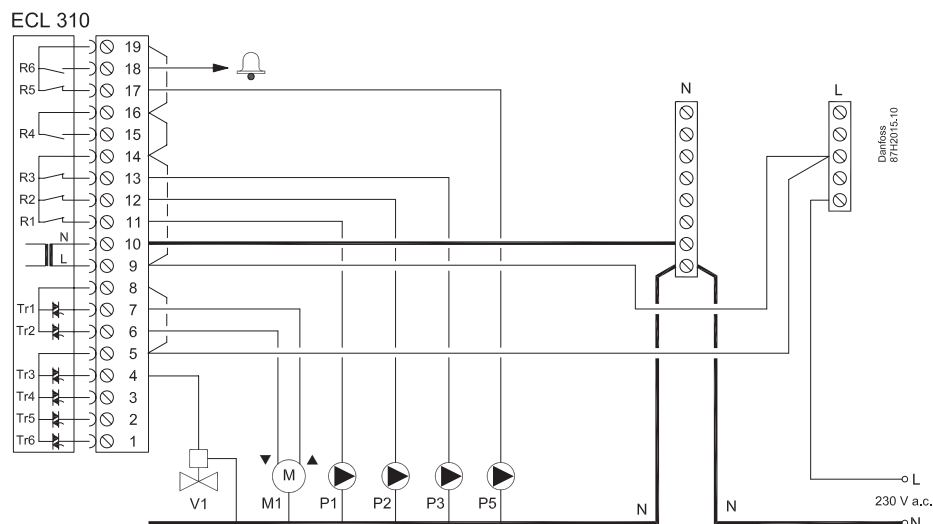


ECL Comfort 210 / 296 / 310:

24 V a.c.

R		4 (2) A / 24 V a.c.
R		
Tr		1 A / 24 V a.c.


24 V a.c., A231.1 / A231.2

ECL 210/24 V a.c.

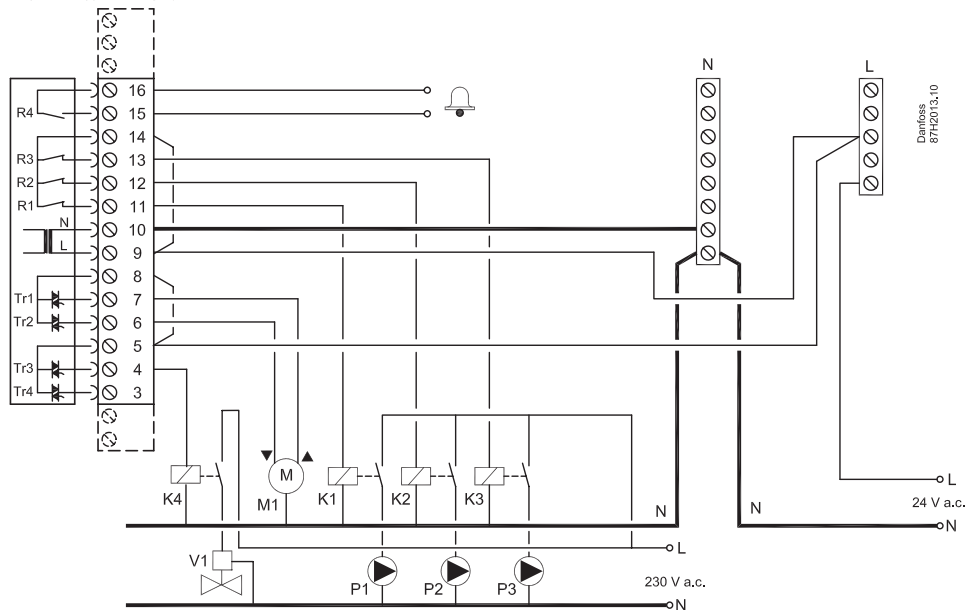


24 V a.c., A331.1 / A331.2

ECL 310/24 V a.c.

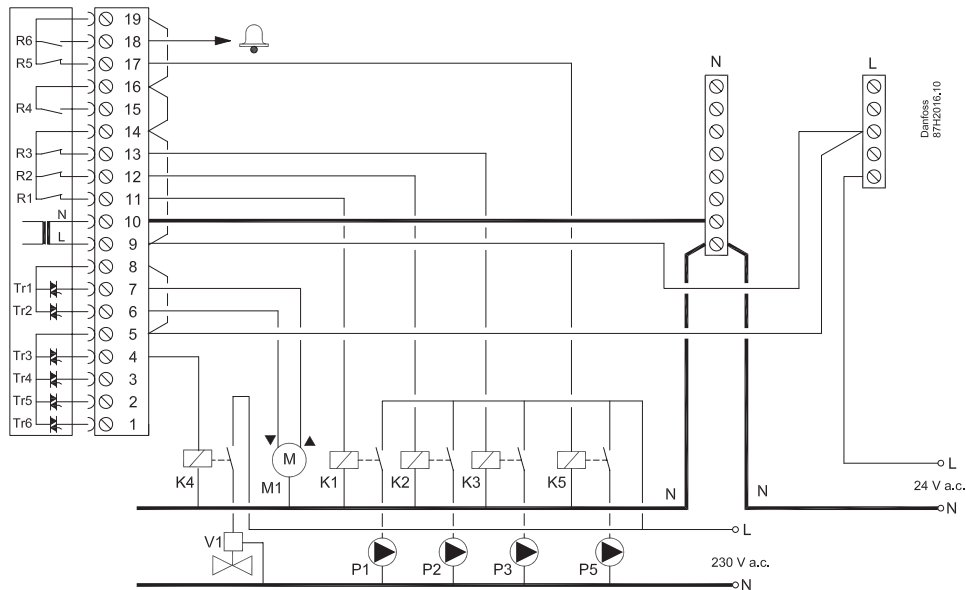


Installation Guide, ECL Comfort 210 / 296 / 310, A231 / A331

 **Pt 1000** (1000 Ω / 0 °C)

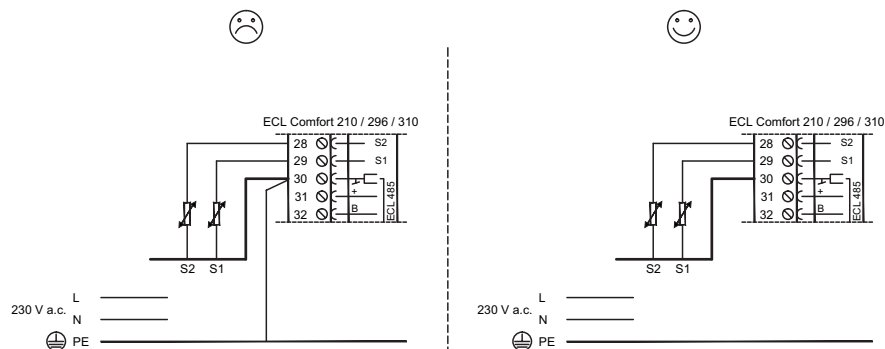


Danfoss
87H1487/11

24 V a.c. / 230 V a.c. safety thermostat

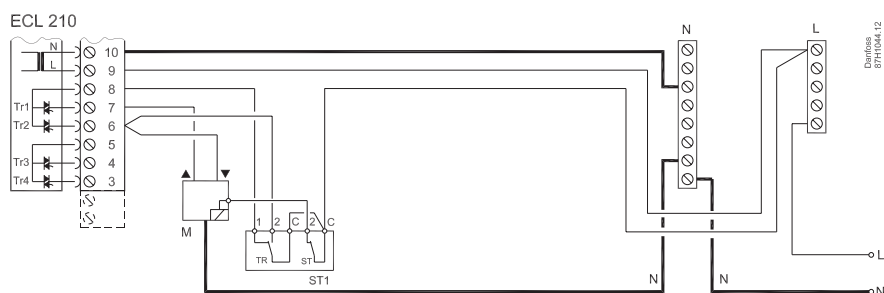


Danfoss
87H1044.12

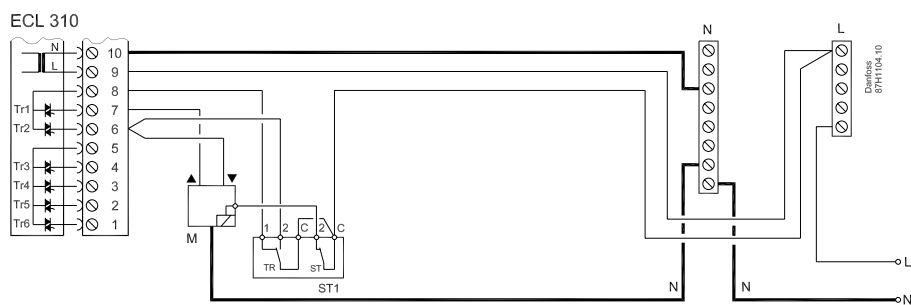

Danfoss
87H1104.10

 **Pt 1000** (1000 Ω / 0 °C)


A231.1 (+ S2) / A231.2

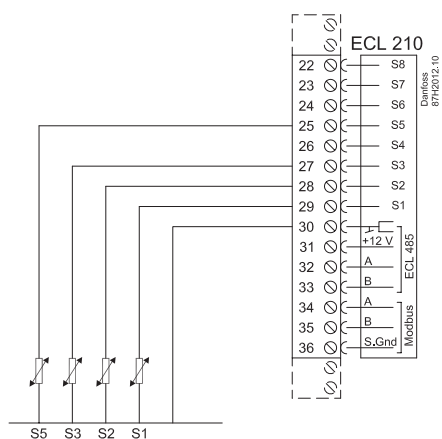


Danfoss
87H1212.10

Installation Guide, ECL Comfort 210 / 296 / 310, A231 / A331


Pt 1000 (1000 Ω / 0 °C)
A331.1 ($\div$ S2) / A331.2

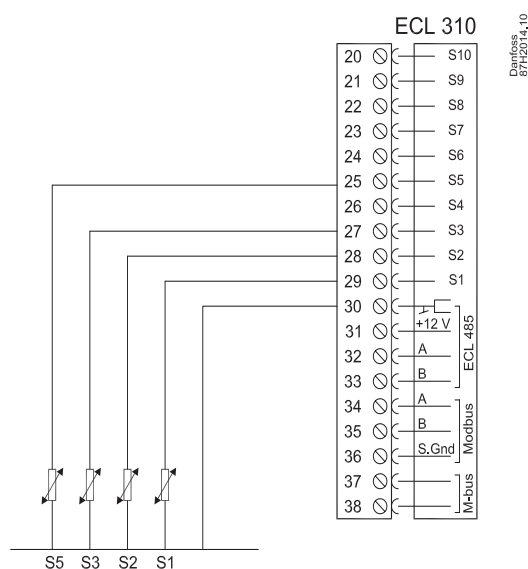


A231.1 / A231.2

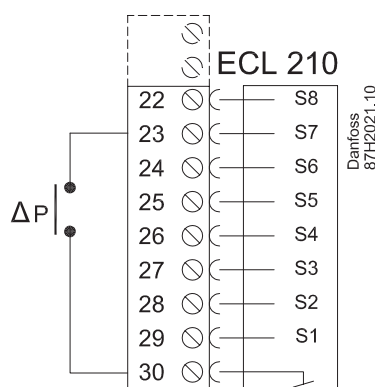


A331.1 / A331.2

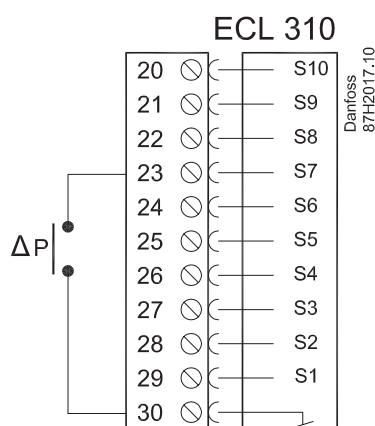


A231.1 / A231.2

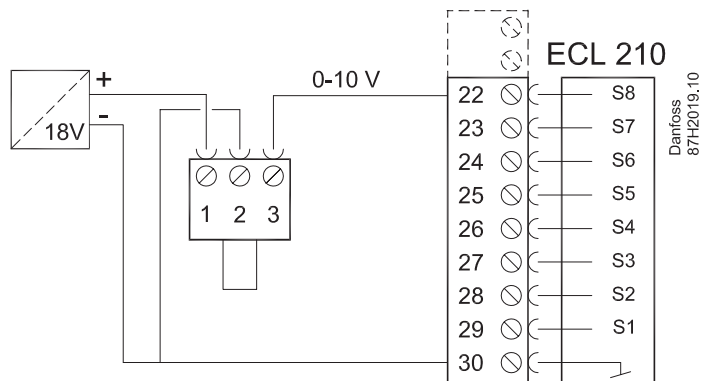


A331.1 / A331.2

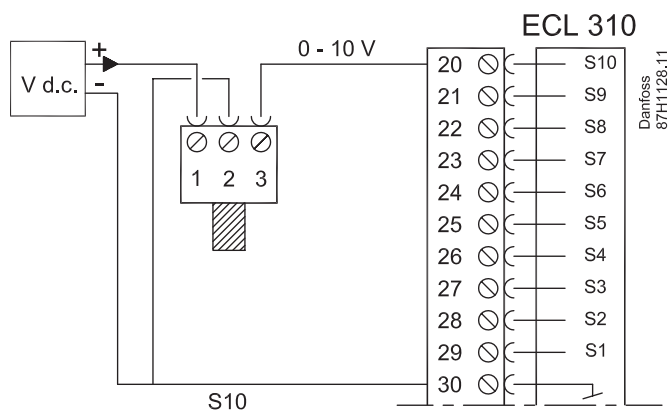


A231.1 / A231.2

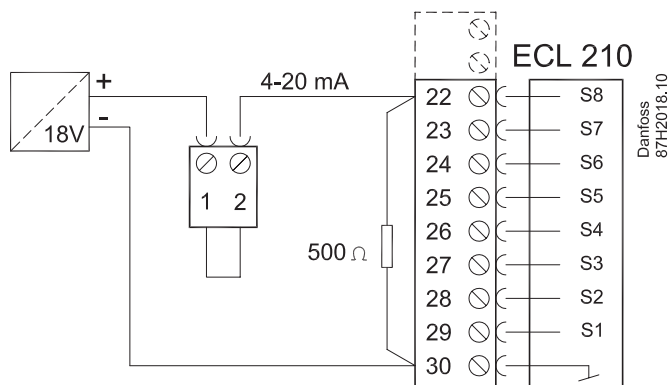


A331.1 / A331.2

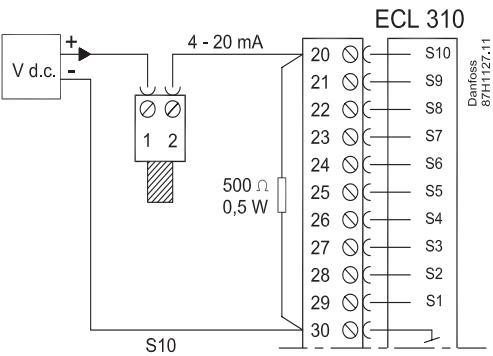


A231.1 / A231.2

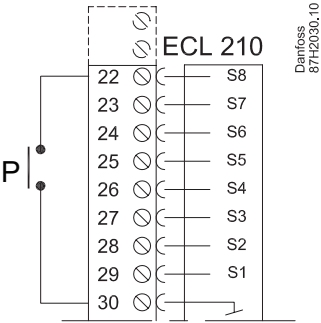



A331.1 / A331.2

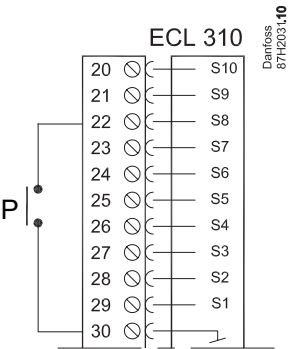


A331.1 / A331.2

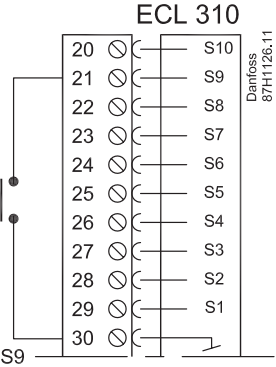


ECA 30 / 31

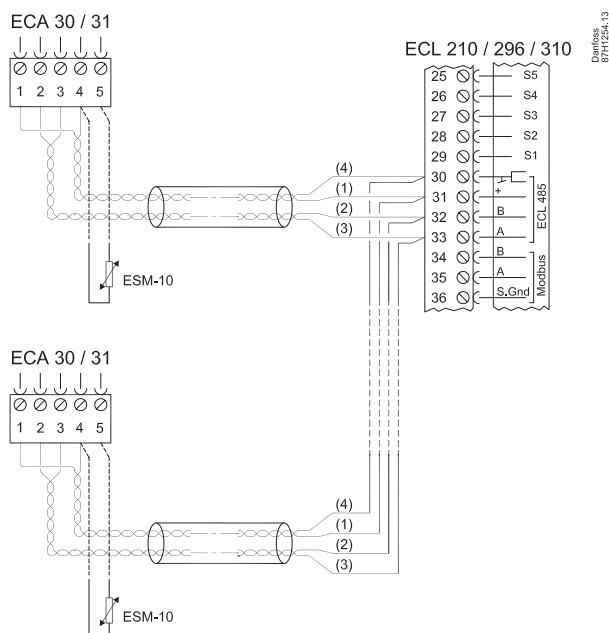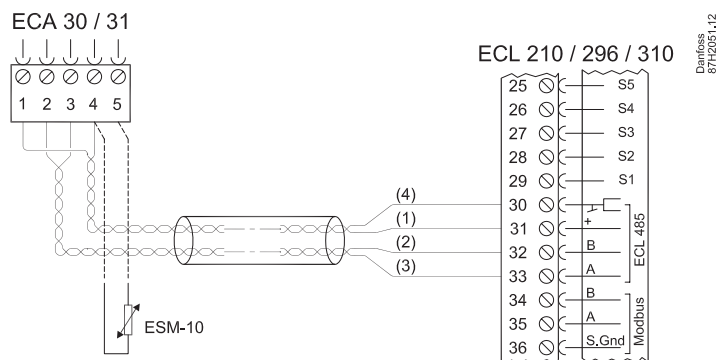


Master / slave

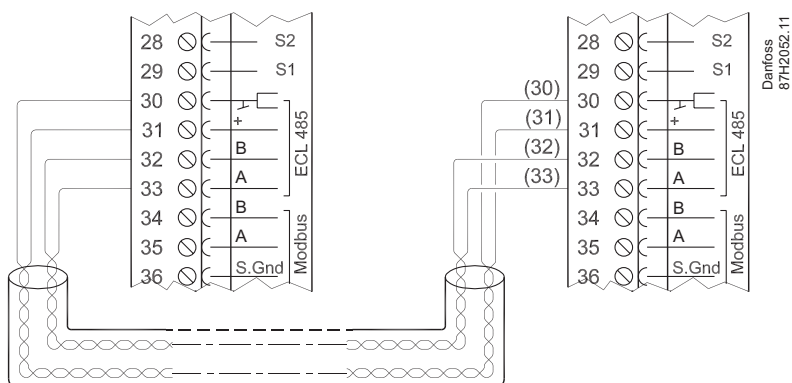


Modbus

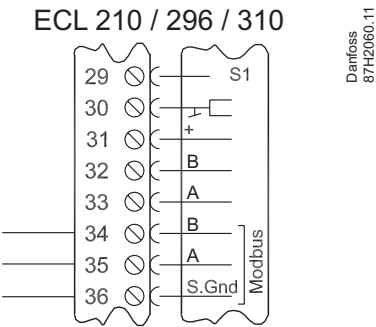



M-bus

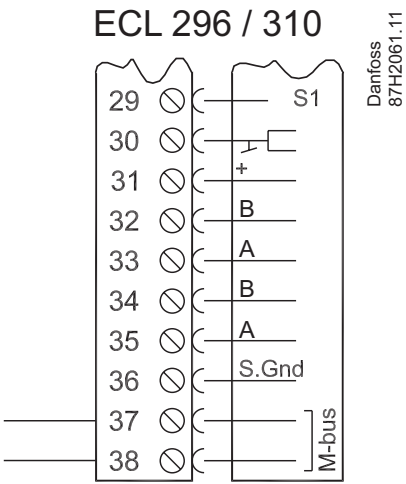

M-bus

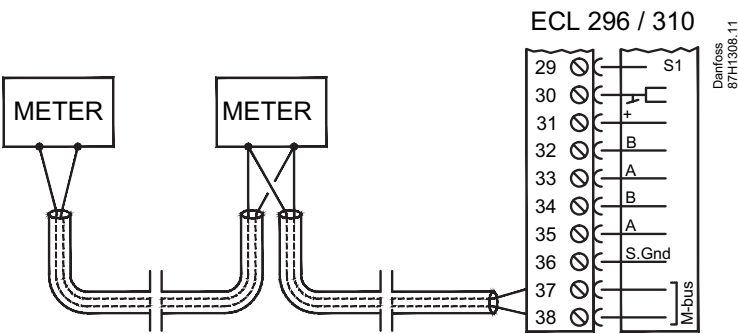


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

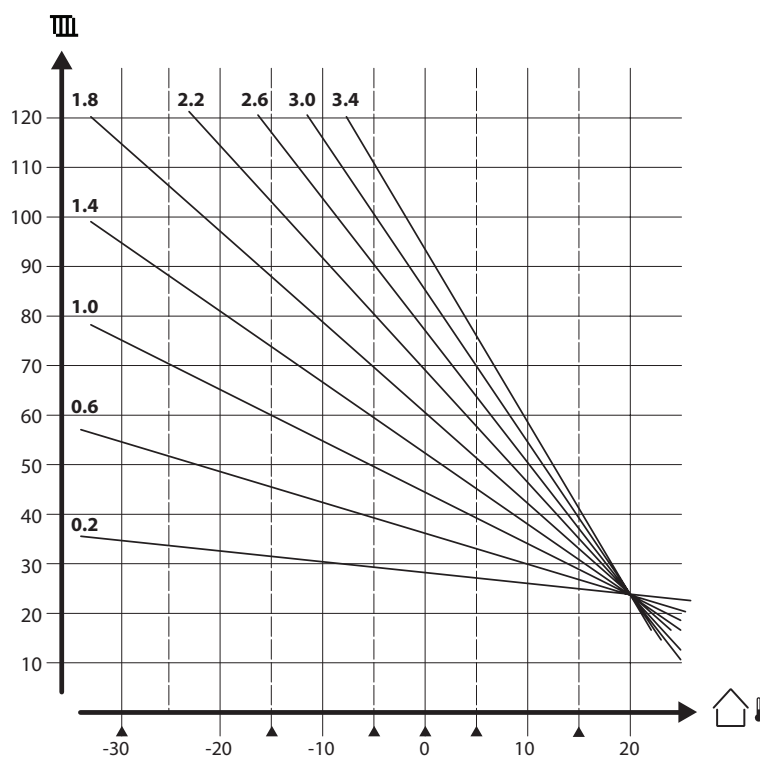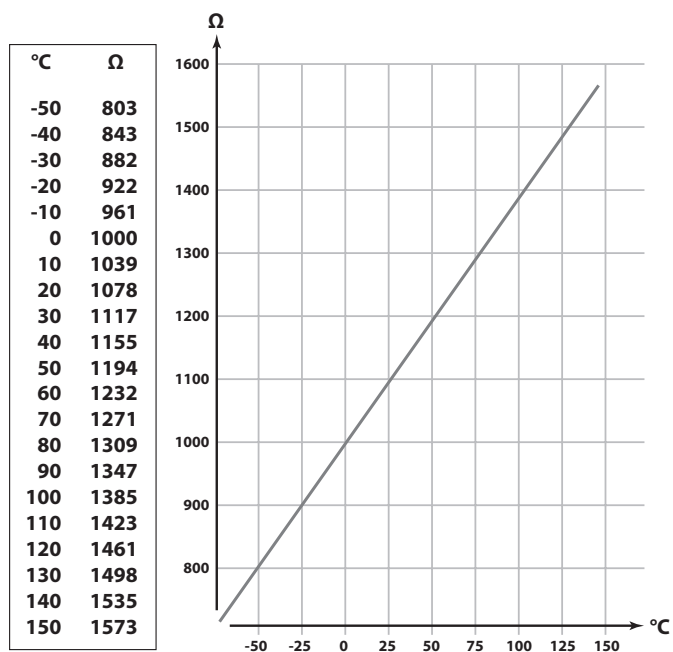


ECA 30


1

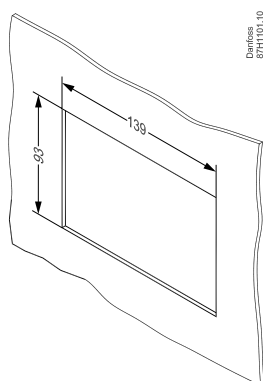


2

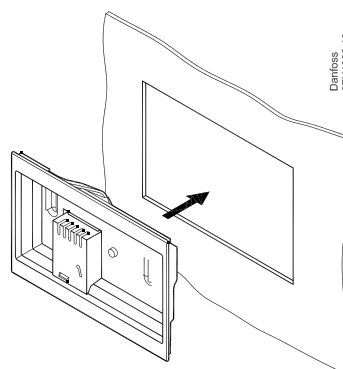


3

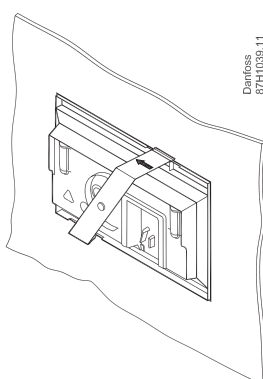


4

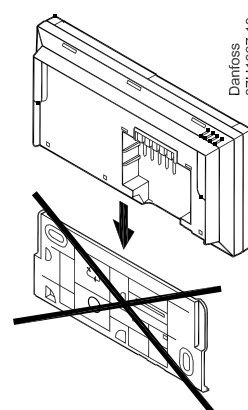


5

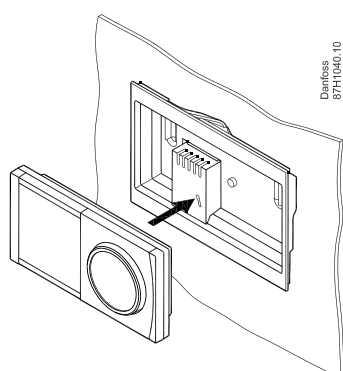


6

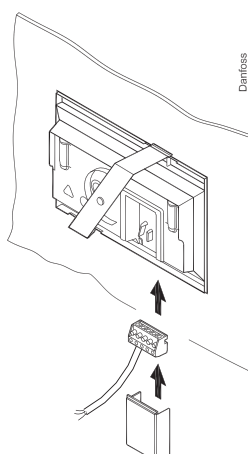





7

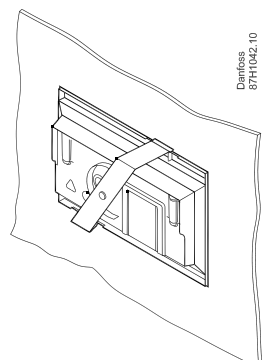

8

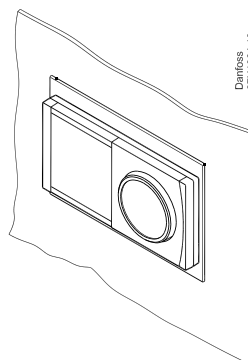

Installation Guide, ECL Comfort 210 / 296 / 310, A231 / A331

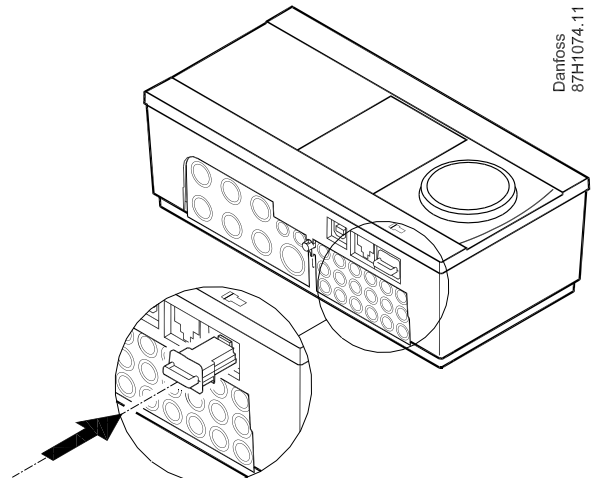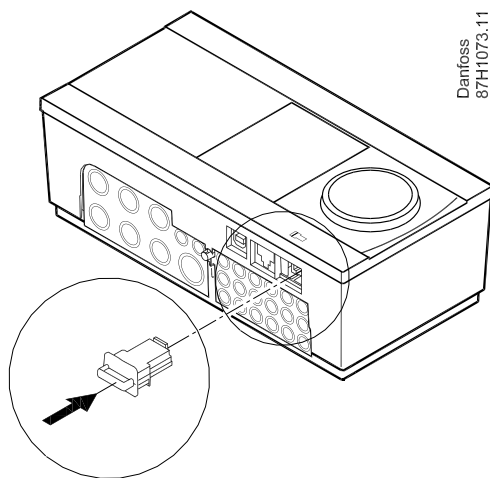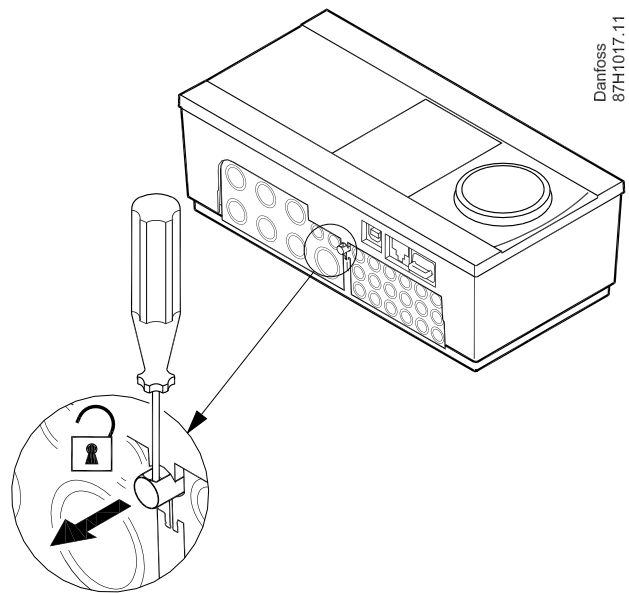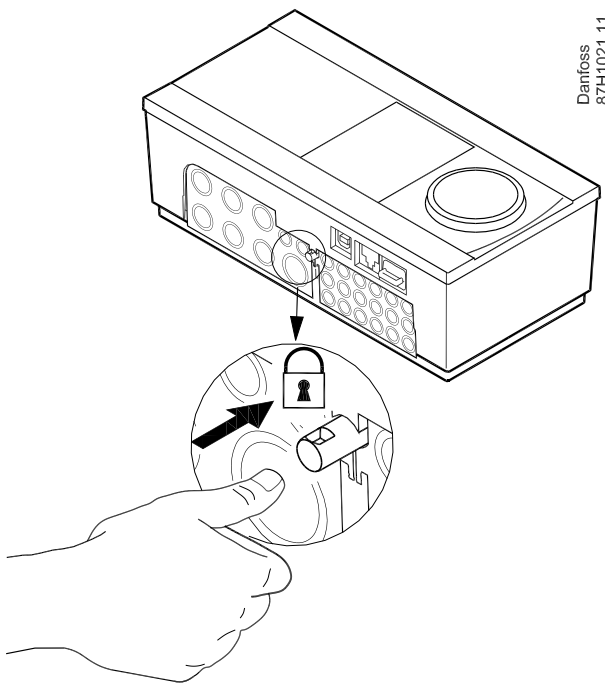

? **ECL Comfort 210 / 296 / 310, A231 / A331: www.heating.danfoss.com**

? **<https://www.youtube.com/user/DanfossHeating>
-> Playlists -> How-to Videos -> District Energy installation videos**



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.