

Size: 102 x 150 mm
Printing color: Black (1C + 1C)
Material: 85 gsm wood Free paper

Mar.19, 2024

iHome

Model: iW14

Time System Settings:

1. Press the button M twice to adjust 12 hour and 24 hour system; the icon PM will display in the specified time period.
2. Long press the M button to set the clock hour, and press the button +/- to adjust the hour.
3. After adjusting the hour, hold and press the button M to enter Clock Minute setting, and press the button +/- to adjust the minute.
4. Once the settings are complete, press the button M again to exit.

Alarm Settings:

1. Hold down the button +/- to turn on/off the alarm clock, the indicator will light up after the alarm clock is turned on;
2. After turning on the alarm clock, hold down the button M to enter the alarm hour setting, and hold down the button +/- to adjust the hour once, press the button +/- to continuously adjust.
3. After setting Minutes, press M once to enter the alarm minute setting, and press +/- to adjust the minute value once. Hold down the button +/- to continuously adjust.
4. Minutes After the setting is complete, press M to end the setting,
5. After the alarm bell rings, no action is taken and the alarm automatically stops ringing 3 minutes later.
6. After the alarm bell rings, press any button to enter the snooze state. 5 minutes later, the alarm clock indicator is blinking when the alarm clock rings again. Long press the button snooze to turn off the alarm on the same day, which is still valid the next day, and long press button +/- to turn off the permanent alarm.

Display Brightness Settings

Adjust the brightness of the clock in three levels: "+" and "-" manually adjust the brightness of the digital display. After plugging in, the brightness of the digital display is the brightest by default. Every click of the button "-" reduces the brightness of one step, and every click of the button "+" increases the brightness of one step. Turn off the clock display lights one last time.

Installing the Batteries

1. Press in and pull the battery door to open and remove the battery door.
2. Install 2 new "AAA" batteries to maintain settings in case of power failure, matching the (+/-) markings in the battery compartment.
3. Replace the door.

MAGNETIC WIRELESS CHARGING

 

Magnetic Charging Works With: iPhone 12 and 13 series and newer MagSafe devices and cases / AirPods with MagSafe case / plastic cases up to 2mm thick
Wireless Charging Works With: iPhone XS and iPhone 11 series / Samsung Galaxy S7 and newer wireless charging phones / Also works with wireless charging case for AirPods and other wireless charging devices
Place device face up on the charging rest. LED Status Indicators will show charging status:

Rapid blinking LED: Device is not charging (reposition device)
Slow blinking LED: Device is charging
Solid LED: Device is fully charged

WARNING: Remove phone's metal protective case before charging. Do not place magnetic or metal objects on charger during charging. Qi compatible phones with metallic looking finishes will charge normally.

For questions and additional information, please visit:
support.ihomeaudio.com/support/

**WIRELESS POWERBOOST
WIRELESS CHARGING CLOCK**

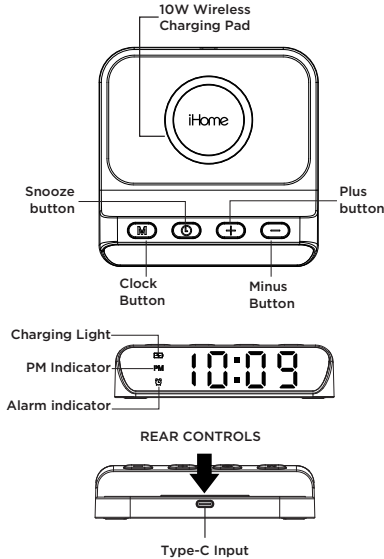

FOR THE BEST POSSIBLE PERFORMANCE

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.
- Rechargeable batteries are to be removed from the product before being charged;
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire; batteries may leak or explode.
- CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.

1. Do not use this product near water.
2. Unplug unit and clean only with damp cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
3. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
4. Heat - This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
5. Only use attachments/accessories specified by the manufacturer.
6. Unplug this product during lightning storms or when unused for long periods of time.
7. Damage Requiring Service - This product should be serviced by qualified service personnel when:
 - Plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
8. No naked flame sources, such as lighted candles, should be placed on this product.
9. Attention should be drawn to the environmental aspects of battery disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com
10. This product is suitable for use in tropical and/or moderate climates.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.
- The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

FCC Information

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm (8 inches) between the radiator & your body.

ISED Information

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- The device complies with ISRE RF exposure requirement, users can obtain Canadian information on RF exposure and compliance.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cet équipement est aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage.
 - (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- L'appareil est conforme aux exigences d'exposition RF ISED, les utilisateurs peuvent obtenir des informations canadiennes sur l'exploitation aux RF et la conformité.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement.

CAN ICES-3 (B) / NMB-3(B), CAN RSS-216 / CNR-216



© 2024 SDI Technologies, Inc.
All rights reserved

iW14B-031924-A

Printed in China