



Switching states

Heating zone 2				Heating zone 1			
Switch position	K4	K5	K6	Switch position	K4	K5	K6
0				0			
AUT	Closed-loop pump	Control mode colder	Control mode hotter	AUT	Closed-loop pump	Control mode colder	Control mode hotter

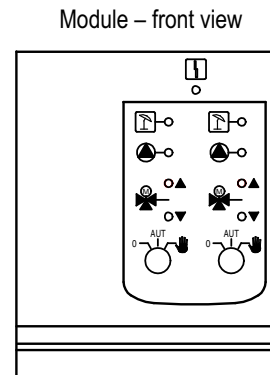

Internal BUS in control panel

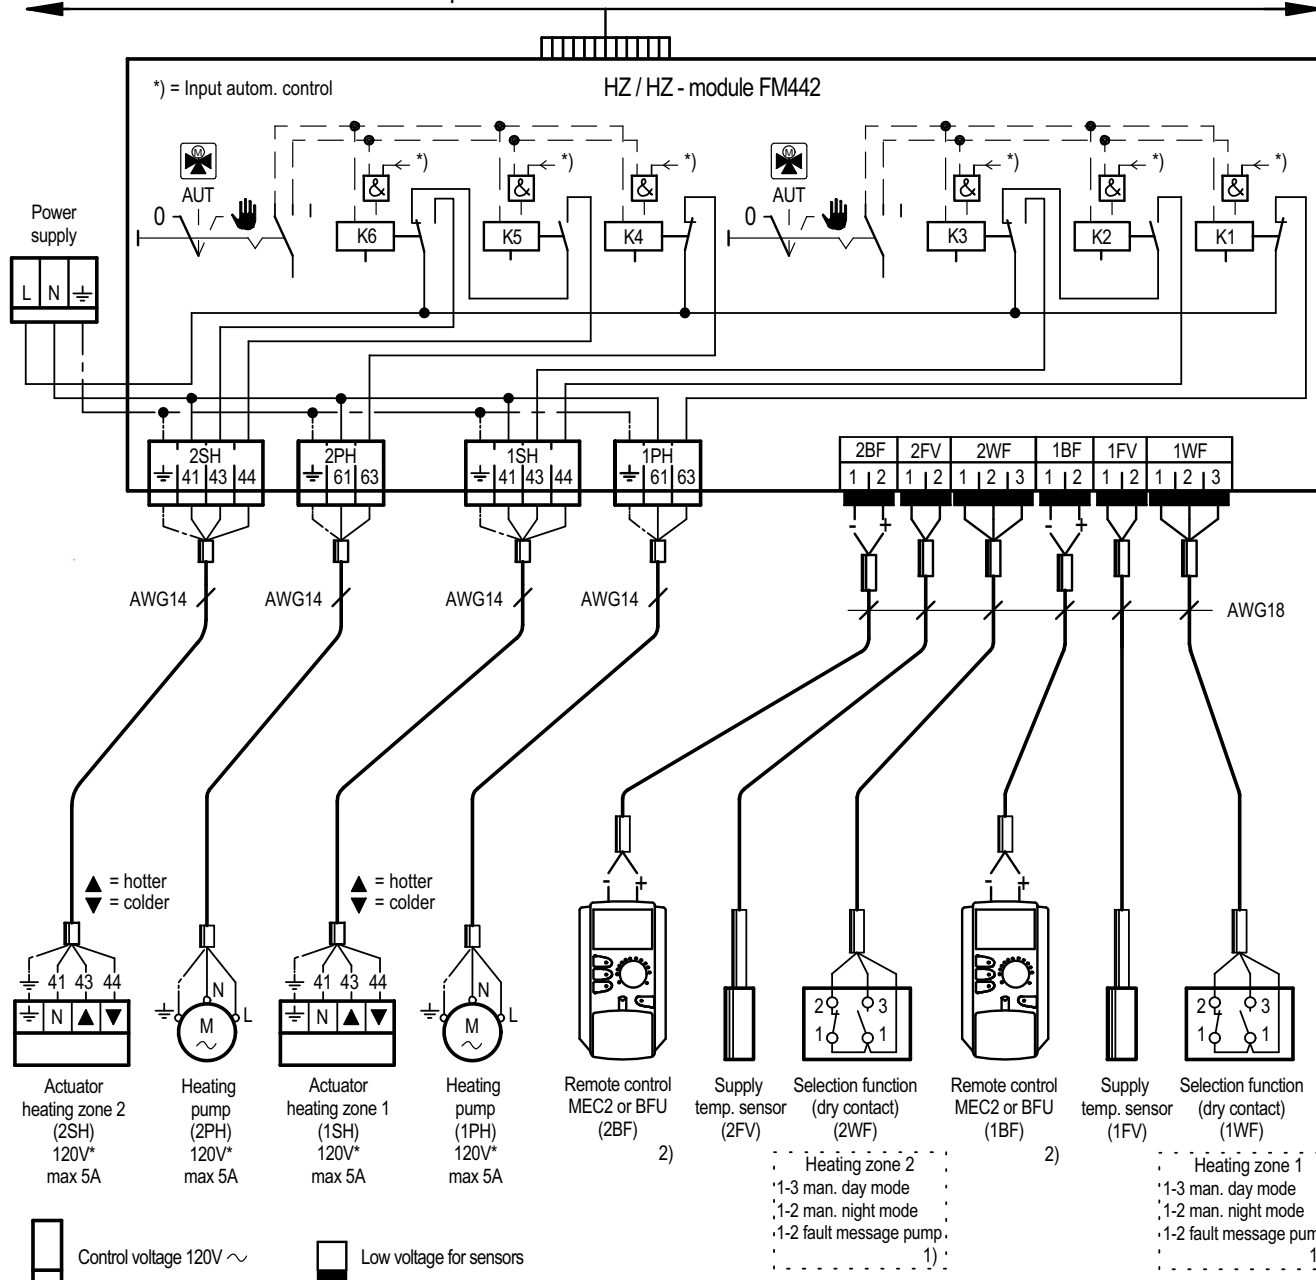

- 1) Function only possible if no BFU is connected or no MEC2 is assigned.
 - 2) **Please note!** Only one MEC2 can be allocated to each control. The MEC2 can be plugged into the control module or, using the wall installation kit (optional), wired to the ZM or FM module.
- *) Total current for the modul can not exceed 10A.

Installation examples (see back)

Legend:

HZ heating zone
THV thermostatic radiator valve

