



READYWARM 9750 ROTATE FORCE

Termoventilador vertical/Upright fan heater



ES · Este producto no es adecuado para calefacción primaria. Este producto está indicado únicamente en lugares abrigados o para una utilización puntual. **EN** · This product is not suitable for primary heating purposes. This product is only suitable for well insulated spaces or occasional use. **FR** · Ce produit ne convient pas pour une utilisation en tant que chauffage primaire. Cet appareil a été conçu seulement pour être utilisé dans des espaces intérieurs ou pour une utilisation momentanée. **DE** · Dieses Produkt ist nicht für als Hauptheizgerät geeignet. Dieses Produkt ist nur für geschützten Orten oder zur gelegentlichen Verwendung geeignet. **IT** · Questo prodotto non è adatto a riscaldamento primario. Questo prodotto è indicato solamente per luoghi caldi o per uso sporadico. **PT** · Este produto não é adequado para aquecimento primário. Este produto só é indicado para espaços fechados ou para uso ocasional. **NL** · Dit product is niet geschikt voor primaire verwarming. Dit product is alleen geschikt voor gebruik op beschutte plaatsen of voor incidenteel gebruik. **PL** · Ten produkt nie nadaje się do pierwotnego ogrzewania. Ten produkt jest wskazany tylko do miejsc osłoniętych lub do okazjonalnego użytku. **CZ** · Tento produkt není vhodný pro primární vytápění. Tento výrobek je určen pouze na topení na chráněných místech nebo pro příležitostné použití.

Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

Instrucciones de seguridad	4
Safety instructions	6
Instructions de sécurité	8
Sicherheitshinweise	10
Istruzioni di sicurezza	12
Instruções de segurança	14
Veiligheidsvoorschriften	16
Instrukcje bezpieczeństwa	18
Bezpečnostní pokyny	20

ÍNDICE

1. Piezas y componentes	22
2. Antes de usar	22
3. Funcionamiento	22
4. Limpieza y mantenimiento	22
5. Especificaciones técnicas	23
6. Reciclaje de electrodomésticos	23
7. Garantía y SAT	23

INDEX

1. Parts and components	25
2. Before use	25
3. Operation	25
4. Cleaning and maintenance	25
5. Technical specifications	26
6. Disposal of old electrical appliances	26
7. Technical support and warranty	26

SOMMAIRE

1. Pièces et composants	28
2. Avant utilisation	28
3. Fonctionnement	28
4. Nettoyage et entretien	28
5. Spécifications techniques	29
6. Recyclage des électroménagers	29
7. Garantie et SAV	29

INHALT

1. Teile und Komponenten	31
2. Vor dem Gebrauch	31
3. Bedienung	31
4. Reinigung und Wartung	31
5. Technische Spezifikationen	32
6. Entsorgung von alten Elektrogeräten	32
7. Garantie und Kundendienst	32

INDICE

1. Parti e componenti	34
2. Prima dell'uso	34
3. Funzionamento	34
4. Pulizia e manutenzione	34
5. Specifiche tecniche	35
6. Riciclaggio di elettrodomestici	35
7. Garanzia e SAT	35

ÍNDICE

1. Peças e componentes	37
2. Antes de usar	37
3. Funcionamento	37
4. Limpeza e manutenção	37
5. Especificações técnicas	38
6. Reciclagem de eletrodomésticos	38
7. Garantia e SAT	38

INHOUD

1. Onderdelen en componenten	40
2. Voor u het toestel gebruikt	40
3. Werking	40
4. Schoonmaak en onderhoud	40
5. Technische specificaties	41
6. Recyclage van huishoudtoestellen	41
7. Garantie en technische ondersteuning	41

SPIS TREŚCI

1. Części i komponenty	43
2. Przed użyciem	43
3. Funkcjonowanie	43
4. Czyszczenie i konserwacja	43
5. Specyfikacja techniczna	44
6. Recykling sprzętu AGD	44
7. Gwarancja i SAT	44

OBSAH

1. Části a složení	46
2. Před použitím	46
3. Fungování	46
4. Čištění a údržba	46
5. Technické specifikace	47
6. Recyklace elektrospotřebičů	47
7. Záruka a technický servis	47

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
- Always turn off and unplug the appliance when not in use and before moving it. Pull from the plug, not the cord, to disconnect it from the outlet.
- Avoid using extension cords, as they could overheat and cause risk of fire.
- Do not cover the air inlet or outlet during operation.
- Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
- The appliance must not be placed immediately below a socket.
- This product is designed only for household use. Do not use for industrial or commercial purposes.
- Do not place the appliance close to heat sources, flammable substances, wet surfaces or allow it to come into contact with water or other liquids. Do not operate outdoors.
- Do not introduce or allow objects to be introduced in the air inlet or outlet, this could cause risk of electrical shock, fire or damage.



- The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
- This product can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

1. PARTS AND COMPONENTS

Fig. 1

1. Temperature knob
2. Power level knob
3. Power light indicator
4. Oscillation switch

2. BEFORE USE

- Take the product out of the box and remove all packaging materials.
- Check for any visible damage. If any is observed, contact as soon as possible the Technical Support Service of Cecotec for advice or reparation.
- Always place the device on a flat and stable surface.

3. OPERATION

- Turn the temperature knob clockwise to increase temperature, and anticlockwise to decrease it.
- Power level knob:

Symbol	Function
Fig. 2	Off
Fig. 3	Fan
Fig. 4	Low heating power
Fig. 5	High heating power

Oscillation switch: Press the switch for the appliance to oscillate from one side to another and to spread heat.

4. CLEANING AND MAINTENANCE

- Turn off and unplug the appliance and allow it to cool down before cleaning it.
- Do not use abrasive cleaners or scouring pads to clean the product.
- Use a soft, dampened cloth to clean the product's outer housing. Be careful not to touch the heating element.

ENGLISH

- If the product is not going to be used for a long period of time, unplug it and store it in a dry and safe place where it is protected from dust.
- Do not disconnect the appliance from the plug, turn it off with the button to avoid it from overheating.

5. TECHNICAL SPECIFICATIONS

Model: Ready Warm 9750 Rotate Force

Product reference: 05305

2 power levels: 1200-2400 W 220-240 V, 50/60 Hz

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

7. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

- The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

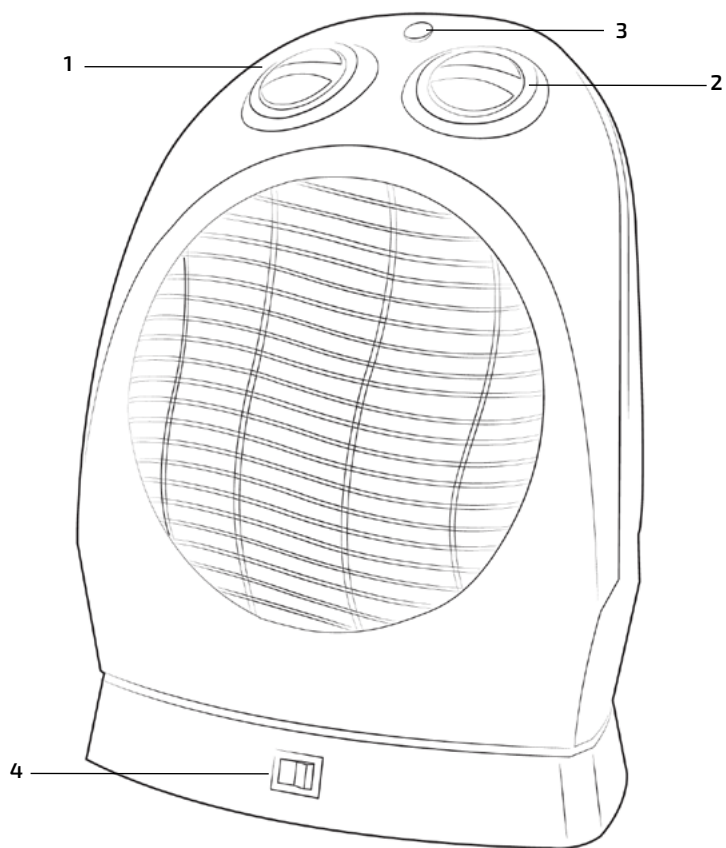


Fig./Img./Abb./Afb./ Rys./Obr. 1

0

Fig./Img./Abb./Afb./ Rys. 2

≈

Fig./Img./Abb./Afb./ Rys. 3

IⓈ

Fig./Img./Abb./Afb./ Rys. 4

II

Fig./Img./Abb./Afb./ Rys. 5

www.cecotec.es

Cecotec Innovaciones S.L.
C/ de la Pinadeta s/n, 46930
Quart de Poblet, Valencia (Spain)

IC02210413