



Model No.
Lithium 40v Battery Charging Base (LFV-CB)

STRIKEMASTER® LITHIUM 40v BATTERY CHARGING BASE **QUICK START**



1. Remove Lithium 40v Battery Charging Base from carton (Image 1). Plug in.
2. Unpack Battery, slide Battery onto Battery Charging Base using the channels on both sides as a guide. Press down until you hear it click in place. Leave Battery on Battery Charging Base until fully charged.
NOTE: Battery is not fully charged when first removed from box and will not charge until Battery's core temperature is above 32°F
3. When Battery Charging Base indicator shows green, your Battery is fully charged (Image 3).

Your StrikeMaster Lithium 40v Battery is ready for use.

Your StrikeMaster Lithium 40v Battery Charging Base has built in "Smart Charging Technology". The chart below shows you the correct charging procedure/occurrences that could be experienced while charging.



IMAGE 3

CHARGING PROCEDURE----DO NOT REMOVE

BATTERY IS CHARGING

● RED

● RED

FULLY CHARGED

● RED

● GREEN

BATTERY IS TOO COOL OR TOO WARM TO CHARGE (REMOVE FOR APPROX. 30 MINUTES)

● RED

● ORANGE

NO BATTERY PRESENT

● RED

○ OFF

DEFECTIVE BATTERY (REFER TO OWNERS MANUAL)

● RED

> ● < RED
> ● < BLINKING

REGISTER YOUR PRODUCT ONLINE TO ACTIVATE YOUR WARRANTY

www.rapala.com/content/rapala-brand-warranties/strikemaster-warranty.html