



Affordable. Reliable. Home Improvement.

KARAOKE MACHINE

MODEL: AP-G568

Technical Support and E-Warranty Certificate
www.vevor.com/support

VEVOR

Affordable. Reliable. Home Improvement.

KARAOKE MACHINE

MODEL: AP-G568



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

I. Features

1. Ultra-large magnetic circuit high-sensitivity speaker with high penetrating power, low-frequency shock and perfect medium-/high-frequency representation.
2. The latest decoding chips supporting stably playback of MP3 in up to 32GB USB/TF card.
3. 3.5mm AUX audio input for each connection to a wide range of sound sources.
4. Built-in high-capacity battery for consecutive playback of up to 2 hours.
5. Connect the microphone, adjustable reverberation, voice and Karaoke function to present outstanding performance.
6. Battery with built-in recharging protection to present a long and stable service life.
7. Built-in low battery and full recharging indication. Human-oriented use.
8. With handle design for best choice of mobile speaker.
9. Microphone input recording to act as your personal business assistant.
10. Support Bluetooth and TWS function.

II. Recording

Recording via External Microphone:


Connect a storage device (USB/TF card) and short press RECORD key to start recording for a time depending on the storage capacity. During recording, tune the “-ECHO+” knob to the minimum. It is noticeable that the microphone should be located a proper distance away from the speaker to prevent any howl-round or noise.

Notes: This product starts recording from the time as displayed on the LED screen.


III. The bluetooth pairing operation and related parameters:

- 1.Power: switch the power to ON, press the key “MODE” to enter the mode of Bluetooth, the display screen will show “BLUE”.
- 2.Switch on the Bluetooth function of Mobile phone and searching , while the Mobile phone shows “**AP-G568**”, click the connect directly . mobile phone connection do not need password , if need password , please input”0000” to go on pairing . After success pairing , the speaker will send out a voice of prompt . it is success pairing between mobile phone and Bluetooth speaker.
- 3.Play the music of your mobile bphone directly and will give out beautiful voice from speaker.

IV. Functional Operations and Features

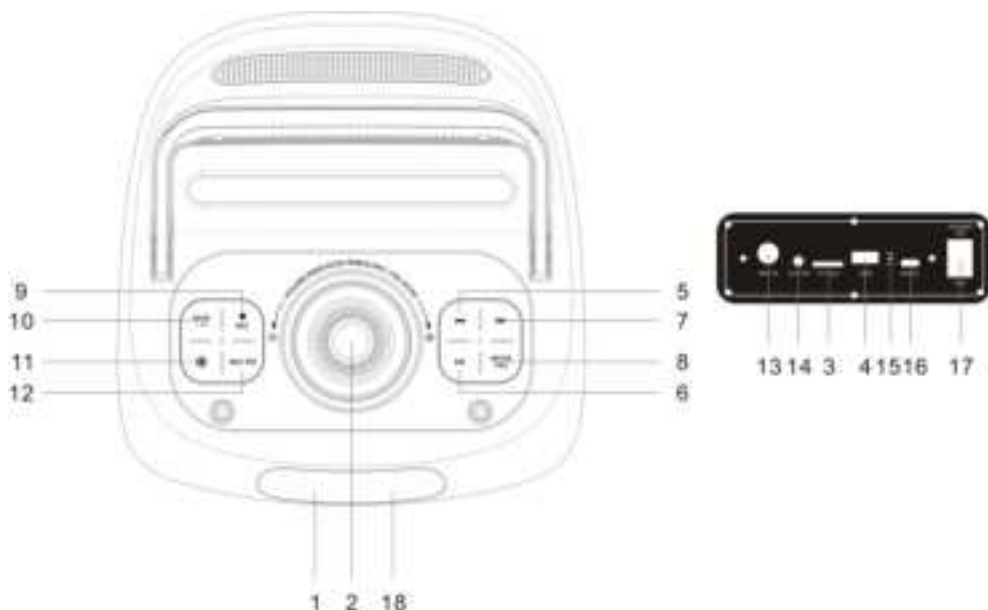

1. LED Screen.
2. VOLUME PRESS BASS/TREBLE/MIC.VOL/ECHO: By default the master volume adjustment, short press once for bass adjustment, short press twice for high pitch adjustment, short press three times for microphone volume adjustment, short press four times for microphone reverb adjustment, adjust each time for four seconds without operation automatically jump back to the master volume adjustment, in each mode, adjust the knob to control the volume.
3. TF Port: Read audio files in MP3 format in TF card in capacity up to 32G (FAT32).
4. USB Port: Read audio files in MP3 format in USB storage device in capacity up to 32G (FAT32).
5. ⏮: In the play status of USB/TF Card/Bluetooth, short press it to select the previous song.
6. ⏮⏮: In USB/TF card/Bluetooth reading status, short press it to play/pause, In USB/TF card reading status, long press it to select one of four playback sequencing modes (All - play all tracks in sequence; RAND - play in random; ONE - repeat one track; FOL - repeat all tracks in a folder). In AUX input status, short press it to toggle between mute and normal volume.
7. ⏭: In USB/TF card/Bluetooth reading status, short press it to go to the next song.
8. MODE/SHIFT/TWS: Short press it to toggle between USB/TF/AUX/Bluetooth receiving modes. long press it to toggle between recording folder and MP3 folder. TWS interconnection mode: open the two machines that need interconnection at the same time, and switch to bluetooth mode at the same time, Pair one of them with the mobile phone's bluetooth to play music. Long press the TWS button on the machines to connect with another machines. After successful connection, synchronous music will be played. Long press the TWS button on the machines to exit the interconnection mode.

9. Recording/DEL: Short press it to enable recording. During recording, reverberation should be tuned to the minimum. Long press it to delete a recording file. Recording in Microphone mode is available.
10. BASS1.2.3: Short press to switch between indoor and bass boost and outdoor modes.
11. : Short press it is LED light mode button.
12. MIC PRIORITY: Connect the microphone, short press the key, into the microphone priority mode.
13. Microphone input: Microphone input jack.
14. AUX IN: External sound source input port (plug-and-play).
15. Recharging indicator light: When recharger is connected, the red light turns on. When the device is fully recharged, the blue light turns on.
16. DC 5V INPUT: DC 5V recharging port.
17. Power: Power switch.
18. Remote Control Receiver.

V. Operation Instructions on Remote Control

1. Power Button: Short press it to enter standby mode; short press it again to resume. If no device is connected, the system goes to " BT ".
2. PLAY/PAUSE: Same functions as "PLAY/PAUSE" on the master device.
3. Mode Button: Short press it to toggle between USB/TF/AUX/Bluetooth receiving modes.
4. Number keys 0~9: In the MP3 mode (USB /TF card/Bluetooth), if want to listen to 123 songs, you can directly use the number keys on the remote control three-digit number followed by enter 1,2,3, wait 2 seconds minutes later, the player will automatically jump to the specified 123 songs to start playing, Any input of number larger than number of the total available tracks is invalid.

5. 10 + key: To track down the jump 10, as is now playing the first 23, if you press the "10 +", skip to 33 tracks to start playing, the playback device if the total of 10 songs is not enough songs When you return to the first one track.
6. VOL+/VOL-key: In USB/TF/AUX/Bluetooth etc mode, short press or long press VOL+/VOL- key, you can increase or decrease the speaker output of the electronic volume.
7. Previous Track: Select the pervious channel.
8. Next Track:Select next channel.
9. EQ: Short press to switch between indoor and bass boost and outdoor modes.



CAUTION:

Please Be sure to charge while music distorted.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
----	-----

YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
----	-----

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.



Technical Support and E-Warranty Certificate
www.vevor.com/support