

# OPENCLEAR

OPEN WEARABLE EARPHONES



18 HOURS TOTAL  
PLAYTIME



6 HOURS PLAYTIME  
PER CHARGE



2 EXTRA CHARGES  
IN CASE



OPEN WEARABLE  
TECHNOLOGY

**User's Manual**  
**Item: RBK1301**



# SAFETY PRECAUTIONS

When using your earphones, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARPHONES.
2. Never expose your earphones to high temperatures, extreme cold, high humidity, moisture, or water.
3. To avoid the risk of electric shock, never attempt to open or repair your earphones without the assistance of certified professionals.
4. Your earphones are not to be used by children or the infirm without suitable adult supervision.
5. Always press all buttons carefully. Do not manhandle your earphones.
6. Do not use your earphones at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your earphones, throw them, or subject them to strong impacts or physical trauma.
8. Contact the manufacturer for support if you detect any abnormalities when using your earphones. In addition, do not continue to use your earphones if you detect any smoke or fire.
9. Unplug your earphones when not in use for extended periods of time.
10. When plugged in, do not place your earphones on flammable materials such as rugs, carpets, or bedding.
11. Please recycle or dispose of your earphones properly according to your municipality's laws and rules. Contact local recycling facilities and/or the manufacturer for further information.
12. Clean your earphones and charging case using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your earphones, and never submerge your earphones in water.

**BATTERY WARNING:**

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

# INTRODUCTION

Thank you for purchasing the Reebok Open Clear Open Wearable Earphones, item RBK1301. Listen to music on the go. To get the most out of your device, please read this user's manual thoroughly before use.

## PACKAGE CONTENTS

- Open Wearable Earphones with Charging Case
- USB-C Charging Cable
- User's Manual with Warranty Information

## FEATURES

- 18 Hour Total Playtime
- Six Hours of Playtime per Charge\*
- Two Extra Charges in Case
- Open Wearable Technology

 
\*Applicable at 50% of maximum volume. Results will lower with increased volume.

## SPECIFICATIONS



- Bluetooth Range: Up to 33 Feet (10 Meters)
- Charging Input: DC5V 200mA

# A CLOSER LOOK


Charging Case

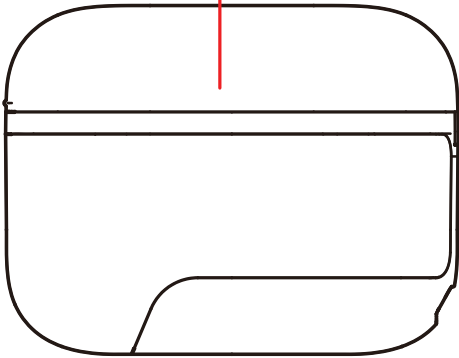

Microphone

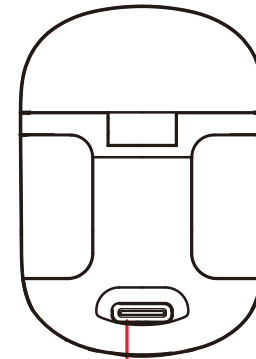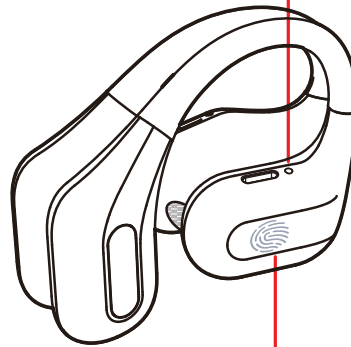  

USB-C

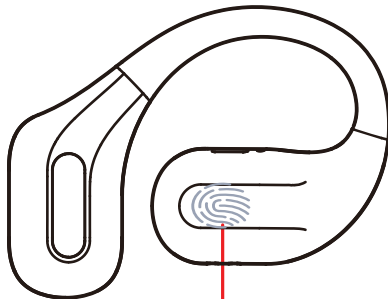 


Touch Sensor



# CHARGING

 
## First Use

Before first use remove the insulation film from the charging pads on both earbuds. Place them in the case and then charge the case and earbuds fully.

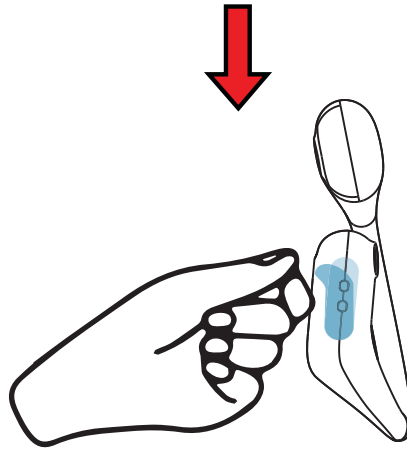


## Charging the Case

 Insert one end of the included USB-C charging cable into the charging port on your case.

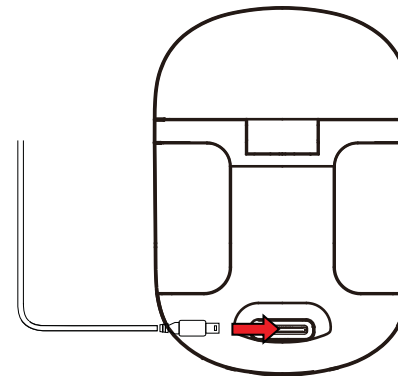


 Insert the other end of the USB cable into a suitable USB charging adapter.

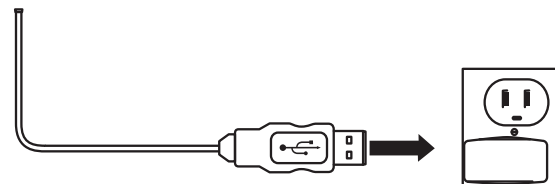

When charging, the indicator light on the case flashes red. When fully charged, the indicator light becomes a solid red.

 - ○ ● Charging (Flashing red)
- Fully Charged (Solid red)

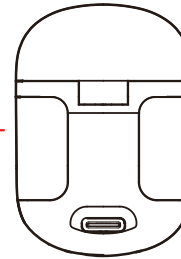

## **Charging the Earphones**

 
Place the earphones in the charging case to charge. Make sure the charging points make contact between the case and earphones.

Charging can take approximately 2-3 hours.


# POWERING ON/OFF

To turn the earphones ON, remove them from the case. To turn the earphones OFF, put them back into the case.

**Note:** It is recommended that the earphones be fully charged before use.

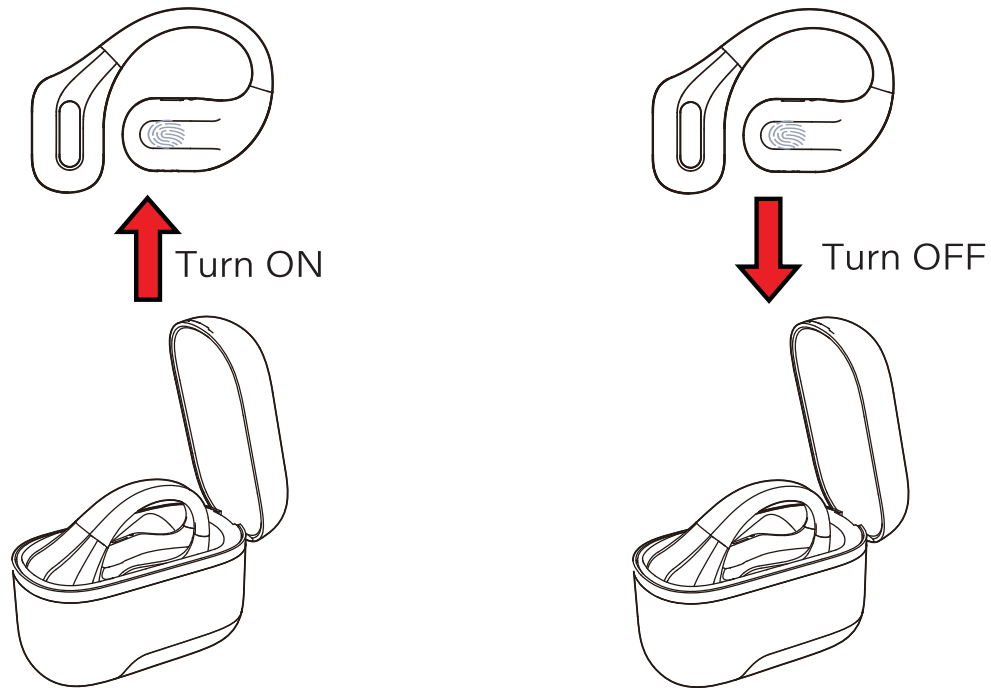

 It is also possible to turn the earbuds on/off by pressing and holding the touch button for 8S


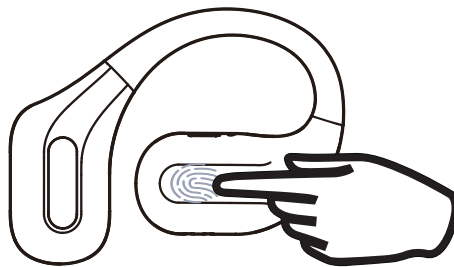


# BLUETOOTH PAIRING

When removed from the case the earbuds will both flash red and blue and will find each other and pair together (TWS pairing).


On first use this might take 15 S.

  Once they have paired together only one earbud will flash red and blue and they are ready to pair to your phone.

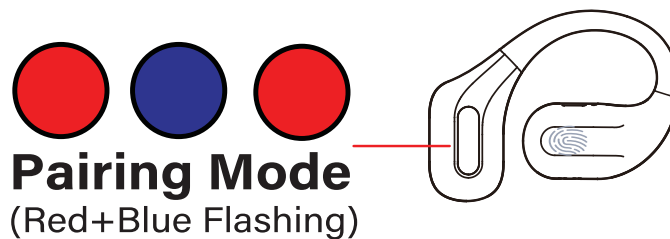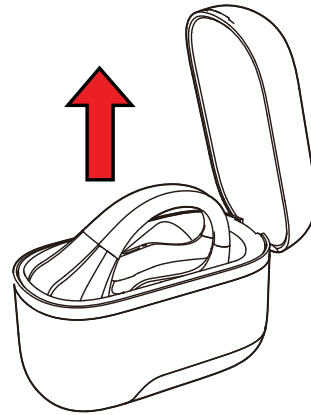



 Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is ON. Connect to the device listed as "RBK1301 OWS Sport."

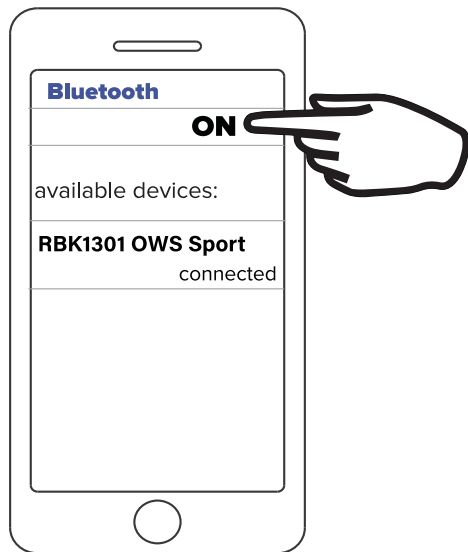

## TROUBLESHOOTING

 
If for some reason the earbuds do not pair together you can reset the TWS pairing.

'Forget' the earbuds in your phones Bluetooth Settings. Quickly press the left earbud touch button 7 times and then long press it for a few seconds until you hear a two-tone prompt. The earbuds should pair together.

Once paired together one earbud stops flashing while the other continues to flash blue and red. Now pair to your phone.

After connecting the earphones, their Indicator light will turn OFF.

# USING YOUR EARPHONES

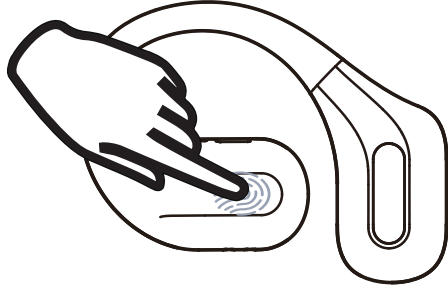


## LEFT EARPHONE

Play/Pause: Press  
Previous Track: Triple Press  
Answer Call: Press  
Reject Call: Press and Hold for 2 seconds  
End Call: Press and Hold for 2 seconds  
Volume Down: Double Press  
Activating Phone Assistant: Press and Hold either button for 3 seconds.

## RIGHT EARPHONE

 Play/Pause: Press  
Next Track: Triple Press  
Answer Call: Press  
Reject Call: Press and Hold for 2 seconds  
End Call: Press and Hold for 2 seconds  
Volume Up: Double Press  
Activating Phone Assistant: Press and Hold either button for 3 seconds.

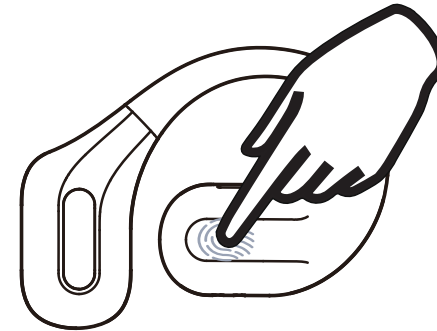

Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these earphones.

# MAINTENANCE AND CARE

- Use a soft cloth or paper towel to clean your earphones and charging case. Never use any harsh chemicals or detergents for cleaning. Make sure your earphones are dry before charging.
- When your earphones are unused, they should be stored in a cool, dry place.
- Never tug or yank on a cable connected to your earphones or charging case. Connect and disconnect cables as carefully as possible.
- Never expose your earphones to high temperatures or extreme cold.

# FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure.

# CSI ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## **What Is Not Covered By Warranty**


Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

## **To Obtain Warranty Service and Troubleshooting Information:**

Call 1-800-592-9541 for 24/7 support.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.
 
# Reebok

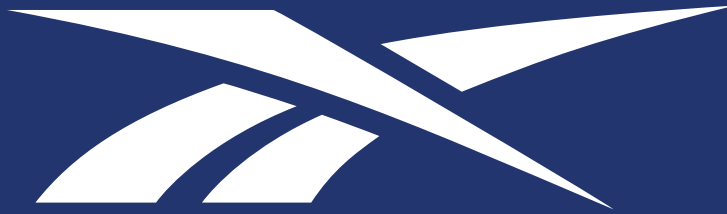

2024 CSI  
Edison NJ 08817

© Reebok International Limited, All rights reserved. Reebok® and ® are trademarks of Reebok International Limited.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International. is under license. Other trademarks and trade names are those of their respective owners.