

Calibration Instruction

If the level is dropped or you suspect inaccuracy of the level, You can re-calibrate the zero point.



1. Place the level on a flat surface, press "reset" button



2. Press "calibration" button till it appears "CAL1"



4. Flip the level over, press "calibration" button till it beeps, now level is calibrated ready.



3. Press "calibration" button again, it will appears "CAL2"