

NOVA

MANUAL

BELIEVE IT

www.Antec.com


All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V2.2


©1986 – 2024 Antec Inc. All rights reserved.

1 CONTENTS

120MM FAN

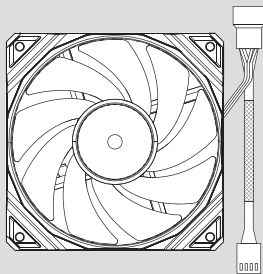

SPEED CONTROLLER

 


*Single pack: included 1 controller
*Three packs: included 2 controllers


FAN SCREW



 
RADIATOR SCREW



2 FAN INTRODUCTION

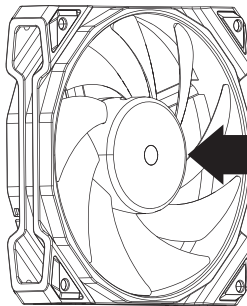


AIR-IN

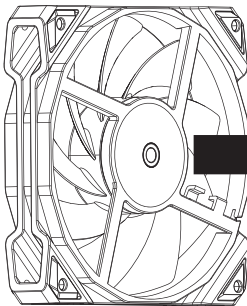


AIR-OUT

3 FAN INSTALLATION


FRONT (Interior)

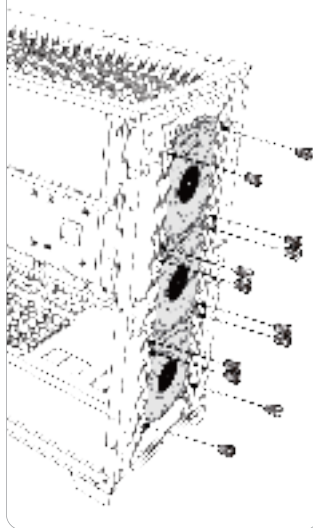

FRONT (Exterior)

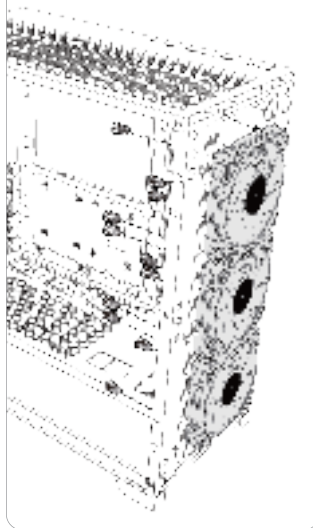


TOP

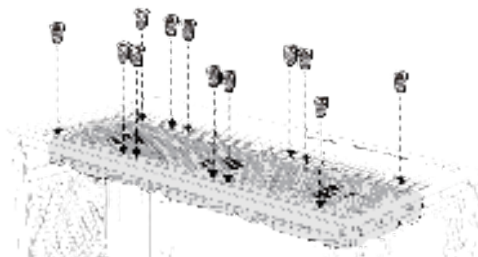



REAR

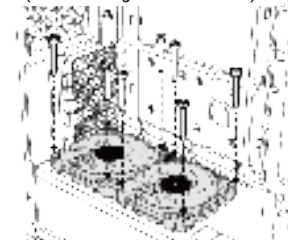


POWER SUPPLY SHROUD
(PC case long screws needed)



4 FAN CONNECTION

-  **A** PWM 4-pin female header
-  **B** PWM 4-pin male header

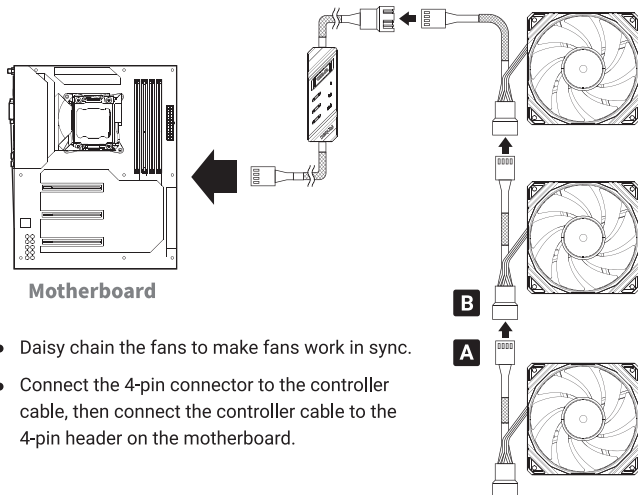

5 CONTROLLER

