


MCombo®

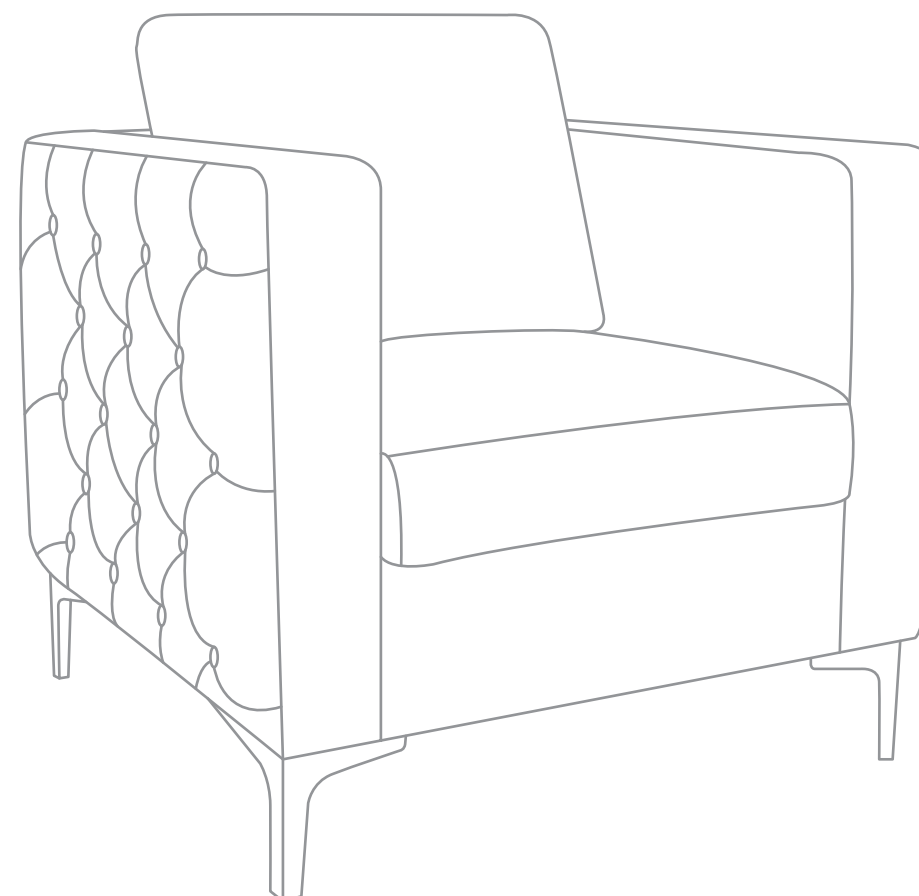

OWNER'S MANUAL

ACCENT CHAIR

6151-4066

Hello,
Thank you for choosing MCombo®
Let's get started

○ PURCHASER’S AGREEMENT

By accepting delivery of this product, you promise that you will not change, alter, or modify this product or remove or render inoperable or unsafe any guards, shields or other safety features of this product.
You will not refuse or neglect any retrofit kits that MCombo may provide to enhance and preserve the safe use of this product.

CONTENTS

I	SAFETY GUIDELINES	- 01	IV	WARRANTY	- 13
	<ul style="list-style-type: none">• Mandatory• Warning• Symbols Information• Disclaimer• Pre Assembly Introduction				
II	ASSEMBLY INSTRUCTIONS	- 04	V	RETURN / REPLACEMENT POLICY	- 14
	<ul style="list-style-type: none">• Product Parameters• Part List• Assembly Steps				
III	CARE AND MAINTENANCE	- 11			
	<ul style="list-style-type: none">• Fabric Care• Electronics Care• Faux Leather Care• Wood Base Care• Metal Care• Disposal & Recycling				

I. SAFETY GUIDELINES

1. Mandatory


Read the safety and other instructions thoroughly before using your MCombo® product. Failure to follow the guidelines, warnings in this manual and those located on your product can result in personal injury or product damage and will void the product warranty. Keep this manual for future reference.

2. Warning

- To prevent suffocation, keep plastic bags away from children.
- Weight Capacity: **330** lbs.
- Do not use outdoors. INDOOR USE ONLY.
- To avoid tip over, do not put your weight against the back of the chair.
- Do not stand, sit, or place extra weight on the arms, back or open footrest.
- Do not use this product if it is damaged. Do not use attachments or substitute parts.
- Avoid exposing upholstered chair to burning cigarettes or cigars, open flames, and high temperatures.
- Do not operate the unit until the back is installed and locked.
- The chair is intended for a single occupant, not exceeding **330** pounds. Do not operate the chair with more than one occupant in or on any part of the chair.
- If you give this product to someone else, must include this owner's manual.

3. Symbols Information

The symbols below represent labels used on the product to identify warnings, mandatory actions, and prohibited actions. It is especially important for you to read and understand these symbols completely. Do not remove these labels from your product. Please note that not all the symbols may be used on your chair.

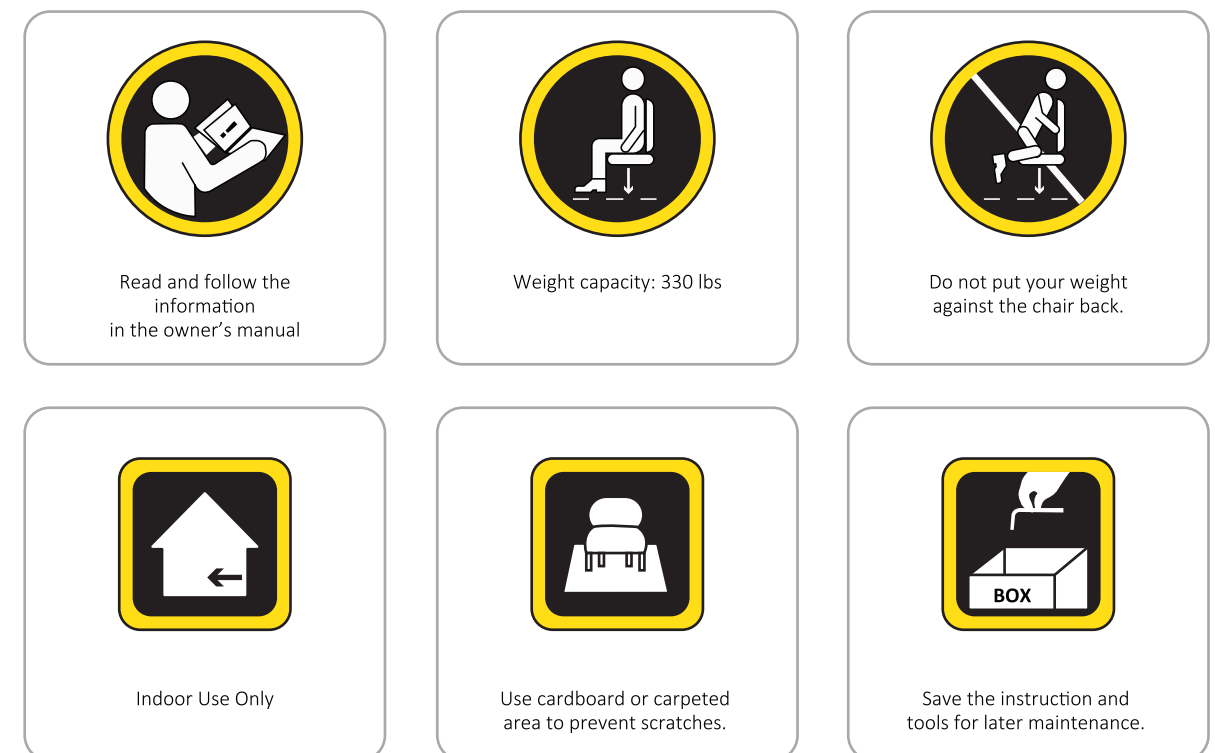

4. Disclaimer

Make sure you read and understand this manual completely before using your MCombo Product. We are not and cannot be held responsible for any damage or injury incurred due to improper or unsafe use of the MCombo Product. We specifically disclaim responsibility for any bodily injury or property damage that may occur during any use that does not comply with applicable federal, state, or local laws or ordinances.

5. Pre Assembly Introduction


Teamwork/2-People Recommended

Always have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Avoid Scratches

Use cardboard or carpet area when assembling the product to prevent scratches.


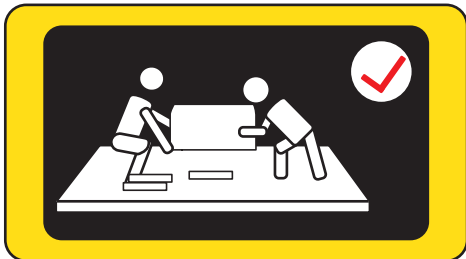


Level & Flat Surface

Make sure the product rests on a flat and level surface so that each legs touch the floor evenly.



Allen Wrench is included in the package to help you install the product. But the tools, like Phillips Scedriver is not included.

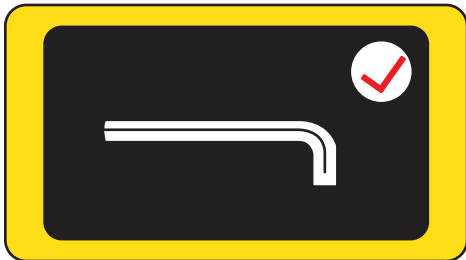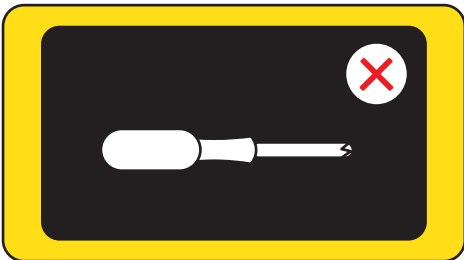

II. ASSEMBLY INSTRUCTIONS









 

 
■ Notice

- Please read these instruction thoroughly before using.

1. Product Parameters

Specification	Description
Product Model No.	6151-4066
Package Quantity	1
Carton Dimension	29.10 x 22.80 x 24.00 inch
Weight Capacity	330lbs
Package Contains	Left Arm Right Arm Connecting Plate Back Seat Board Backrest Cushion Chair Leg Screw Pack Instruction



2. Part List

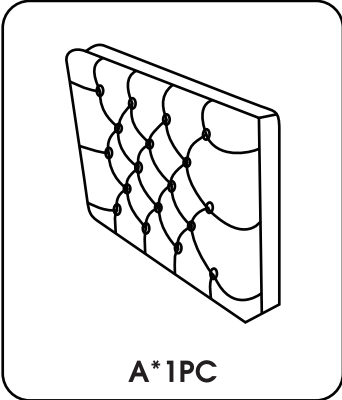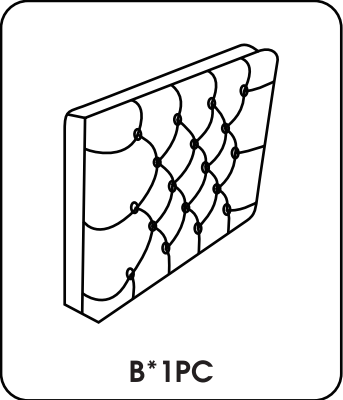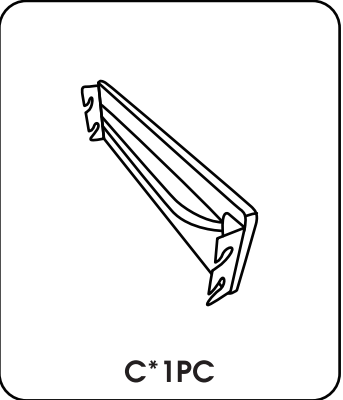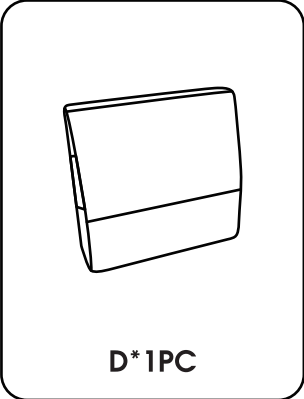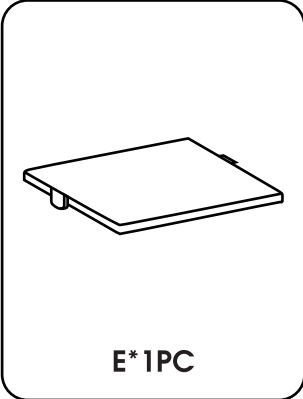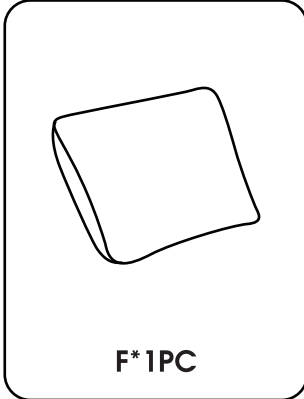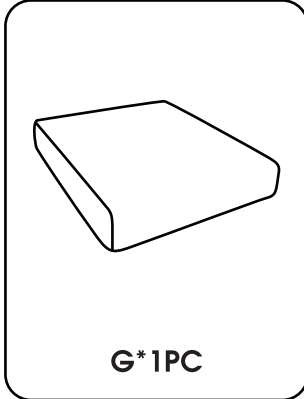Components			
Left Arm	Right Arm	Connecting Plate	
			
A*1PC	B*1PC	C*1PC	
Back	Seat Board	Backrest	Cushion
			
D*1PC	E*1PC	F*1PC	G*1PC
Hardware			
Chair Leg	Bolt M6*25mm	Falt Washer M6ø18*1.2mm	Allen Key
			
H*4PCS	I*8PCS	J*8PCS	K*1PC

3. Assembly Steps


Step1- Assembly of Chair Leg

Install the Bolt #I and Falt Washer #J with the Allen Key #K to install the Chair Leg #H to the bottom of the armrests #A and #B.

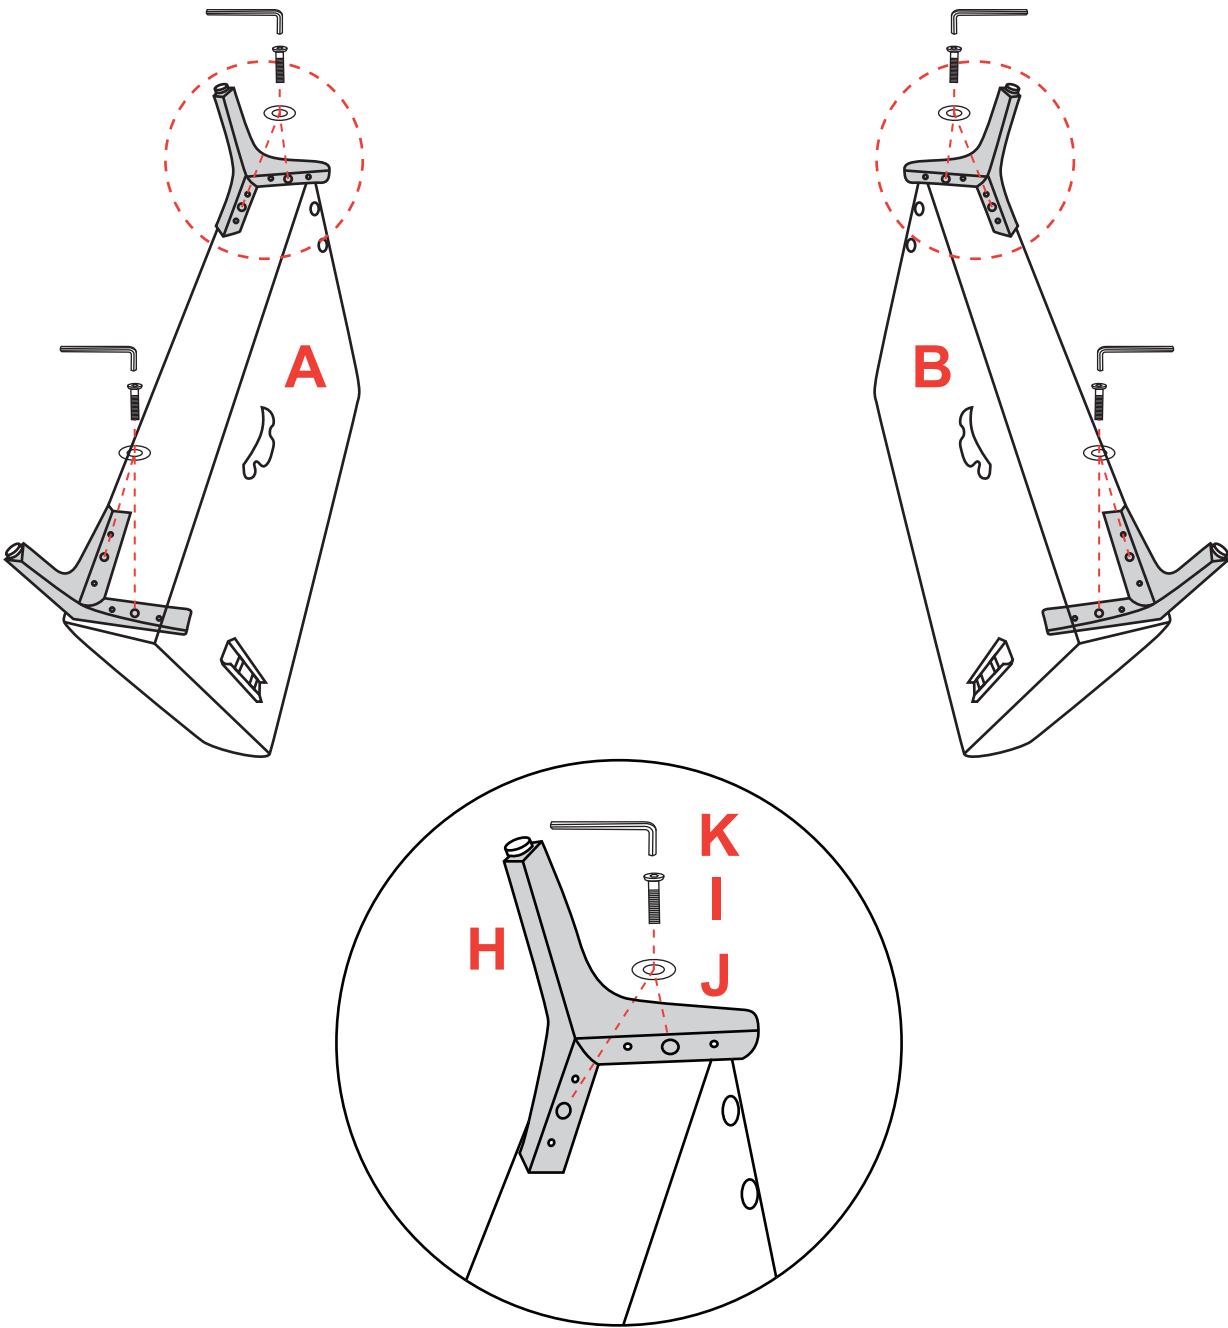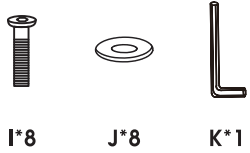


Step2- Assembly of Armrests

Stand the two armrests on the floor according to the left and right positions. Install Connecting Plate #C to the lower end of the front side of the two armrests, clamp the pre installed screws into the arc-shaped grooves, and tighten the screws with an Allen key #K.

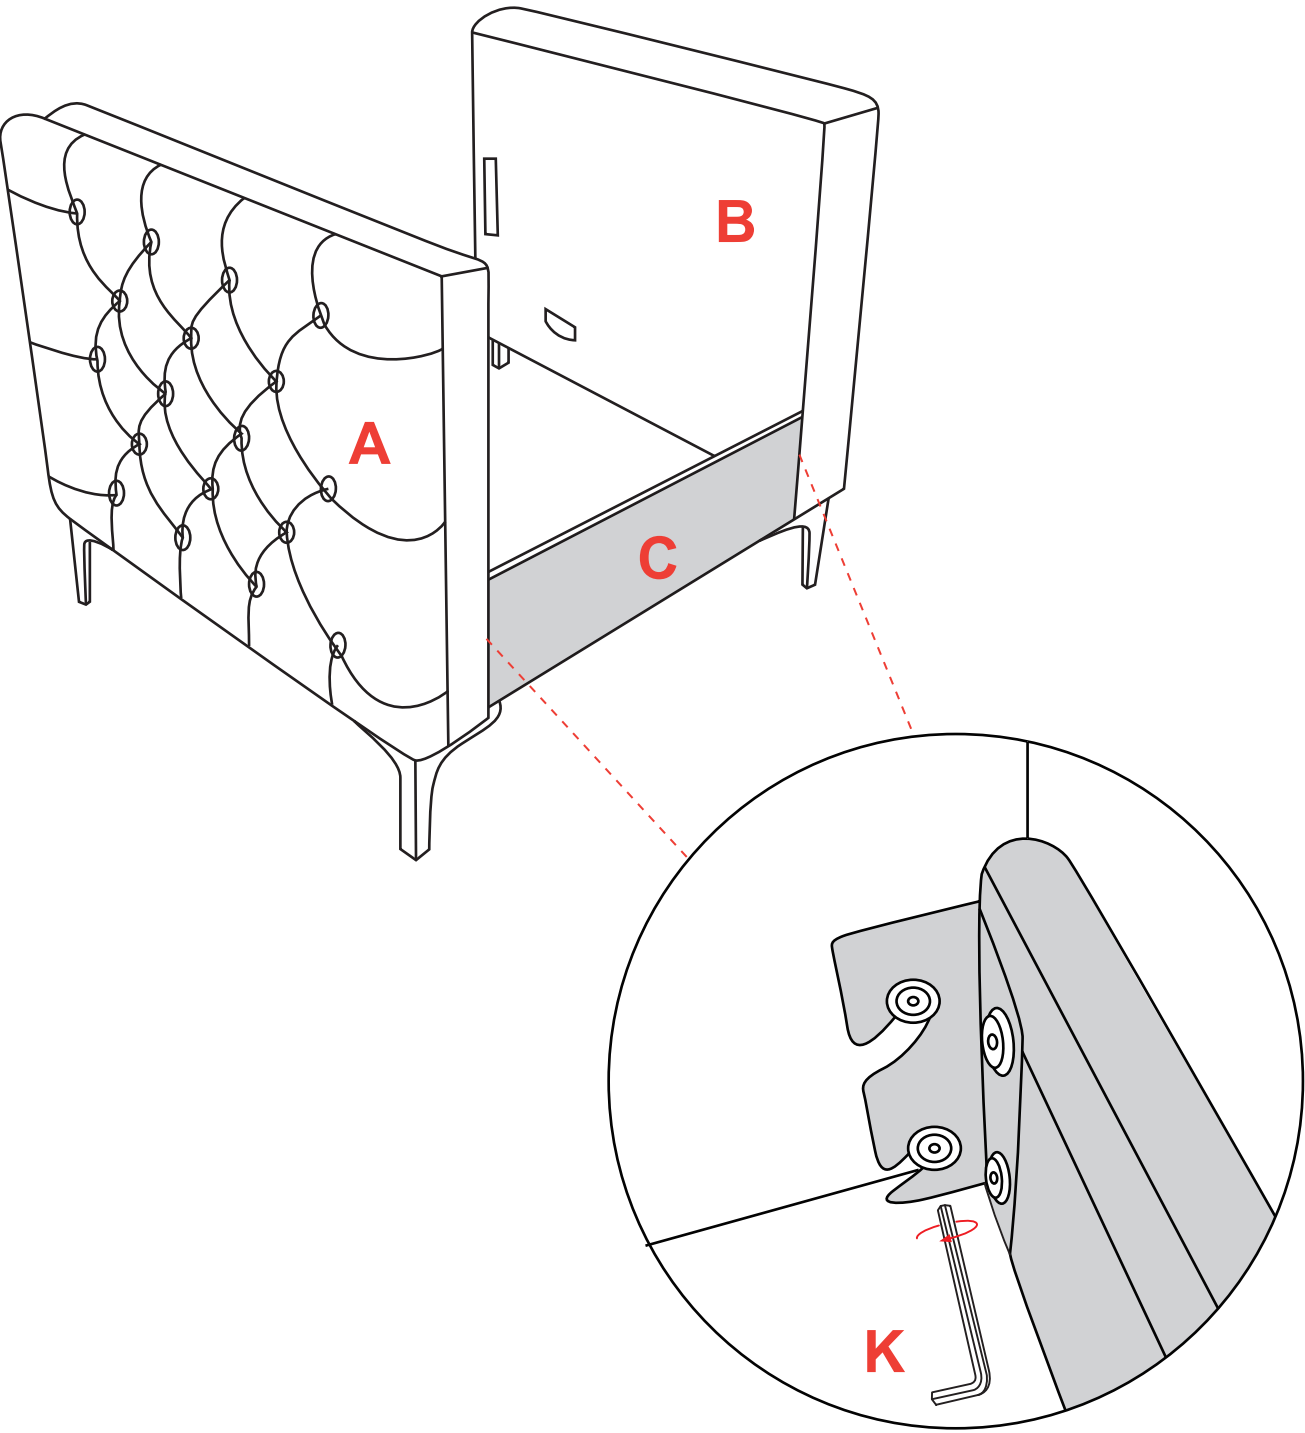


Step3- Assembly of Seat Board

Place the Seat Board #E flat in the seat. Clamp the card slot on side 2 tightly.

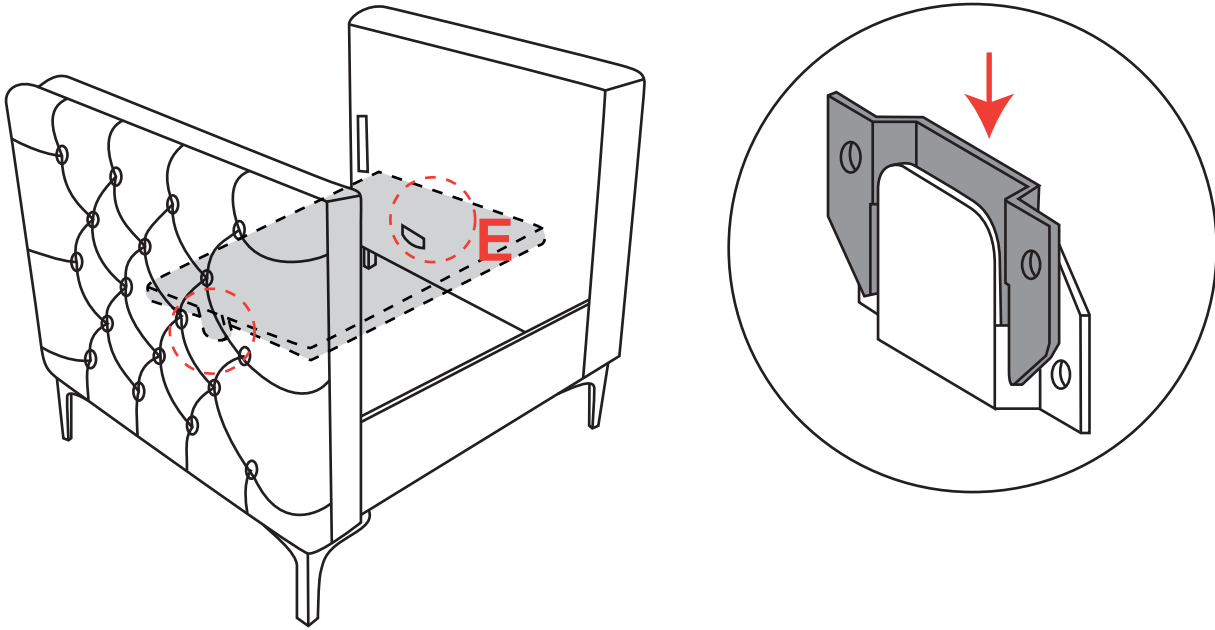


Step4 - Assembly of Back

After aligning the Back #D with the clips on the inner side of the left and right arms, press the backrest down to fix it with the armrests.

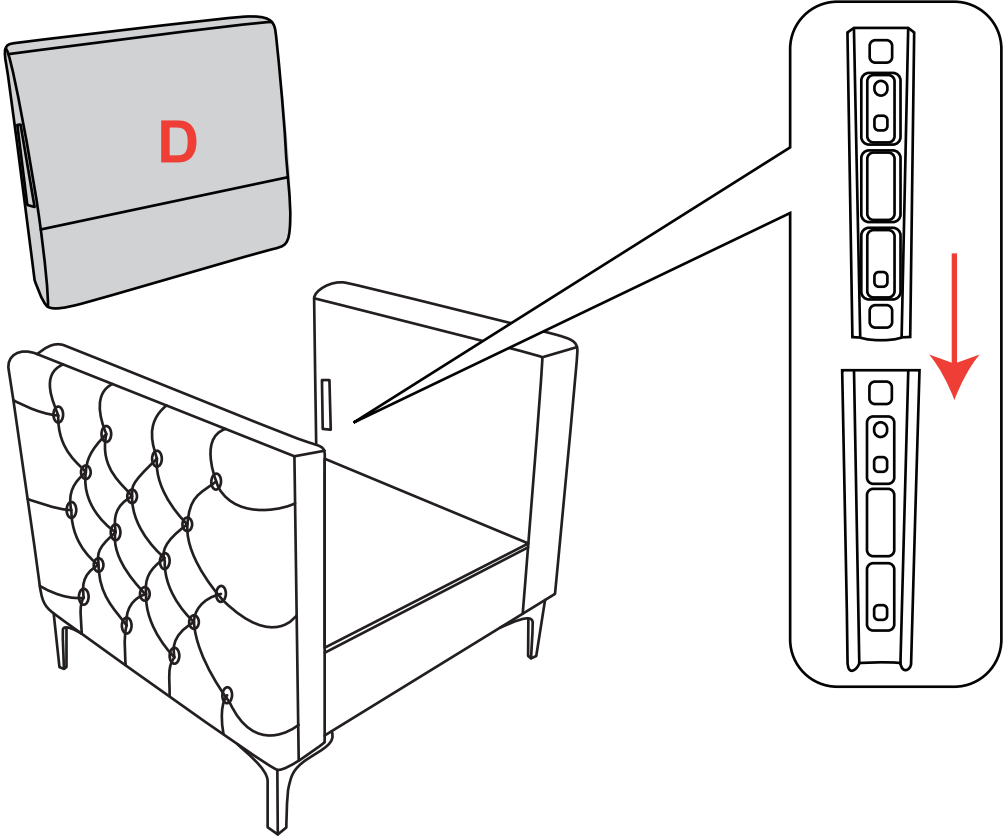


Step5- Place Backrest and Seat Cushion

Finally, place cushion #G and Backrest #F on the chair.

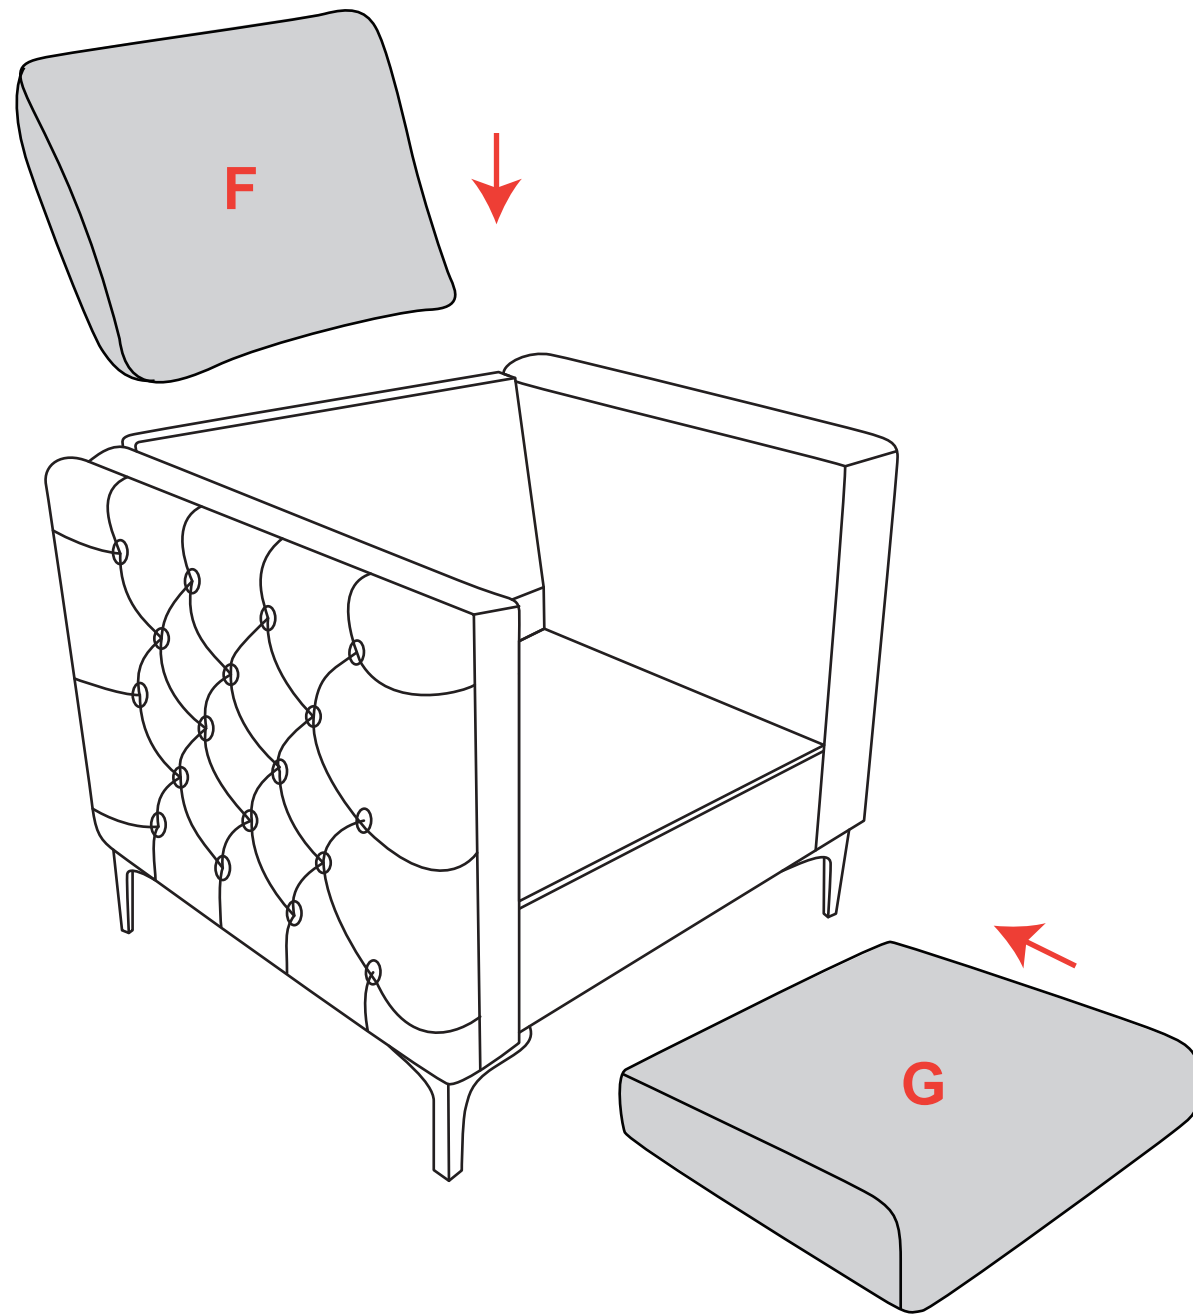

Step6 - Congratulations

Now you can relax your body on this chair and even decorate your living room.

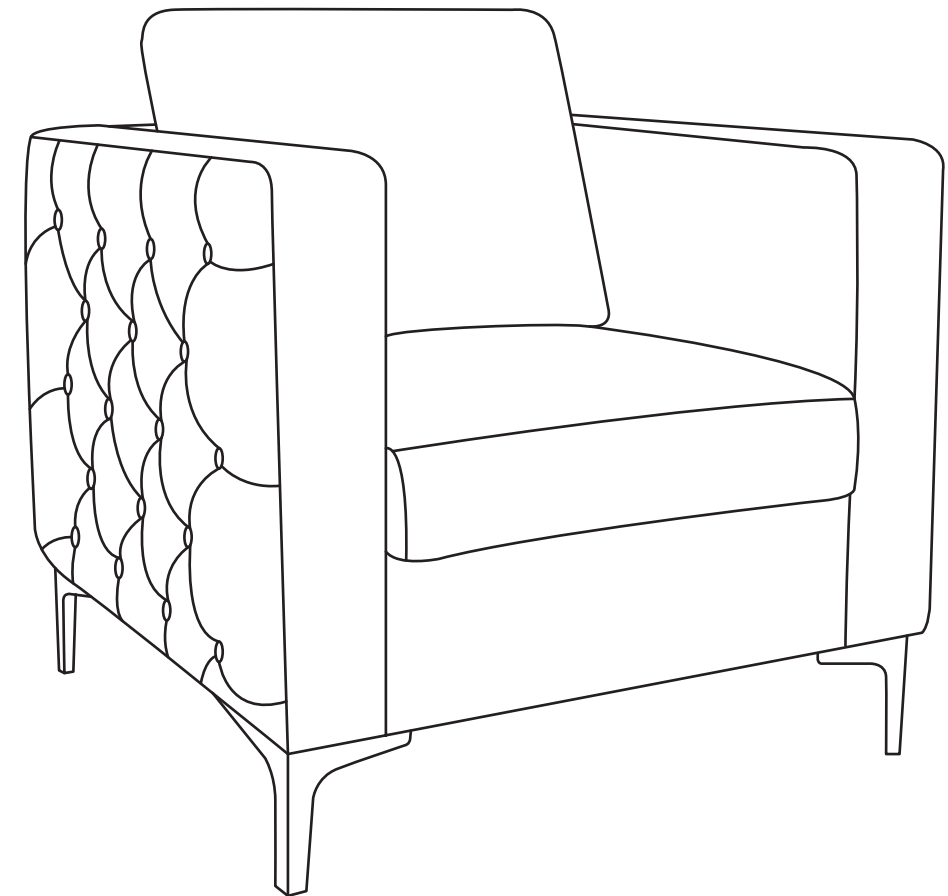

III. CARE AND MAINTENANCE

Your MCombo product will provide years of superior performance and satisfaction with regular care and maintenance. To maintain the finish quality of your "assistant", please follow the guidelines and cleaning procedures provided below.

■ Notice

- Do not place your chair in direct sunlight, as sunlight causes fading.
- Do not smoke cigarettes while seated in or using your chair.
- Avoid extreme changes in temperature by arranging chair away from radiators, heat and air vents.
- Do not use solvent-type cleaners to spot clean.
- Do not saturate fabric.
- Please be careful that pet scratch may cause fabric or leather break.

1. Fabric Care

- Inspect the fabric on a regular basis for any pulls, tears, or gaps.
- Frequent vacuuming or light brushing with a nonmetallic, stiff bristle brush to remove dust and grime is recommended.
- When liquid spills onto the fabric, please immediately wipe off liquid spills with a dry or lightly dampened clean white cloth, sponge, or paper towel.

2. Electronics Care

- Inspect all wiring harnesses to make sure they are not damaged or stuck under chair.
- Keep all the electronics free from moisture and temperature extremes.
- Check electrical components frequently for signs of corrosion and replace as necessary.
- Contact MCombo Customer Support if damage is present, do not fix it by yourself.

3. Faux Leather Care

- Never use detergents, polishes, preservers, saddle soap, abrasive brush or scrubber. They can remove natural oils.
- Dust, vacuum or wipe leather down regularly with a clean, dry microfiber cloth for routine maintenance.
- Do not place in direct sunlight; it will lighten or discolor leather over time.
- If spills occur, immediately soak up any liquids with an absorbent cloth and allow to air dry. Thorough cleaning by a leather specialist only.
- For more stubborn dust, dampen the cloth with distilled water. Make sure that the cloth is not soaking wet. Never let water soak into leather.

4. Wood Part Care

- Keep the wood part from a fireplace and heating and cooling vents; away from moisture sources, such as humidifiers; and out of direct sunlight.
- Daily exposure to heat or sunlight may fade the wood finishes and dry the wood, which can create cracks over time.

5. Metal Care

- Avoid bumping, and handle gently when moving;
- Avoid touching hard metal parts, such as fruit knives, keys, etc., to avoid scratches;
- Do not fold too fast to ensure that the folded part is not damaged.
- Avoid the direct exposure of sunlight, so as to avoid paint discoloration, dry cracking and peeling of colored paint layer, oxidation and deterioration of metal.
- Avoid placing chairs in damp places, avoid cleaning metal furniture with boiling water, wipe with a damp cloth, but do not rinse with running water.

6. Disposal & Recycling

Your power recliner sofa must be disposed of according to applicable local and national statutory disposal regulations. Contact your local waste disposal agency for information on proper disposal of recliner sofa packaging, metal/wood frame components, fabric, electronic components.

IV. WARRANTY

■ Notice

- For product beyond the limited manufacturer warranty period and scope, MCombo® can also provide replacement service, but a basic charge will be charged according to the circumstances.
- The warranty only applies to MCombo® products and does not include any accessories or enhancements.
- Warranties are only valid in the 48 contiguous United States and are contingent upon the consumer operating the product according to the corresponding instruction manual.

Upholstery Material	★ 1 Year
Metal/ Wood Chair Frame	★ 1 Year

CONSUMER WARRANTY LIMITATIONS AND EXCLUSIONS

All warranties begin on the date of delivery.

All warranties are to the original purchaser from MCOMBO® ONLY.

- MCOMBO® will replace the defective parts or send replacement product provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer.
- Exclusions also include components with damage caused by:
 - Contamination
 - Abuse, misuse, accident, or negligence
 - Commercial use, or use other than normal
 - Improper operation, maintenance, or storage

NOTE:

MCOMBO® will pay standard shipping rates on all warranted parts for the first year. We can also sell you replacement part for a discount price when your product is out of warranty policy.

V. RETURN/ REPLACEMENT POLICY

■ Notice

Why don't we recommend returning the item by yourself?

- Huge cost- UPS/FedEx oversize fee.
- Need you to take the box to UPS/FedEx facility.

Return/ Replacement Policy

MCOMBO®

All of product come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged product, through providing pre-paid return label or pick-up service for customer convenience.

NOTE:

- Please keep the original packaging in case the product needs to be returned. If the original packaging is not available, the newly found packaging needs to meet the following size standard:

UPS/FedEx packaging size standard: (width+ height) * 2+ length< 128 inch.
- Please disassemble the product before you return it, otherwise there will be a huge cost as oversized and it could even exceed your order amount.
- Please do not purchase return label for a damaged/defective product by yourself.
- If you have any problem to return the product, please contact us immediately, we will do our best to help you with a reasonable solution.
- The customer is responsible for freight costs unless the chair is defective. Chairs returned due to being refused delivery by the customer or deemed undeliverable by freight carrier are subject to fees for a 20% restocking fee.

