




PERLESMITH

INSTRUCTION MANUAL

FULL-MOTION TV WALL MOUNT

PSXLF01


Rev00

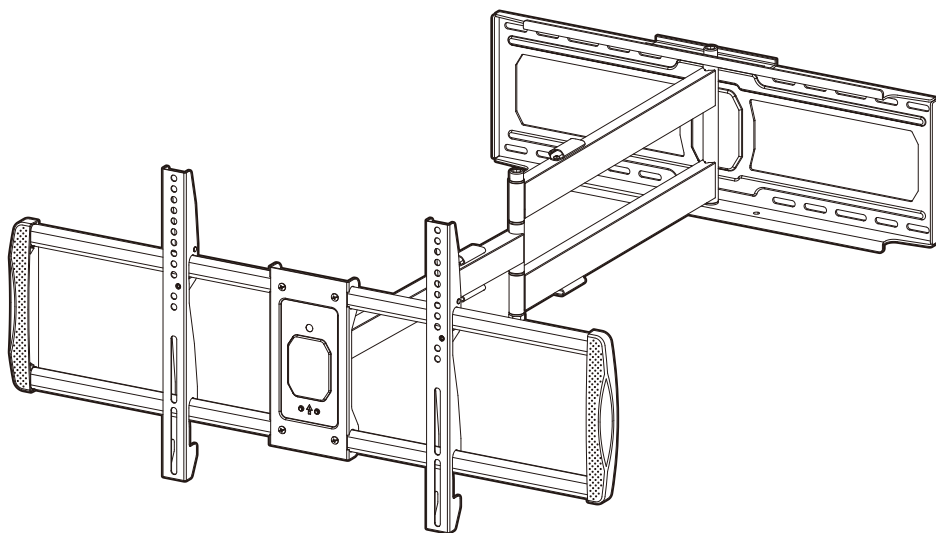

BEFORE GETTING STARTED, LET'S MAKE SURE THIS MOUNT IS COMPATIBLE

1

Check VESA Pattern Compatibility

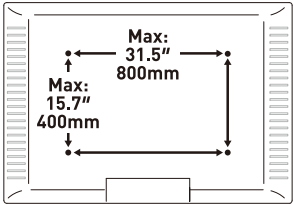

Compatible VESA Patterns:		
200 x 100mm	200 x 400mm	300 x 400mm
200 x 200mm	300 x 200mm	400 x 200mm
200 x 300mm	300 x 300mm	400 x 300mm
		400 x 400mm
		500 x 400mm
		600 x 400mm
		800 x 400mm
Maximum/Minimum:		
800 x 400mm (31.5 x 15.7")		
200 x 100mm (7.9 x 3.9")		

If this mount is not compatible, please contact product support.

2

Check Max Load





WARNING

DO NOT exceed the Max Load. Exceeding the Max Load can cause the mount to fail, leading to personal injury and/or property damage.

If your TV weighs more, this mount is NOT compatible.

3

Verify Wall Type

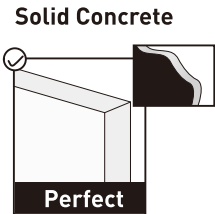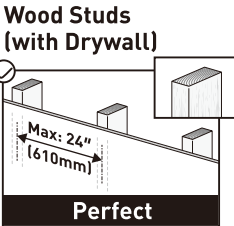

4

Tools Needed (not included)



Electric Drill



Pencil





Phillips Screwdriver



Tape Measure




1/2" (13mm) Socket Wrench

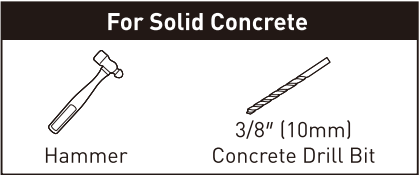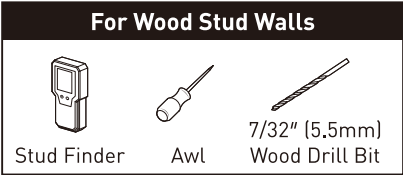

5

Important Safety Information

- CAUTION:** Avoid the risk of personal injury or property damage!
- This product is designed for installation on wood studs and solid concrete. DO NOT install on drywall alone.
 - The wall must be capable of supporting four times the weight of the TV and mount combined.
 - This product contains small parts that may pose a choking hazard.
 - Do not use this product for any purpose that is NOT explicitly specified in this manual. Do not exceed the maximum weight capacity. We are not liable for damage or injury caused by incorrect assembly, improper mounting, or inappropriate use.
 - Before starting assembly, verify that all parts are included and undamaged. Do not use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.
- WARNING: All fasteners must be firmly tightened!**

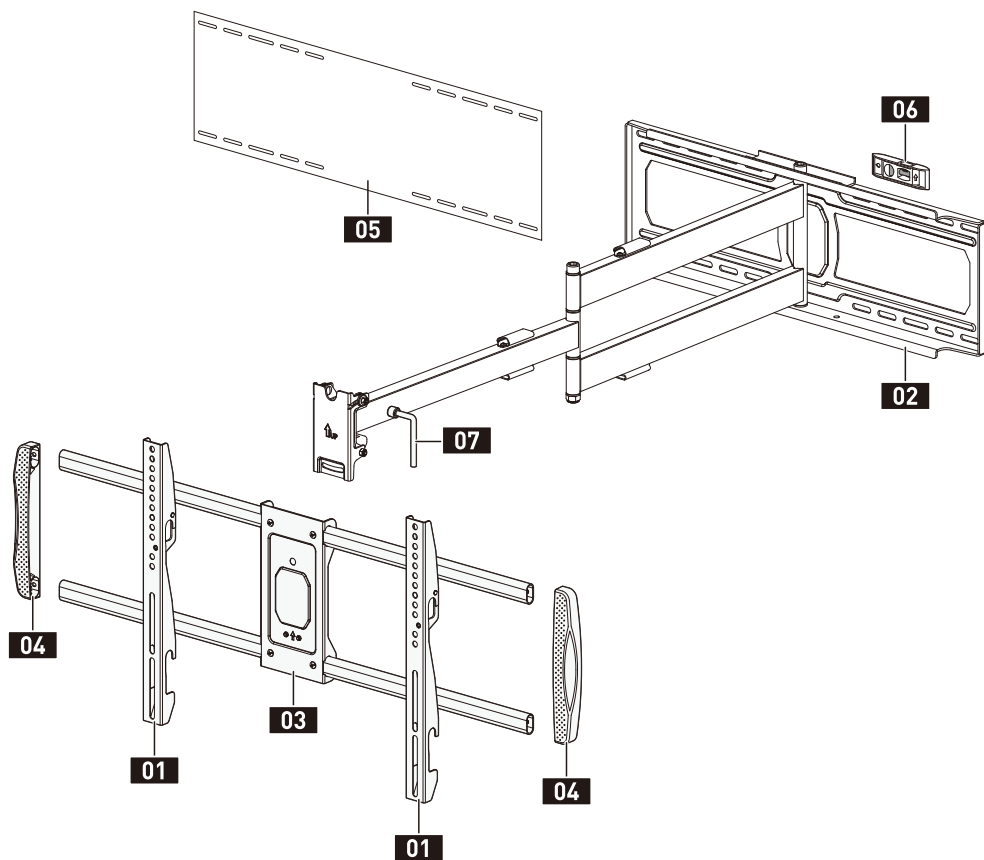

01 TV Bracket

02 Arm Assembly / Wall Plate

03 Front Support

04 End Cap


05 Wall Plate Template

06 Level

07 Socket Wrench

Supplied Parts and Hardware for Step 1

Not all hardware included in this package will be used.

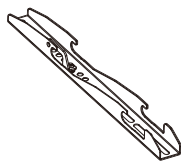

TV Bracket

01 x 2



M6/M8
Washer

B1 x 4



 
L2.5mm
Spacer

E1 x 8



L10mm
Spacer

E2 x 4



L22mm
Spacer

E3 x 4

M6



M6 x 15mm
TV Bolt

C1 x 4



M6 x 35mm
TV Bolt

C2 x 4

M8



 
M8 x 15mm
TV Bolt

D1 x 4



M8 x 35mm
TV Bolt


D2 x 4



M8 x 50mm
TV Bolt


D3 x 4

Supplied Parts and Hardware for Step 2

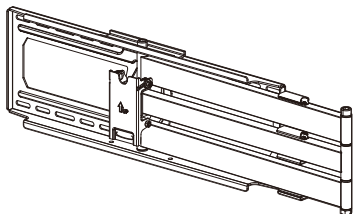


Arm Assembly / Wall Plate

 02 x 1



Wall Plate Template

 05 x 1



Level

06 x 1



ST8 x 90mm
Lag Screw

A x 6



φ8
Washer

B x 6




Wall Anchor

C x 6

! CAUTION!


This anchor is for solid concrete ONLY. DO NOT use them in drywall or wood studs.

Supplied Parts and Hardware for Step 4

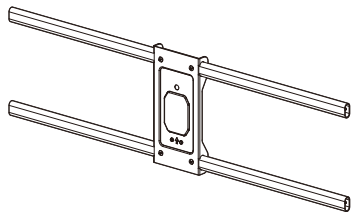

Front Support

 
03 x 1



End Cap

04 x 2

 Supplied Parts and Hardware for Step 6



Socket Wrench




07 x 1

INSTALLATION


STEP 1 Attach the TV Brackets to Your TV

1-1 Select TV Bolts

The correct bolt diameter will thread smoothly into your TV.

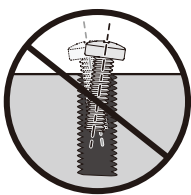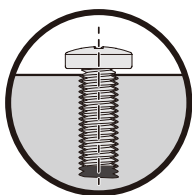
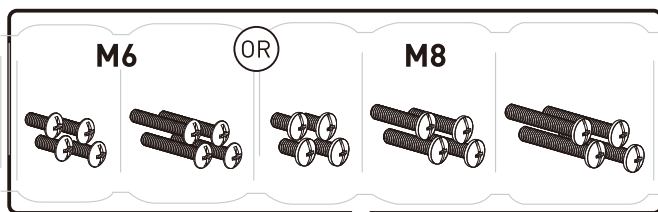


Save the bolts that fit (M6 or M8) for Step 1-3.



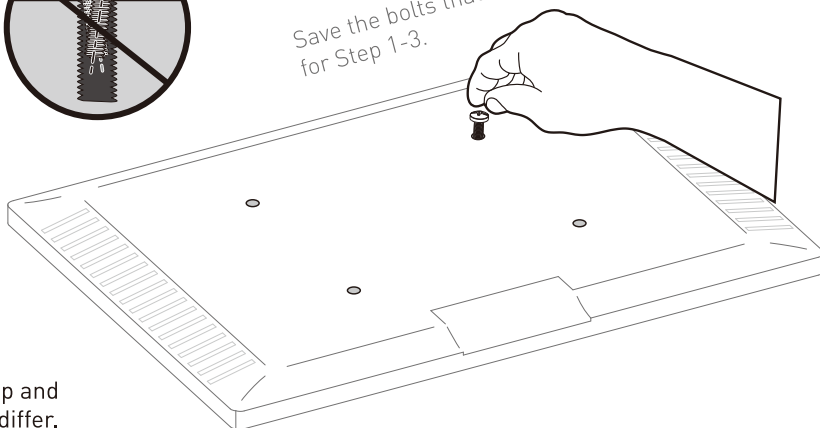


The depth of the top and bottom holes may differ.

1-2 Position the TV Brackets

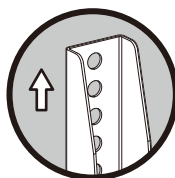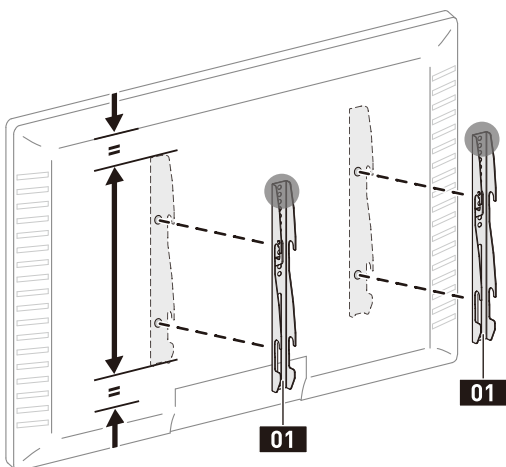

Round Holes Up

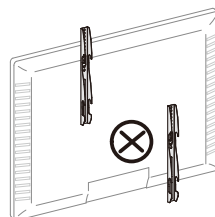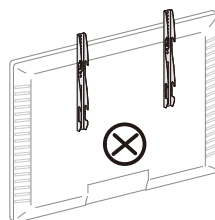
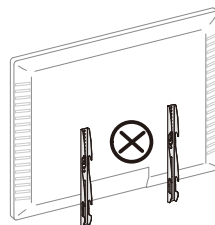


1-3 Secure the TV Brackets

For Flat-Back TV, go to Option A on this page.
For Bump, Curved TV, Recessed Holes and Cables, go to Option B on next page.

⚠ WARNING:

- DO NOT turn the bolt past the bottom of the hole.
- If the bolt is too short, it may not adequately support the TV.
- If the bolt is too long, it could damage the TV.
- At least 4–5 turns into the threading is required.
- The depth of the bottom holes may be different from the top holes.

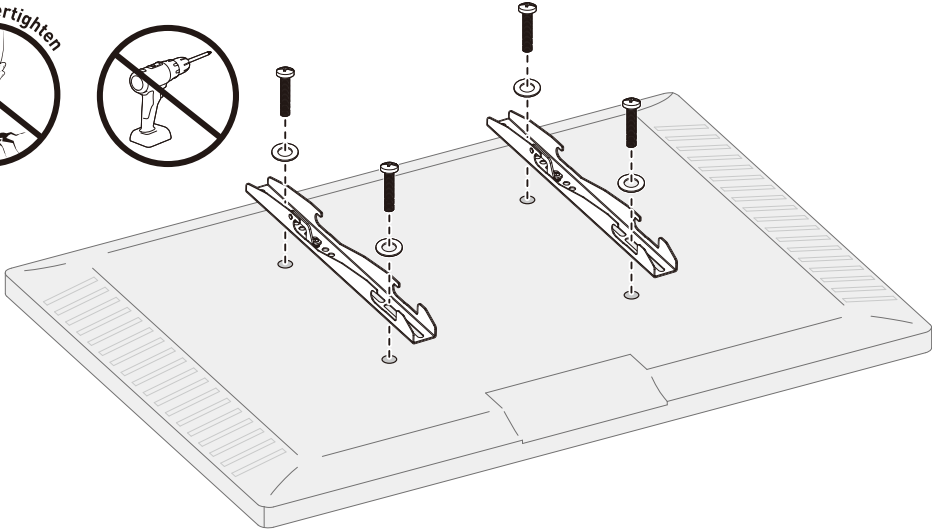
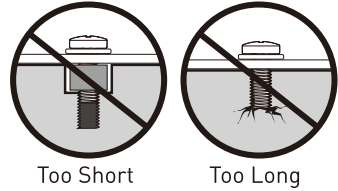


Option A

Use **short** TV bolts with washers.



 Flat-Back TV

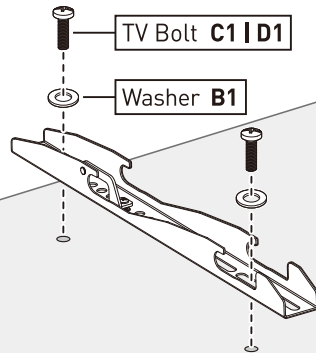

Option B Next page

 


Option B


Use **long** TV bolts with washers and spacers to create extra space between the TV and brackets.




Bump




Curved TV

 


TV with Mounting Restrictions

 


Recessed Holes

 

Protruding Cables

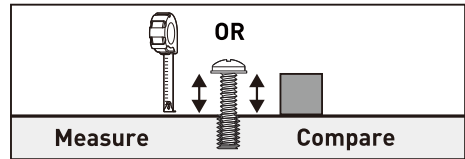

 You can use a tape measure to measure the protruding bolts or hold spacers next to them to choose the right spacer combination.



Note:


There are many possible spacer combinations that can be used.



1-800-556-6806 (US/CA)
44-808-196-3891 (UK)



supportus@perlesmith.com

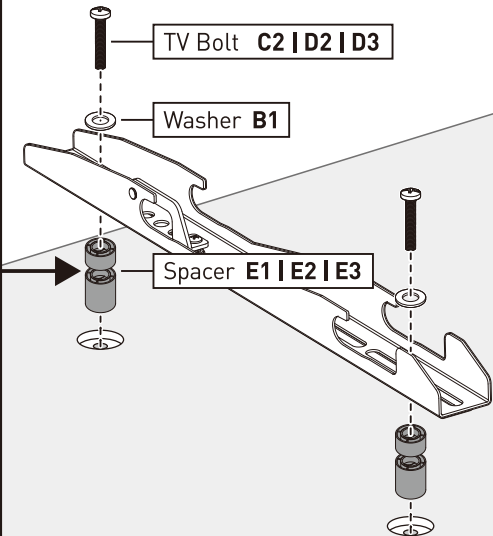


STEP 2 Mount the Arm Assembly / Wall Plate on the Wall

For mounting on wood stud walls, go to Option A on page 09 to 10.
For mounting on solid concrete, go to Option B on page 11 to 12.




Option A

For **Wood Stud Installation**


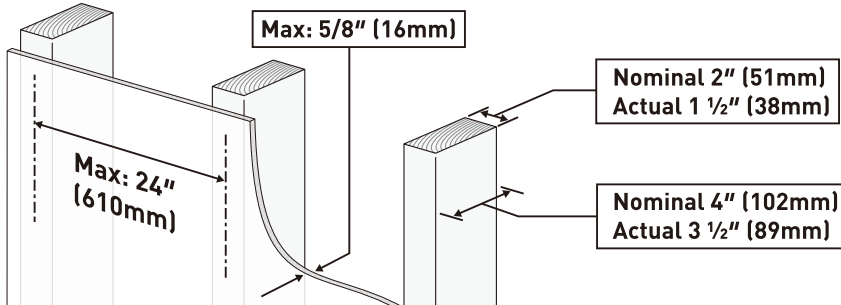


Tools Needed (Not Included)

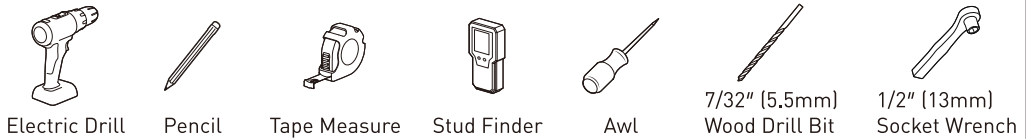


WARNING:


- Avoid the risk of personal injury or property damage! Tighten the lag screws **A** and washers **B** only until they are pulled firmly against the wall plate (**DO NOT overtighten**). Do not use a drill; only use a socket wrench.
- Do not use wall anchors **C** for this mounting option.

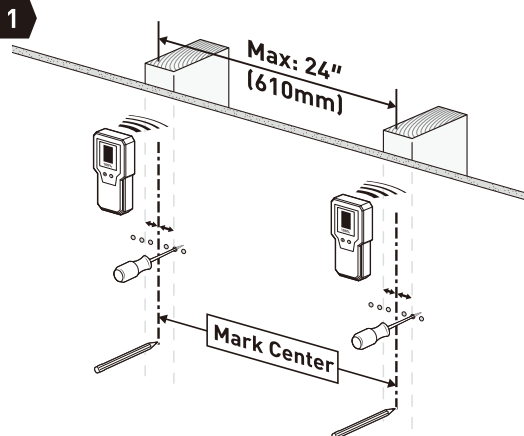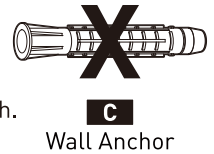

Find Studs and Mark Holes

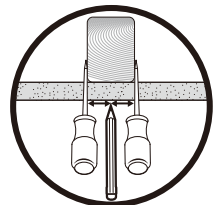


2

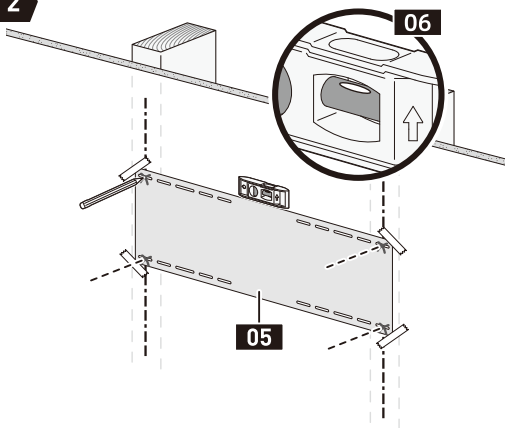

Mark 4 Hole Positions


3

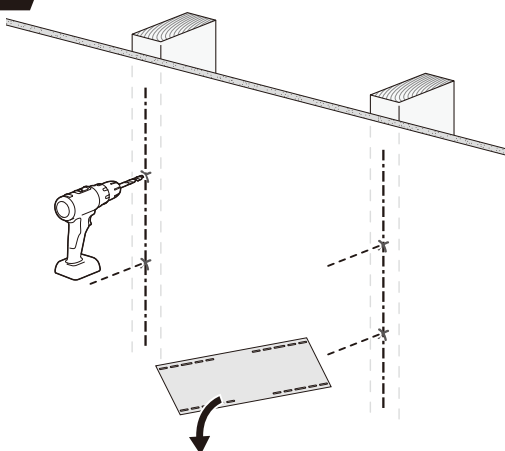


Drill 4 Holes



Note: Be sure to use the specified drill bit.

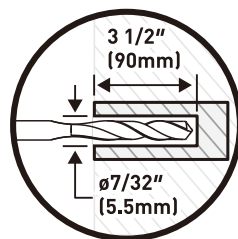


4

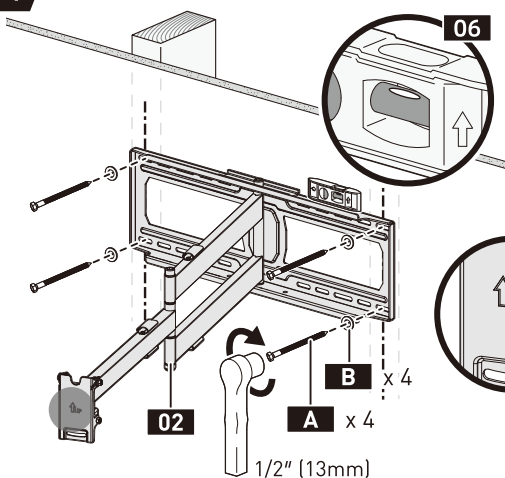

Secure the Wall Plate



 
HEAVY! You may need assistance with this step.



Option B

For **Solid Concrete Installation**

Min: 8" (203mm)

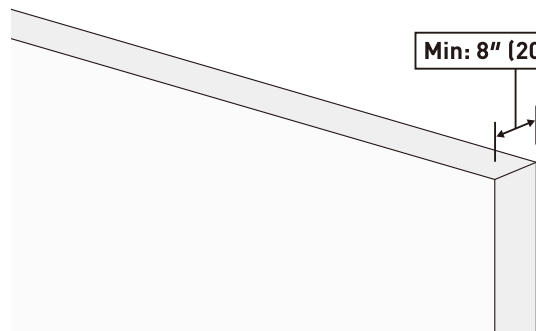

Tools Needed (Not Included)



Electric Drill



Pencil



Tape Measure



Hammer



3/8" (10mm)
Concrete Drill Bit



1/2" (13mm)
Socket Wrench

WARNING:


- Avoid the risk of personal injury or property damage! Tighten the lag screws **A** and washers **B** only until they are pulled firmly against the wall plate (**DO NOT overtighten**). Do not use a drill; only use a socket wrench.
- Use wall anchors **C** for this mounting option.
- Mount the arm assembly / wall plate directly on the concrete surface.



C

Wall Anchor

1

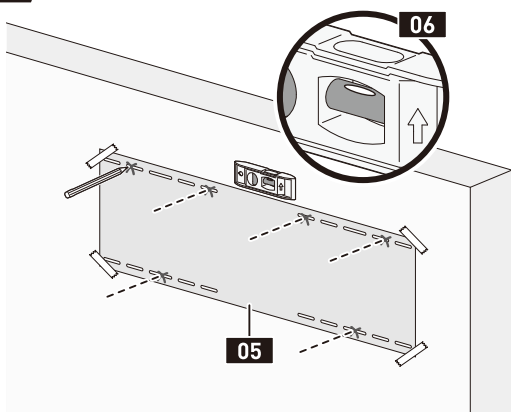


Mark 6 Hole Positions




Note: Mark 2 upper holes near the outside of the template and 2 closest to the middle.

2

Drill 6 Holes


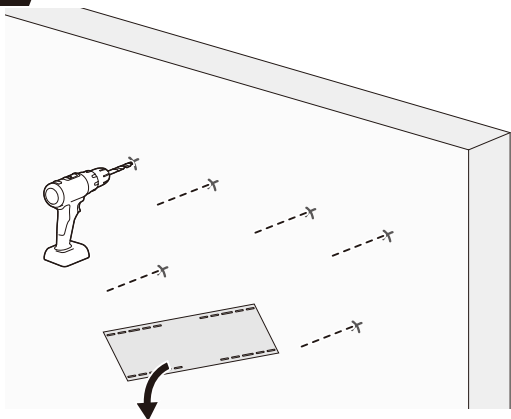


Note: Be sure to use the specified drill bit.

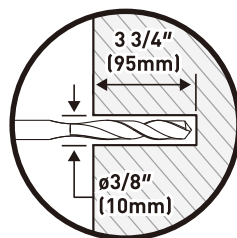


3

Tap Wall Anchors In

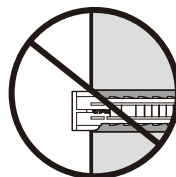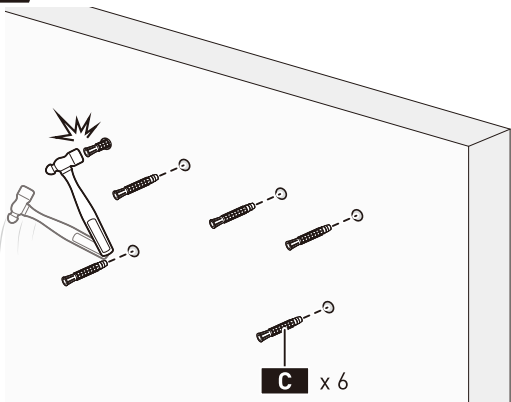


4




Secure the Wall Plate

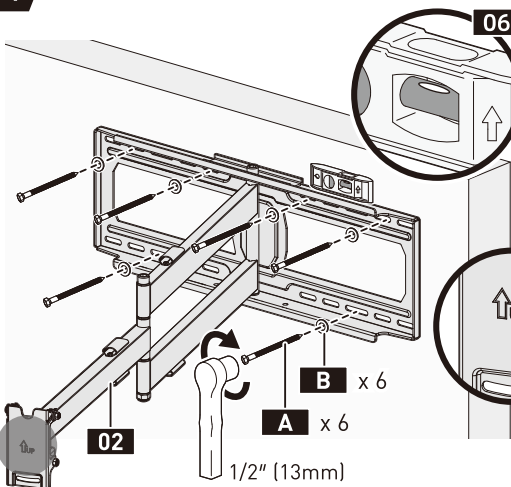




HEAVY! You may need assistance with this step.


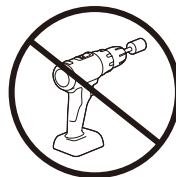


STEP 3 Verify Wall Plate is Firmly Mounted

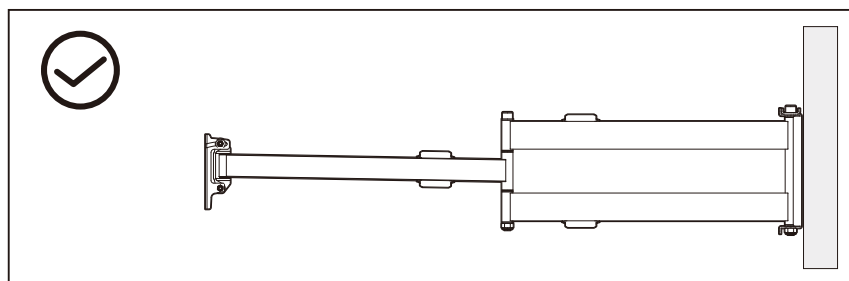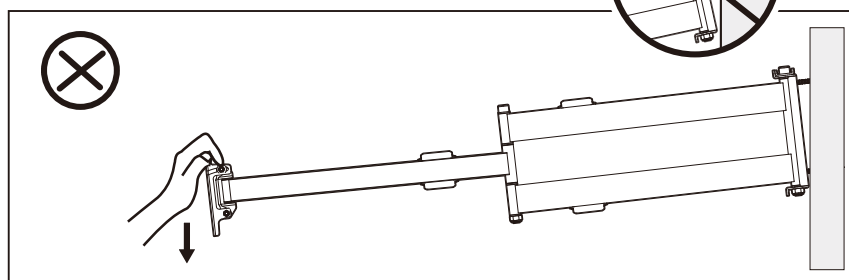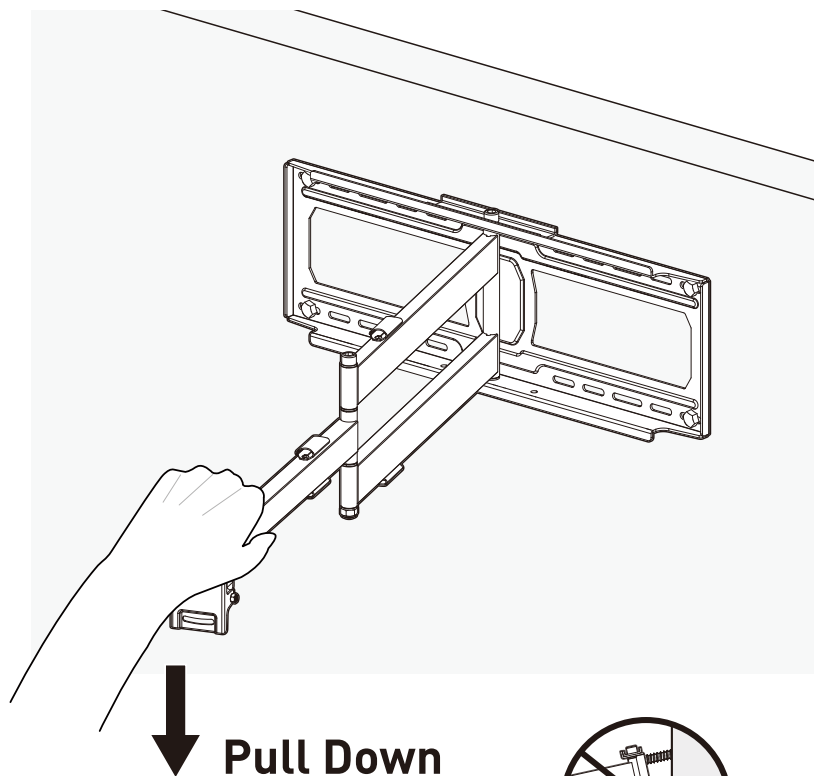


STEP 4 Attach the Front Support to the Arm Assembly

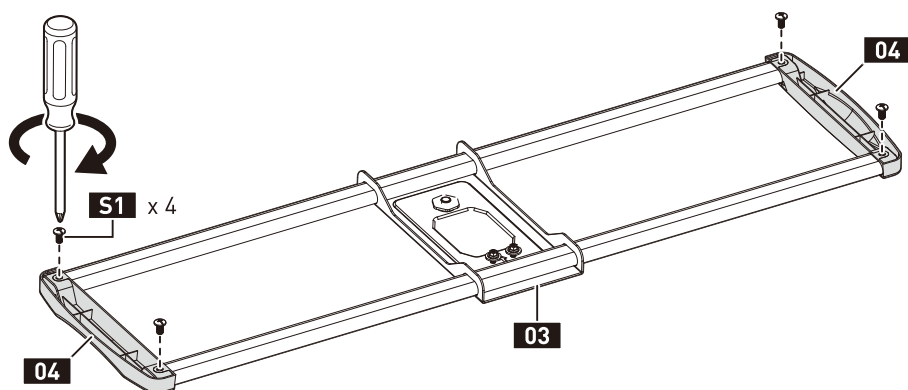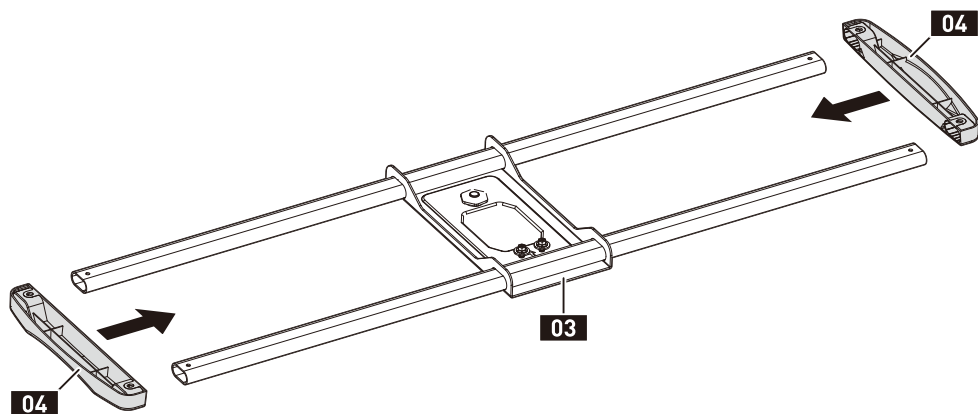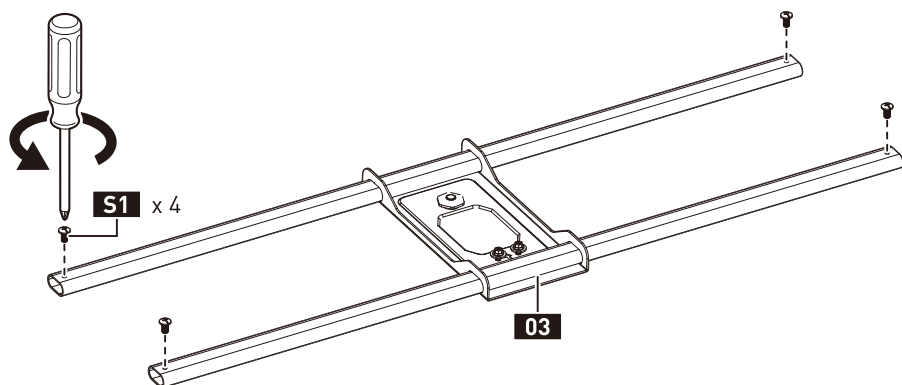

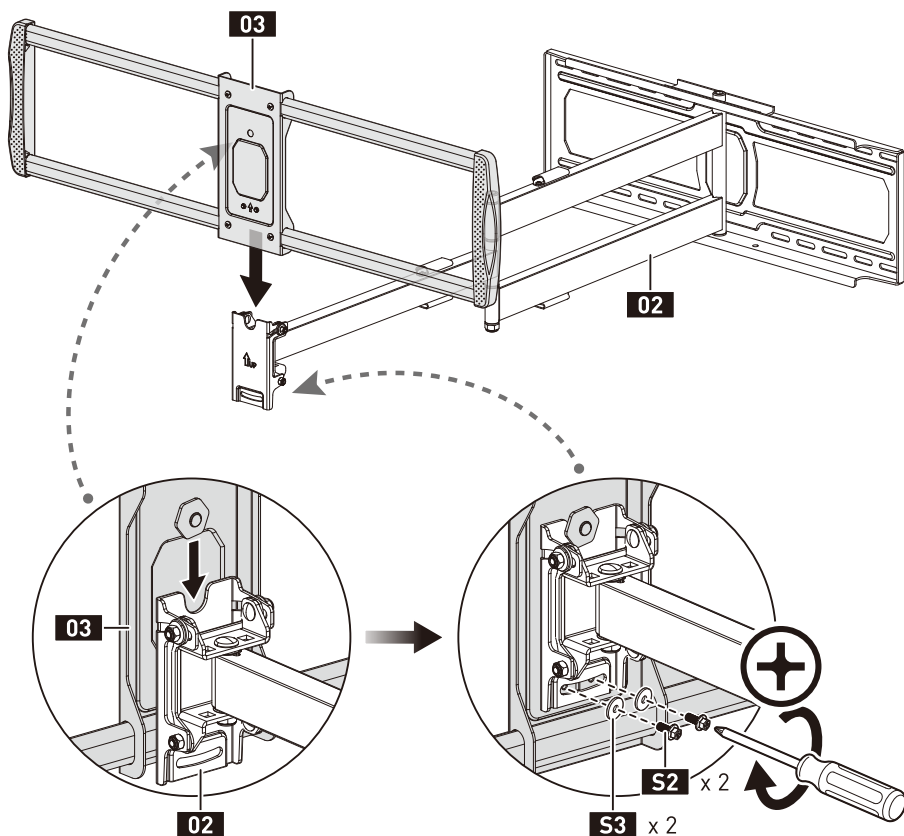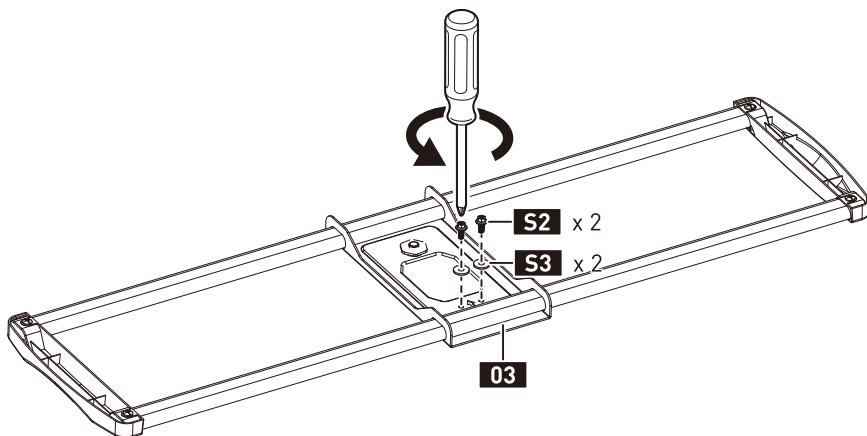


Make sure the upper nut fits into the groove on the connector. Attach and secure the bolts **S2** and washers **S3**.

STEP 5 Hang TV on the Front Support

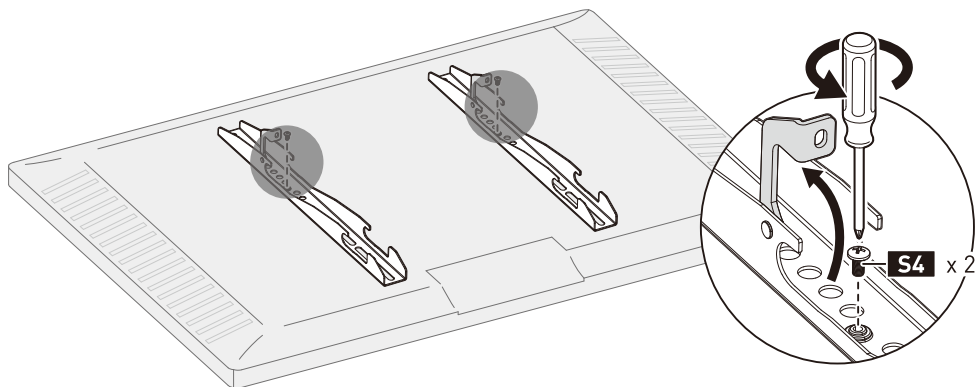

HEAVY! You may need assistance with this step.

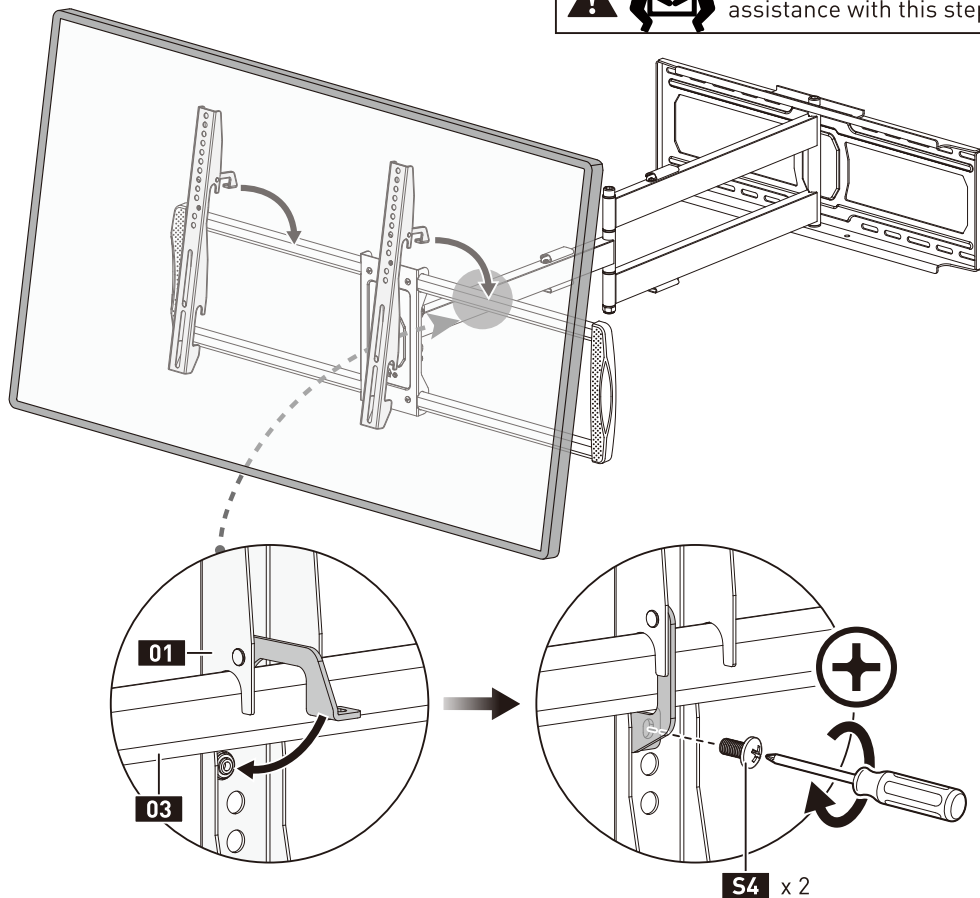


Hang the TV using the hooks on both brackets. Close the safety locks and secure with bolts **S4**.

STEP 6 Tilt Adjustment



NOTE: Please DO NOT overtighten or overloosen the nuts **T**.

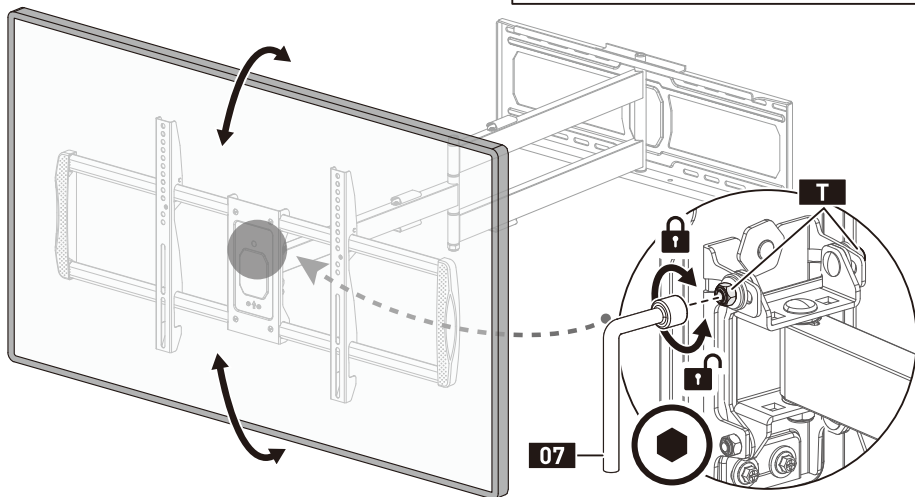


Slightly loosen the tilt nuts **T**, then tilt your TV. Retighten the tilt nuts **T** to hold the TV in position.

STEP 7 Level Adjustment



NOTE: Please DO NOT overtighten or overloosen the bolts **S2**.

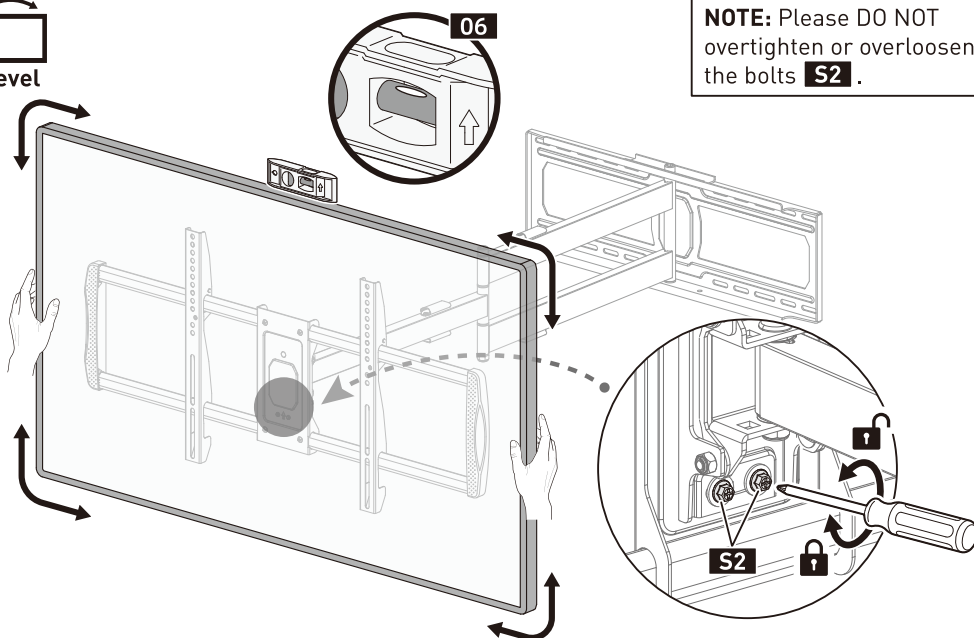

If it is difficult to level your TV, slightly loosen 2 leveling bolts **S2**, then level your TV. Retighten the leveling bolts **S2** to hold the TV in place.



PERLESMITH

MAGNIFY YOUR AUDIO-VISUAL EXPERIENCE

