

**KICKER®**

---

**KMC** | **Media Centers**

**KMC MULTI-MEDIA RECEIVER WITH USB and BLUETOOTH**

**KMC10**


Owner's Manual

English | Deutsch | Español | Français



### Media Center

Multi-Media Receiver w/ USB and Bluetooth

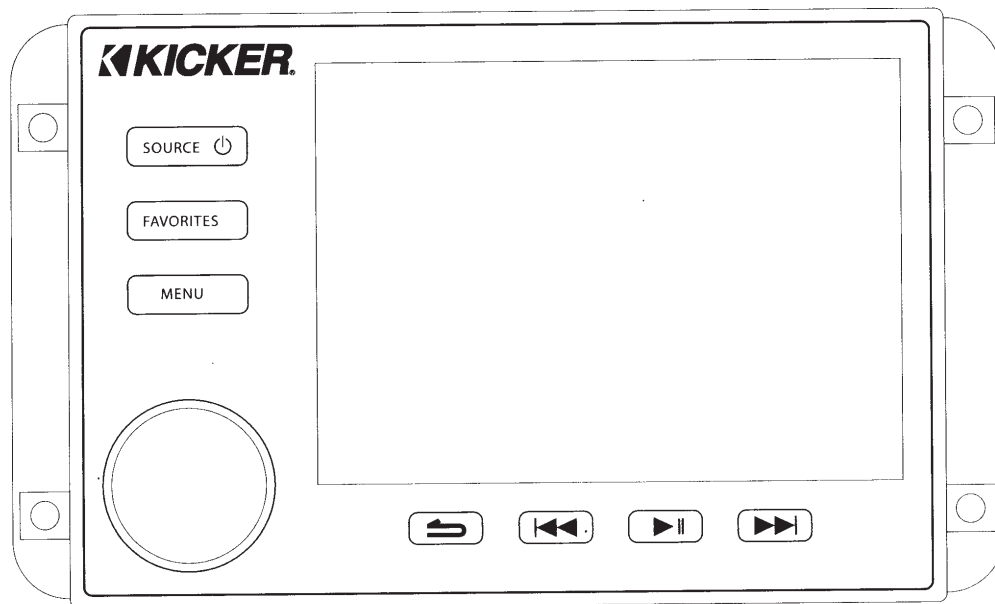

Thank you for purchasing the KMC10 Media Center. We recommend reading through the entire manual for detailed instructions on how to install and operate the unit. For support please call: 1-800-844-2774

Authorized KICKER Dealer: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Serial Number: \_\_\_\_\_

#### ITEMS INCLUDED:


(1) KMC10 (Media Receiver) (1) TrimRing (1) Harness





# INSTALLATION OVERVIEW

---

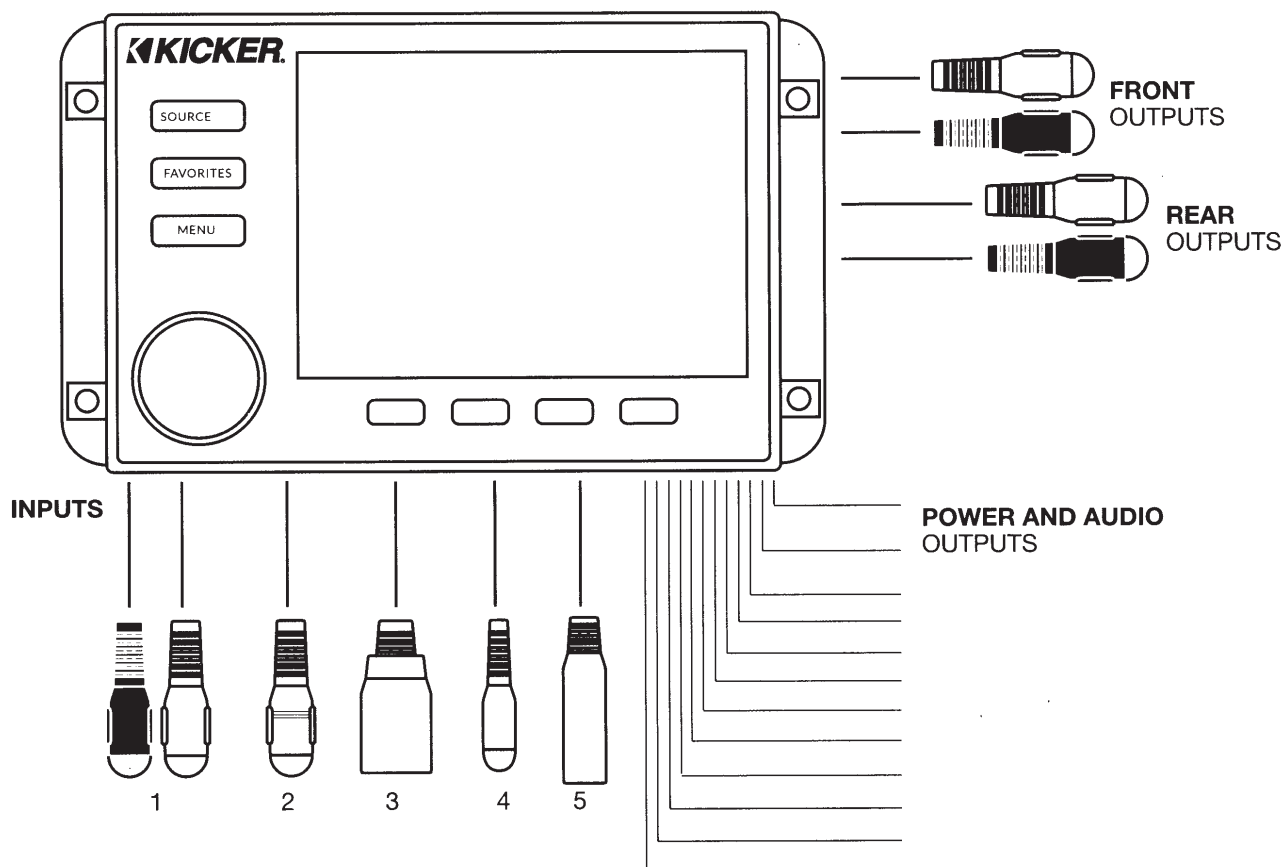

## OVERVIEW:

- 1 - Auxiliary Input
- 2 - KRC15 Remote Port
- 3 - USB Input (iPod Port)
- 4 - PXIRCX Remote Port
- 5 - Antenna Input

---

## WIRING COLOR CODES

Black	= Ground
Red	= Accessory 12V (Switched)
Orange	= Illumination (100mA Max)
Blue/White	= Amplifier Turn-On
White	= Left Front (+)
White/Black	= Left Front (-)
Gray	= Right Front (+)
Gray/Black	= Right Front (-)
Green	= Left Rear (+)
Green/Black	= Left Rear (-)
Purple	= Right Rear (+)
Purple/Black	= Right Rear (-)




## OPERATION

---

The button layout below will give you a quick overview of the button functionality. The Warning display will last approximately 25 seconds on start up.

### BUTTONS:

- 1 - Source
- 2 - Favorites
- 3 - Menu
- 4 - Back/Return
- 5 - Seek/Tune Down
- 6 - Play/Pause
- 7 - Seek/Tune Up
- 8 - Volume Knob

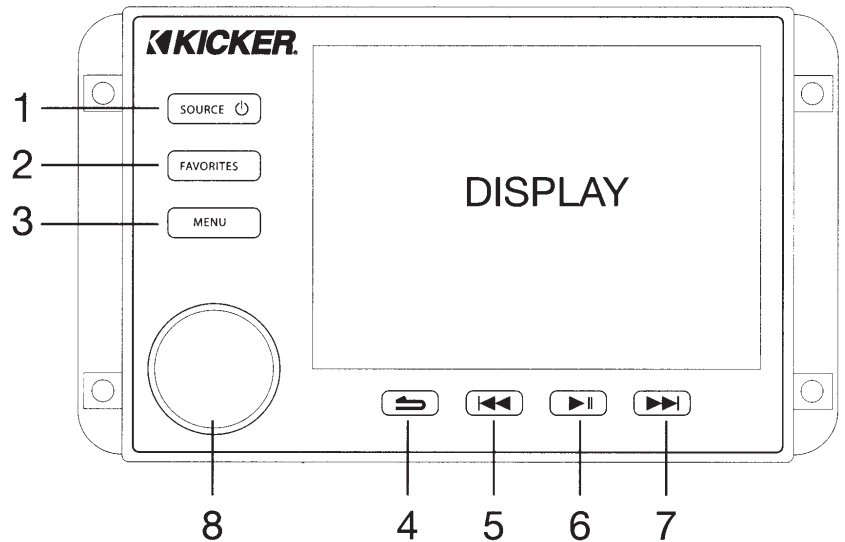

### Function:

### How To:

Power On	Press the Source (1) button once.
Power Off	Hold the Source (1) button for 2 seconds.
Volume Up	Turn the knob (8) clockwise.
Volume Down	Turn the knob (8) counter-clockwise.
Seek Up	Press Seek Up (7) once.
Seek Down	Press Seek Down (5) once.
Tune Up	Hold down Seek Up (7).
Tune Down	Hold down Seek Down (5).
Enter/Select	Press the Knob (8) inward once.
Pause/Play	Press Play/Pause (6) once.
Mute	Press Play/Pause (6) once.
Back	Press Back (4) once.

---

## KMC10 Settings MENU

To enter the Settings Menu : Hold the MENU (3) button for 2 seconds.

Rotate the knob to scroll between menu items and press enter on knob to select.



## OPERATION

---

### **Available Settings are:**

#### **Day/Night:**

The Day/Night feature allows you to change the color scheme from Day Mode to Night Mode. The unit is defaulted to auto switch when your lights are turned on. In order for the unit to automatically switch between day and night modes, the orange illumination wire must be connected. You can also set the unit to stay in either Day mode or Night mode by rotating the knob and selecting the desired setting.

#### **Illumination:**

The Illumination feature allows you turn ON or OFF the blue LED border around the screen.

#### **Dimmer:**

The Dimmer allows you to adjust the brightness of the screen, buttons, and LED border. You can adjust the brightness from 0 to +10.

#### **Background:**

The Background feature allows you to choose from 4 different wallpapers for your screen.

#### **Low Battery:**

The Low Battery setting allows you to disable the Low Battery Alert. If the unit drops below 10.5V, the unit will display a visual and audible alert warning that your batteries need charged.

#### **Aux 1:**

This setting allows you to rename the AUX1 source. Choose from a selection of 5 different names with icons such as TV, NAV, MP3, MEDIA, and AUX.

#### **Tuner:**

Allows you to change the region for the tuner.

Your available options:

N. America - Latin America - Europe - Russia - Australia - Middle East - Asia - Japan



## OPERATION

---

### Sources

To change any of the sources, press the Source button on the KMC10. Rotating the knob left or right will scroll through the available sources and pressing enter will select the source.

### FM Source:

Function:	How To:
Seek Up:	Press the Seek Up (7) button once.
Seek Down:	Press the Seek Down (5) button once.
Tune Up:	Hold the Tune Up (7) button for 2 seconds. Then press (7) once.
Tune Down:	Hold the Tune Down (5) button for 2 seconds. Then press (5) once.
Mute:	Press the Play/Pause button.

### AM Source:

Function:	How To:
Seek Up:	Press the Seek Up (7) button once.
Seek Down:	Press the Seek Down (5) button once.
Tune Up:	Hold the Tune Up (7) button for 2 seconds. Then press (7) once.
Tune Down:	Hold the Tune Down (5) button for 2 seconds. Then press (5) once.
Mute:	Press the Play/Pause button.

### Weatherband (WX) Source:

Function:	How To:
Seek Up:	Press the Seek Up (7) button once.
Seek Down:	Press the Seek Down (5) button once.
Tune Up:	Hold the Tune Up (7) button for 2 seconds. Then press (7) once.
Tune Down:	Hold the Tune Down (5) button for 2 seconds. Then press (5) once.
Mute:	Press the Play/Pause button.

### USB1 Source:

Function:	How To:
Next Track:	Press the Seek Up (7) button once.
Previous Track:	Press the Seek Down (5) button once.
Fast Forward:	Hold the Tune Up (7) button.
Rewind:	Hold the Tune Down (5) button.
Pause:	Press the Play/Pause button.

The USB1 source will automatically detect the connected device.  
The USB1 source will read iPod/iPhone/iPad, MP3/WMA files. Does not support video files.



## OPERATION

---

### Sources Cont.

#### Aux1 Source:

<b>Function:</b>	<b>How To:</b>
Mute:	Press the Play/Pause button.

The AUX1 Source allows for any connection via the Audio Left & Right RCA Input.

#### Bluetooth (BT) Source:

<b>Function:</b>	<b>How To:</b>
Next Track:	Press the Seek Up (7) button once.
Previous Track:	Press the Seek Down (5) button once.
Pause:	Press the Play/Pause button.

The Bluetooth Source is for music (A2DP) streaming only.

Bluetooth Device Name: Media Center. There is no password required.

This unit does not offer the Hands-Free profile.

---

## FAVORITES

The Favorites button will allow you to view and set your favorite station from the following sources: FM - AM - WX 10 favorites can be set.

### Setting a Favorite

1. Select the station you wish to add to the favorites list.
2. Press the Favorites button and select the Favorites preset you wish to set.
3. Press and Hold the ENTER (8) button for 2 seconds to set.



## OPERATION

---

### Audio Settings

**Audio Menu:** Press the knob for 2 seconds from any source screen to enter the Audio Settings Menu. Rotating the knob left and right will scroll between the available settings. Pressing the knob will select high-lighted setting.

**Bass:** Rotate the knob left and right to adjust the Bass. Pressing enter will confirm setting. Adjustment is from -6 to +6.

**Mid:** Rotate the knob left and right to adjust the Midrange. Pressing enter will confirm setting. Adjustment is from -6 to +6.

**Treble:** Rotate the knob left and right to adjust the Treble. Pressing enter will confirm setting. Adjustment is from -6 to +6.

**Balance:** Rotate the knob left and right to adjust the Balance. Pressing enter will confirm setting. Adjustment is from Left 10 to Right 10.

**Fader:** Rotate the knob left and right to adjust the Fader. Pressing enter will confirm setting. Adjustment is from Front 10 to Rear 10.

---

### Source Specific Menus

Press and release of the Menu button while in the following sources will bring up Source Specific Menu items: WX - USB - BT - AUX. Rotate the knob to adjust the settings and press enter to confirm.

#### **WX Menu:**

Auto-Alert On and OFF - this feature will automatically interrupt any source and tune to Weatherband for an alert message. This setting is defaulted to ON.

#### **USB1/ iPod Menu:**

BROWSE - Displays all files/folders available for playback. Rotate the knob to scroll through the items and press enter to begin playback of selected track.



## **OPERATION**

---

### **Source Specific Menus Cont.**

#### **USB1/ iPod Menu:**

**REPEAT** - Allows you to select Repeat for Current Track, Repeat all Tracks, or Repeat Off.

**SHUFFLE** - Allows you to turn Shuffle tracks on and off.

**SEARCH** - Allows you to search files and folders of the USB device and to search the iPod menu for specific Playlist, Artists, Songs, Genre, and Compilations. Rotate the knob to highlight alphanumeric characters and press enter to input the highlighted character. When done, pressing accept will populate a list of matching items.

**DME** - Digital Music Enhancer. This feature will enhance the sound quality of compressed music files.

#### **BLUETOOTH Menu:**

**ENTER PAIRING MODE** - Places the device in to pairing mode.

Device Name: Media Center

In order to pair your phone to the Media Center you must:

1. Make sure the Bluetooth is turned "ON", on your device.
2. Search for "Media Center".
3. Connect/ Trust the device to begin streaming music.

(No password required)

**DISCONNECT CURRENT DEVICE** - Allows you to disconnect the currently paired device from Kicker Media Center.

**DELETE ALL DEVICES** - Deletes all devices from the KMC10 paired list. The unit will return to pairing mode.

**CONNECT LAST DEVICE** - Connects KMC10 to the last known paired device that has Bluetooth turned on.

**CHANGE BLUETOOTH NAME** - Allows the user to change the KMC10 Bluetooth name "Media Center" to a name of your choice. A maximum of 12 characters is allowed.



# TROUBLESHOOTING

---

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures. If the problem is not solved, please contact your local KICKER retailer or call 1-800-844-2774.

## General

**No power is being supplied to the unit-** Check to ensure 12V is being supplied to the red wire and the black wire has a good ground.- Press the Source button.

**No Sound-** Check to ensure amplifiers (if applicable) are on.- Check to ensure fader is in the middle (0) position.

**The buttons will not function-** Perform Master Reset by holding the Play/Pause button down for 5 seconds.

## Radio Reception

**Stations cannot be received-** Check Antenna for proper connection.- The broadcast signal is too weak.- Ensure Tuner in Settings Menu is set to proper region.

## RDS

**RDS Information is not displayed-** The current station is not an RDS station.- RDS data has not been received.

## USB playback

**You cannot play back items via a USB hub.-** This unit cannot recognize USB devices via a USB hub.

**A USB device takes longer to play back.-** The USB device contains files with a complicated tree structure.


**The sound is intermittent.-** The sound may be intermittent at a high-bit-rate of more than 320 kbps.




## Accessories

---

The KRC15 (Not Included) is a wired remote for the KMC media center. Completely water-proof, you can mount it at any location on the boat for convenient access. For information on how to obtain the KRC15 remote contact us directly or your local retailer.

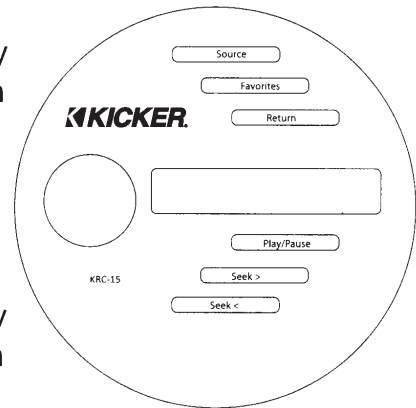

The PXIRCX (Not Included) is a wired remote for the KMC media center. Completely water-proof, you can mount it at any location on the boat for convenient access. For information on how to obtain the PXIRCX remote contact us directly or your local retailer.

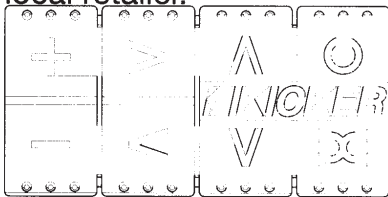

---

## WARRANTY

### Electronics Limited Warranty (including KICKER Accessories)

When purchased from an Authorized KICKER Dealer, CPS warrants this product to be free from defects in material and workmanship under normal use for a period of ONE (1) YEAR from date of original purchase with receipt. If this product is identified as “Refurbished” or “B Goods”, the warranty is limited to a period of THREE (3) MONTHS from the date of original purchase. In all cases you must have the original receipt. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction during the warranty period, CPS will repair or replace (at its discretion) the defective merchandise with equivalent merchandise. Warranty replacements may have cosmetic scratches and blemishes. Discontinued products may be replaced with more current equivalent products. Warranty is valid only for the original purchaser and is not extended to owners of the product subsequent to the original purchaser. Any applicable implied warranties are limited in duration to a period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter.



