 


X One Adapter enables you to use Xbox One controller to play games on Nintendo Switch, PS4, PC and Xbox One.

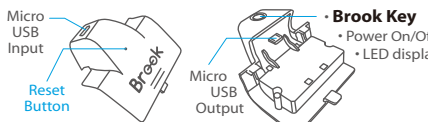

* If there's any problem with X One Adapter, press the reset button to reset.

Device mode and pairing instruction


- How to switch between different modes:
- When X One Adapter is off, long press the **Brook Key** for about 2 seconds until the **Brook Key** LED starts to flash.
 - When the **Brook Key** LED starts to flash, long press the combo keys until the LED goes off to switch to according mode.

Mode	Combo Keys	Wired/Wireless	Motion Sensor	Vibration	Headset Support	Remap	Turbo
PS4		Wired Wireless	V V	V V	V V	V V	V V
Switch		Wired Wireless	V V	V V	V V	V V	V V
PC		Wired Wireless		V V	V V	V V	V V
Xbox One		Wired Wireless (no battery)	V V	V V	Do It In Xbox One Setting		


Button configuration

Xbox One	PS4	Switch	PC
UP	UP	UP	UP
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
A	X	B	A
B	O	A	B
X	□	Y	X
Y	△	X	Y
Menu	OPTIONS	+	Menu
View	Touch Key	-	View
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
RTSB	L3	RTSB	RTSB
RTSB	R3	RTSB	RTSB
Xe	PS	Home	Xe

 * Brook Key = Share

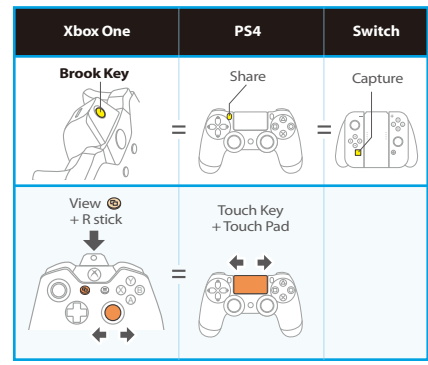


On PS4 (*Wired use for the first time)

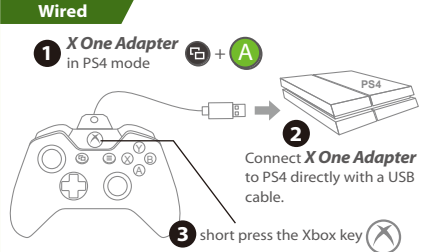 


Wireless

 - For the first time use:
- After completing wired use, disconnect the USB cable and short press the **Brook Key** to awake the controller for wireless.
- For future use:
- Short press the **Brook Key** to awake the controller for wireless use.

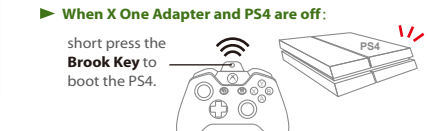

On Switch (*Wired use for the first time)

 - X One Adapter in Switch mode.
- On switch, go to System Settings → Controllers and Sensors, and turn ON Pro Controller Wired Communication.



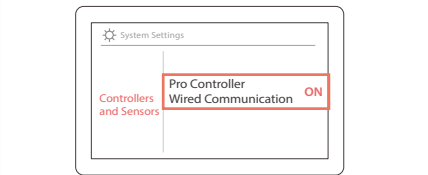


Wireless



Pairing Method

   - For the first time use:
- Go to controllers.

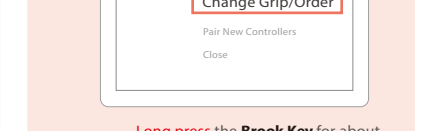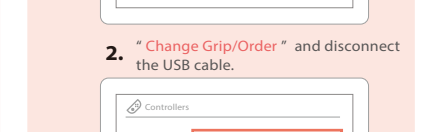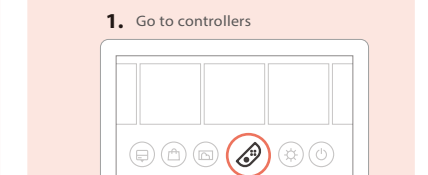


- For future use:
- When Switch has turned on, short press the **Brook Key** to awake the controller for wireless use.

OR

Pairing Method

 - X One Adapter in Switch mode.

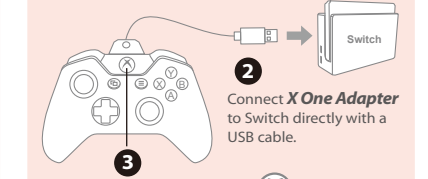

- For the first time use:
- After completing wired use, disconnect the USB cable and short press the **Brook Key** to awake the controller for wireless use.
- For future use:
- Short press the **Brook Key** to awake the controller for wireless use.

► If it cannot be successfully paired:

Reboot Switch and do it again.

* There's irregular update. If you have any problem using the product, please log on to Brook's website for the latest information.

For more details please visit our official website at www.brookaccessory.com

We back you up Brook Gaming

 
 
201909V8

How to install




Remove the Xbox One controller battery cover and take out the batteries.

How to charge the battery and the LED display

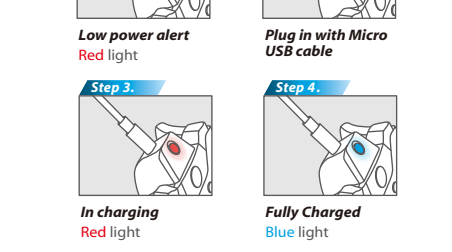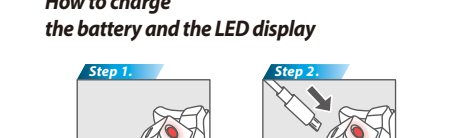

Turbo Setting

 
Turbo function available buttons: A・B・X・Y・LB・RB・LT・RT・RTSB・RTSB・Paddles (1・2・3・4), in total 14 buttons (referred to as **FK**). For paddles, you need to clear the original setting on Xbox One before setting turbo on them.

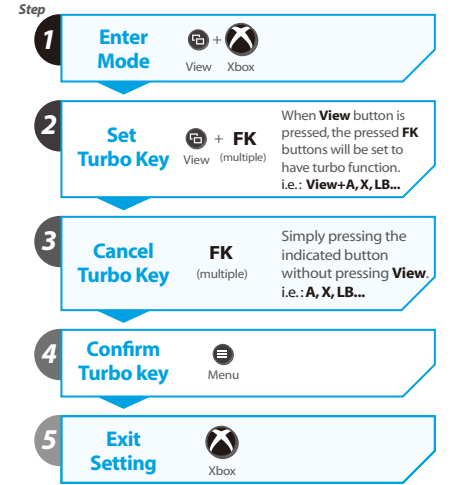

*After step 5(Exit Setting), press Brook Key + Menu (LED display will go off) to save the Turbo setting.

Remap Setting

 Remap function available buttons: ↑・↓・←・→・A・B・X・Y・LB・RB・LT・RT・RTSB・RTSB・Paddles (1・2・3・4), in total 14 buttons (referred to as **FB**).

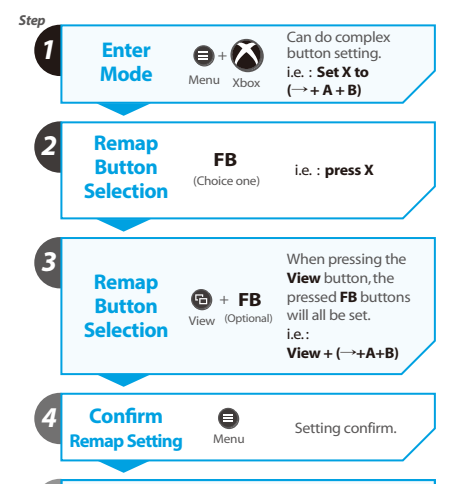

*After step 5(Exit Setting), press Brook Key + Menu (LED display will go off) to save the Remap setting.

On Xbox One

- Change to Xbox one mode.
- Connect Xone Adapter to Xbox one directly with a USB cable.

Wireless

*Make sure the controller has synced with the Xbox One console before.

- X One Adapter in Xbox One mode.
- Pairing Method 1: Short press the **Brook Key**, then immediately press and hold the Xbox key until the pairing is completed. When Xbox One is off, it can also boot the Xbox One.

OR

- Pairing Method 2: Press and hold the Xbox key, then short press the **Brook Key**, it will start to pair with Xbox One. When Xbox One is off, it can also boot the Xbox One.

On PC

- X One Adapter in PC mode.
- Connect X One Adapter to PC directly with a USB cable.

Wireless (Bluetooth)

- Change to PC mode.
- Go to Bluetooth on PC → Add Bluetooth or other device. Then, PC will start to search for Bluetooth device.
- When Xone Adapter is off, long press the Brook Key for about 2 seconds until the Brook Key LED starts to flash.
- Find "Brook Xone Adapter" for pairing.
- After pairing is successful, you can test the functionality in Devices and Printers.

*You only need to set Xone Adapter up for first time. For future use, make sure the Bluetooth on PC has turned on, and short press the Brook Key to awake the controller. Then, it will connect to PC with Bluetooth wirelessly.

Cautions

- Please keep away from electrical conductive objects.
- Please do not disassemble the battery or place it in high temperature environment.
- Please recycle the battery when you don't use it.

Product Number	ZPMMN023 / C17030
Input	Micro USB 5V / 500 mA (min)
Output	DC 5V
Capacity	800 mAh
Dimensions	L41mm x W25mm x H6.5mm
Weight	15±2g (Battery Included)

Product Number	ZPPN00A Model X One Adapter Extra
Input	Micro USB 5V / 500 mA (min)
Output	DC 5V
Capacity	1600 mAh
Dimensions	L44mm x W26mm x H13.8mm
Weight	26±2g (Battery Included)

FCC Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device must not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
* There's irregular update. If you have any problem using the product, please log on to Brook's website for the latest information.

For more details please visit our official website at www.brookaccessory.com

We back you up Brook Gaming

201909V8

本製品はX One Adapterは、Xbox One シリーズ用コントローラーにつなぐことで Nintendo Switch、PlayStation 4、Personal Computer、Xbox One 本体と接続してゲームできるようにするアダプターです。

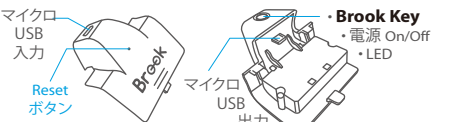

* お使いの X One アダプターが動作していないときは Reset ボタンを押して再起動してください。

プラットフォーム選択と本体ペアリング設定方法


- X One Adapter が点灯していない時、**Brook Key** ボタン点灯するまで 2 秒長押ししてください。
- 点灯してから、以下の表に合わせてコンボキーを押して各プラットフォーム選択してください。

モード	コンボキー	有線/無線	モーションセンサー	モーター振動	データ入出力	ボタン割り当て	連射ボタン
PS4		有線 無線	V V	V V	V V	V V	V V
Switch		有線 無線	V V	V V	V V	V V	V V
PC		有線 無線		V V	V V	V V	V V
Xbox One		有線 無線 (バッテリーとして動作)	V V	V V		Xbox 設定を使用する	

ボタン対応表

Xbox One	PS4	Switch	PC
UP	UP	UP	UP
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
A	X	B	A
B	O	A	B
X	□	Y	X
Y	△	X	Y
Menu	OPTIONS	+	Menu
View	Touch Key	-	View
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
RTSB	L3	RTSB	RTSB
RTSB	R3	RTSB	RTSB
Xe	PS	Home	Xe

 * Brook Key = Share

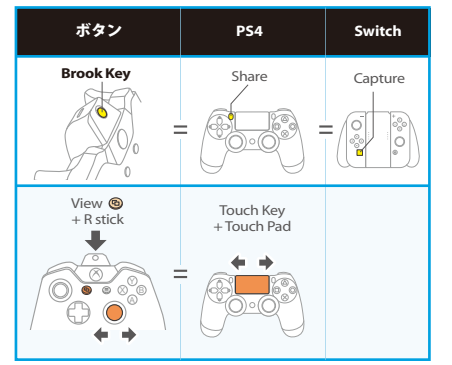

PS4 とペアリング (* 初回必ず有線で行う)



無線でつなぐ

- 初回設定で:
- 有線で行って、1 2 3 までのステップを完了する前提として、USB ケーブルを本体からはずし、**Brook Key** を押して無線でコントローラーを使えます。
- 初回設定済み:
- 本体とつなぐ必要がありません。そのまま **Brook Key** を押せば PS4 で操作できます。



Switch とペアリング (* 初回必ず有線で行う)

- Switch モードに切り替えます。
- Switch 本体の設定画面の System Settings → Controllers and Sensors の Pro Controller Wired Communication を ON にしてください。





無線でつなぐ



ペアリング方法その 1

  - 初回設定:

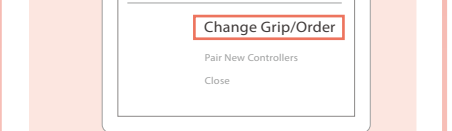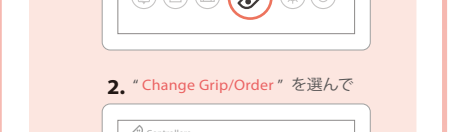

- 初回設定済み:
- 本体とつなぐ必要がありません。そのまま **Brook Key** を押せば Switch で操作できます。

或いは

ペアリング方法その 2

- Switch モードに切り替えます。



- 初回設定で:
- 有線で行って、1 2 3 までのステップを完了する前提として、USB ケーブルを本体からはずし、**Brook Key** を押して無線でコントローラーを使えます。
- 初回設定済み:
- 本体とつなぐ必要がありません。そのまま **Brook Key** を押せば Switch で操作できます。

► ペアリングよく出来ない場合:

Switch 本体をリセットください。

For more details please visit our official website at www.brookaccessory.com

We back you up Brook Gaming

 
201909V8

取り付け方



Remove the Xbox One controller battery cover and take out the batteries.

充電方法 & LED

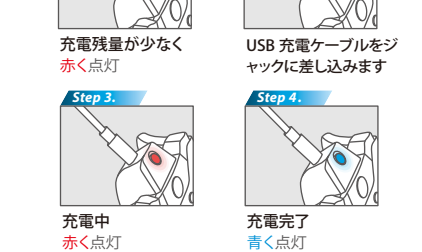

Turbo 連打設定モード

A・B・X・Y・LB・RB・LT・RT・RTSB・RTSB・Paddles (1・2・3・4) の全 14 ボタン (以下 **FK** と表記します) をボタン対応および連打設定に使えます。



*After step 5(Exit Setting), press Brook Key + Menu (LED display will go off) to save the Turbo setting.

Remap ボタン対応変更設定モード

Remap 機能は ↑・↓・←・→・A・B・X・Y・LB・RB・LT・RT・RTSB・RTSB の全 14 ボタン (以下 **FB** と表記します) を組み合わせボタン対応設定に使えます。



*After step 5(Exit Setting), press Brook Key + Menu (LED display will go off) to save the Remap setting.

On Xbox One

- Change to Xbox one mode.
- Connect Xone Adapter to Xbox one directly with a USB cable.

Wireless

*Make sure the controller has synced with the Xbox One console before.

- X One Adapter in Xbox One mode.
- Pairing Method 1: Short press the **Brook Key**, then immediately press and hold the Xbox key until the pairing is completed. When Xbox One is off, it can also boot the Xbox One.

OR

- Pairing Method 2: Press and hold the Xbox key, then short press the **Brook Key**, it will start to pair with Xbox One. When Xbox One is off, it can also boot the Xbox One.

On PC

- X One Adapter in PC mode.
- Connect X One Adapter to PC directly with a USB cable.

Wireless (Bluetooth)

- Change to PC mode.
- Go to Bluetooth on PC → Add Bluetooth or other device. Then, PC will start to search for Bluetooth device.
- When Xone Adapter is off, long press the Brook Key for about 2 seconds until the Brook Key LED starts to flash.
- Find "Brook Xone Adapter" for pairing.
- After pairing is successful, you can test the functionality in Devices and Printers.

*You only need to set Xone Adapter up for first time. For future use, make sure the Bluetooth on PC has turned on, and short press the Brook Key to awake the controller. Then, it will connect to PC with Bluetooth wirelessly.

Cautions

- Please keep away from electrical conductive objects.
- Please do not disassemble the battery or place it in high temperature environment.
- Please recycle the battery when you don't use it.

Product Number	ZPMMN023 / C17030
Input	Micro USB 5V / 500 mA (min)
Output	DC 5V
Capacity	800 mAh
Dimensions	L41mm x W25mm x H6.5mm
Weight	15±2g (Battery Included)

Product Number	ZPPN00A Model X One Adapter Extra
Input	Micro USB 5V / 500 mA (min)
Output	DC 5V
Capacity	1600 mAh
Dimensions	L44mm x W26mm x H13.8mm
Weight	26±2g (Battery Included)

FCC Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device must not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

* There's irregular update. If you have any problem using the product, please log on to Brook's website for the latest information.

For more details please visit our official website at www.brookaccessory.com

We back you up Brook Gaming

201909V8

X One AdapterはXbox One コントローラーに接続して Nintendo Switch、Playstation 4、PC、Xbox Oneにユーストは主として使用可能な製品です。




* X One Adapter を使用する際は、Xbox One コントローラーの電池を充電してください。

モード 変更 & 登録 方法

- X One Adapter をコントローラーに接続する際は、Xbox One コントローラーの電池を充電してください。
- モード 変更 方法: Xbox One コントローラーの電池を充電してください。

모드	조이스틱 버튼	유선/무선	모션 센서	진동	헤드셋 지원	리맵핑	타
PS4		유선 ☒	☒	☒	☒	☒	☒
		무선 ☒	☒	☒	☒	☒	☒
Switch		유선 ☒	☒	☒	☒	☒	☒
		무선 ☒	☒	☒	☒	☒	☒
PC		유선 ☒		☒	☒	☒	☒
		무선 ☒			☒	☒	☒
Xbox One		유선 ☒		☒	☒	Xbox One에서 설정하세요	☒
		무선 ☒ (에디터는 지원하지 않음)		☒	☒		☒

 X One 轉接器可將 Xbox One 系列手柄透過轉接器與 Nintendo Switch、PlayStation 4、Personal Computer 和 Xbox One 主機連線進行遊戲。

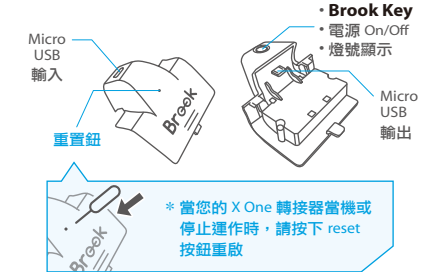

模式切換方式與配對使用說明

X One Adapter 燈燈狀態下：


- 長按 Brook Key 2 秒至 Brook Key 閃燈
- 閃燈時，按壓組合鍵至燈燈以切至不同模式

模式	組合鍵	使用	體感動作	馬達震動	耳機麥克風充	按鍵對應變更	按鍵連發
PS4	PS + A	有線	V	V	V	V	V
		無線	V	V	V	V	V
Switch	PS + B	有線	V	V	V	V	V
		無線	V	V	V	V	V
PC	PS + RB	有線		V	V	V	V
		無線				V	V
Xbox One	PS + RB PS + X (專用電燈)	有線		V	V	請在 Xbox one 主機上設定	

按鍵對應表

Xbox One	PS4	Switch	PC
UP	UP	UP	UP
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
A	X	B	A
B	O	A	B
X	□	Y	X
Y	△	X	Y
Menu	OPTIONS	+	Menu
View	Touch Key	-	View
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
LTSB	L3	LTSB	LTSB
RTSB	R3	RTSB	RTSB
Xe	P5	Home	Xe

 * Brook Key = Share

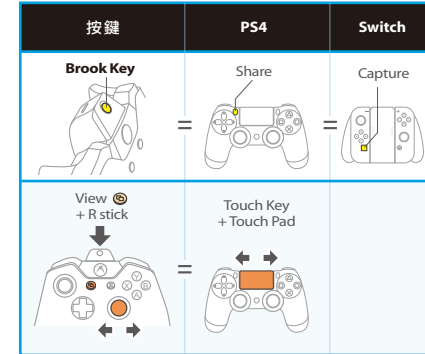


在 PS4 上使用 (* 首次需有線使用)



在 Switch 上使用 (* 首次需有線使用)



 在 PC 上使用

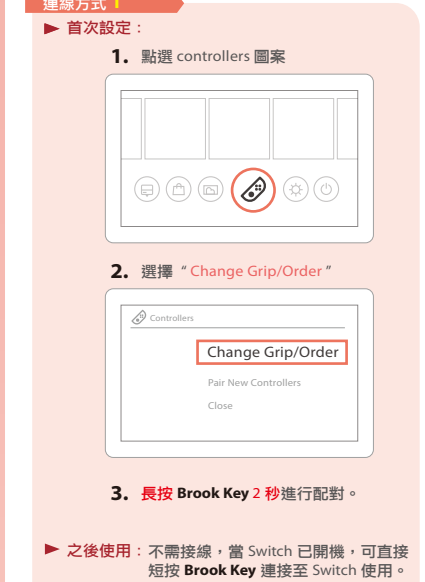

在 Switch 上使用 (* 首次需有線使用)



在 PC 上使用



在 Switch 上使用 (* 首次需有線使用)



X One 轉接器可將 Xbox One 系列手柄透過轉接器與 Nintendo Switch、PlayStation 4、Personal Computer 和 Xbox One 主機連線進行遊戲。



模式切換方式與配對使用說明

X One Adapter 燈燈狀態下：

- 長按 Brook Key 2 秒至 Brook Key 閃燈
- 閃燈時，按壓組合鍵至燈燈以切至不同模式

模式	組合鍵	使用	體感動作	馬達震動	耳機麥克風充	按鍵對應變更	按鍵連發
PS4	PS + A	有線	V	V	V	V	V
		無線	V	V	V	V	V
Switch	PS + B	有線	V	V	V	V	V
		無線	V	V	V	V	V
PC	PS + RB	有線		V	V	V	V
		無線				V	V
Xbox One	PS + RB PS + X (專用電燈)	有線		V	V	請在 Xbox one 主機上設定	


按鍵對應表

Xbox One	PS4	Switch	PC
UP	UP	UP	UP
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
A	X	B	A
B	O	A	B
X	□	Y	X
Y	△	X	Y
Menu	OPTIONS	+	Menu
View	Touch Key	-	View
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
LTSB	L3	LTSB	LTSB
RTSB	R3	RTSB	RTSB
Xe	P5	Home	Xe


* Brook Key = Share



 
在 PS4 上使用 (* 首次需有線使用)

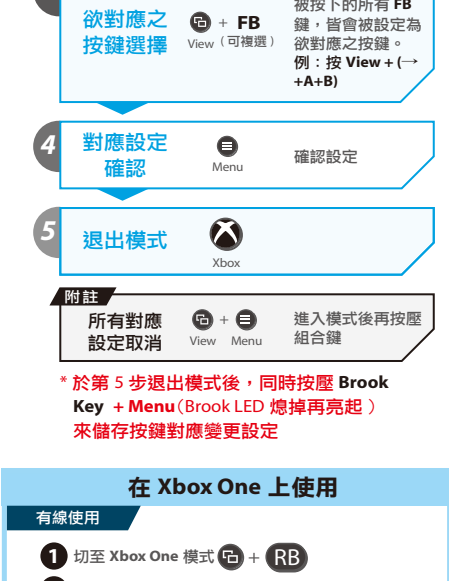


在 Switch 上使用 (* 首次需有線使用)

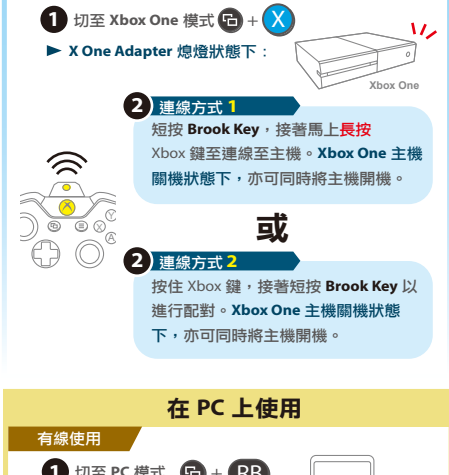 


在 PC 上使用

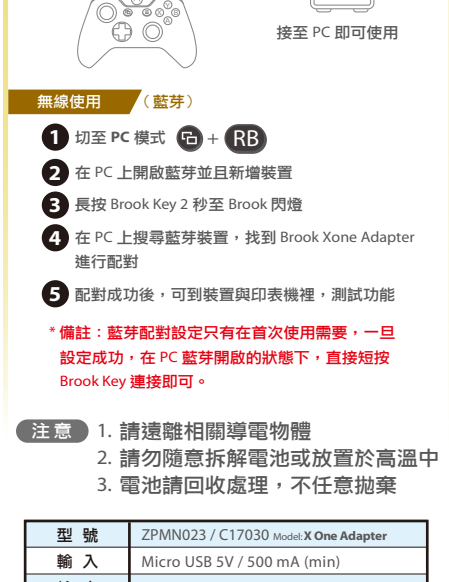 


在 Switch 上使用 (* 首次需有線使用)

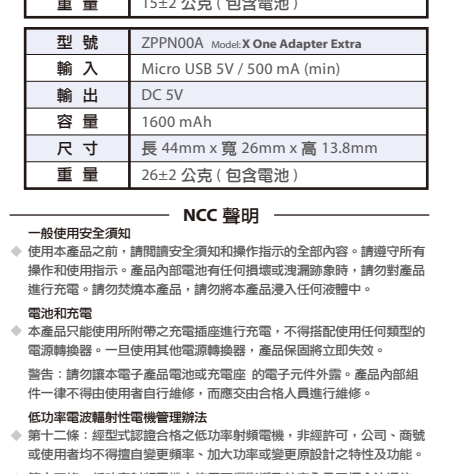 


在 PC 上使用

 

在 Switch 上使用 (* 首次需有線使用)

 

 X One 轉接器可將 Xbox One 系列手柄透過轉接器與 Nintendo Switch、PlayStation 4、Personal Computer 和 Xbox One 主機連線進行遊戲。

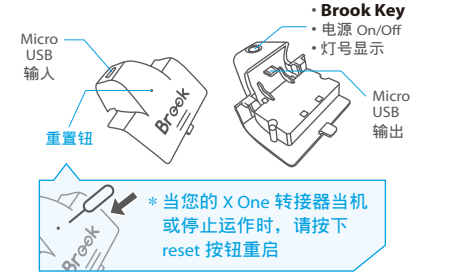

模式切換方式與配對使用說明

X One Adapter 燈燈狀態下：


- 長按 Brook Key 2 秒至 Brook Key 閃燈
- 閃燈時，按壓組合鍵至燈燈以切至不同模式

模式	組合鍵	使用	體感動作	馬達震動	耳機麥克風充	按鍵對應變更	按鍵連發
PS4	PS + A	有線	V	V	V	V	V
		無線	V	V	V	V	V
Switch	PS + B	有線	V	V	V	V	V
		無線	V	V	V	V	V
PC	PS + RB	有線		V	V	V	V
		無線				V	V
Xbox One	PS + RB PS + X (專用電燈)	有線		V	V	請在 Xbox one 主機上設定	

按鍵對應表

Xbox One	PS4	Switch	PC
UP	UP	UP	UP
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
A	X	B	A
B	O	A	B
X	□	Y	X
Y	△	X	Y
Menu	OPTIONS	+	Menu
View	Touch Key	-	View
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
LTSB	L3	LTSB	LTSB
RTSB	R3	RTSB	RTSB
Xe	P5	Home	Xe

 * Brook Key = Share

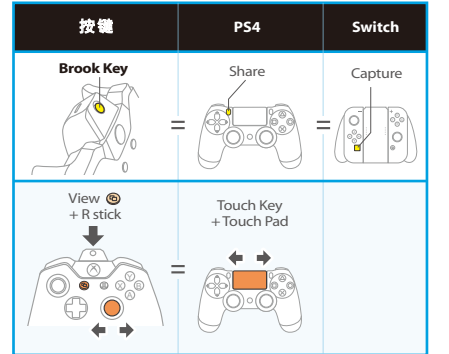


在 PS4 上使用 (* 首次需有線使用)



在 Switch 上使用 (* 首次需有線使用)



 在 PC 上使用

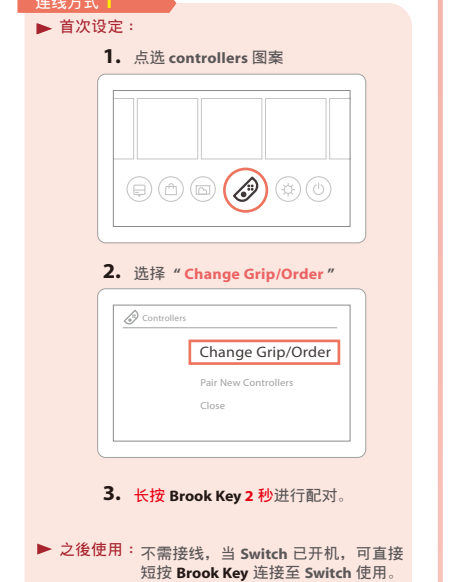

在 Switch 上使用 (* 首次需有線使用)



在 PC 上使用



在 Switch 上使用 (* 首次需有線使用)



X One 轉接器可將 Xbox One 系列手柄透過轉接器與 Nintendo Switch、PlayStation 4、Personal Computer 和 Xbox One 主機連線進行遊戲。



模式切換方式與配對使用說明

X One Adapter 燈燈狀態下：

- 長按 Brook Key 2 秒至 Brook Key 閃燈
- 閃燈時，按壓組合鍵至燈燈以切至不同模式

模式	組合鍵	使用	體感動作	馬達震動	耳機麥克風充	按鍵對應變更	按鍵連發
PS4	PS + A	有線	V	V	V	V	V
		無線	V	V	V	V	V
Switch	PS + B	有線	V	V	V	V	V
		無線	V	V	V	V	V
PC	PS + RB	有線		V	V	V	V
		無線				V	V
Xbox One	PS + RB PS + X (專用電燈)	有線		V	V	請在 Xbox one 主機上設定	

按鍵對應表

Xbox One	PS4	Switch	PC
UP	UP	UP	UP
Down	Down	Down	Down
Left	Left	Left	Left
Right	Right	Right	Right
A	X	B	A
B	O	A	B
X	□	Y	X
Y	△	X	Y
Menu	OPTIONS	+	Menu
View	Touch Key	-	View
Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx
LB	L1	L	LB
RB	R1	R	RB
LT	L2	ZL	LT
RT	R2	ZR	RT
LTSB	L3	LTSB	LTSB
RTSB	R3	RTSB	RTSB
Xe	P5	Home	Xe

 
* Brook Key = Share




在 PS4 上使用 (* 首次需有線使用)




在 Switch 上使用 (* 首次需有線使用)

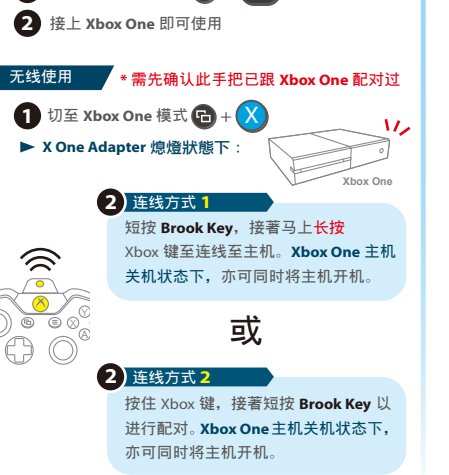

在 PC 上使用

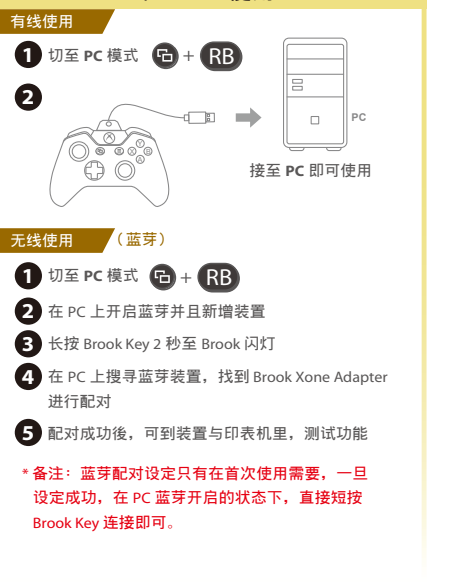 

在 Switch 上使用 (* 首次需有線使用)

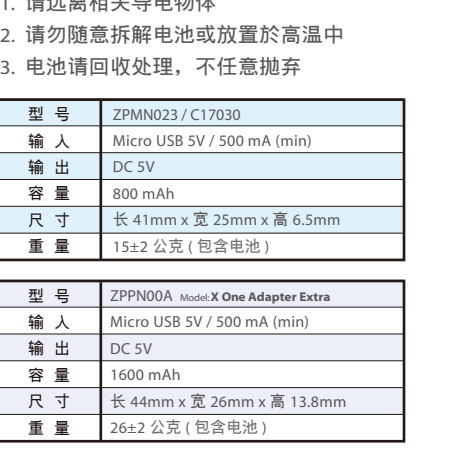 

在 PC 上使用



在 Switch 上使用 (* 首次需有線使用)

