

AREBOS

Electric Kettle 3000W Retro

AR-HE-WK



Please follow all security measures in this user's manual to ensure a secure use.



Thank you for trusting in AREBOS.

Contents

1) Safety instructions	3
1.1 Explanation of the symbols	3
1.2 General safety instructions	3
1.3 Special Safety instructions for this kettle	4
2) Operation Instructions	4
2.1 Product overview	4
2.2 First use of the kettle.....	5
2.3 Use.....	5
2.4 Electrical connection	5
3. Maintenance	5
3.1 Regular Cleaning.....	5
3.2 Descaling.....	5
4) Technical Details	6
5) Disposal instructions	6
5.1 Disposal of the packaging.....	6
5.2 Disposal of old equipment.....	6
5.3 Meaning of the “dustbin”.....	6
EU Declaration of Conformity	7

Please read and save these instructions. Read through this user's manual carefully before using this product. Protect yourself and others by observing all safety information, warnings and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.

1) Safety instructions

1.1 Explanation of the symbols



CE marking indicates that a product complies with the legal requirements of European legal standards and therefore may be traded within the European Community.



This product **must not** be disposed of with household waste!



Warning! Read the safety instructions carefully. Failure to follow the safety precautions could result in serious injury or damage. Keep the operating instructions in a safe place.



Warning! Hot surface

1.2 General safety instructions

- Read the operating carefully before putting the appliance into operation and keep the instructions.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors. Keep it away from sources of heat, direct sunlight and high humidity. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not immerse it in water.
- When cleaning or putting it away, switch off the appliance and always pull the plug out from the socket (pull on the plug, not the cable). If the appliance is not being used and removed any attached accessories.
- Never leave the appliance unsupervised. To protect children from the dangers posted by electrical appliances, make sure that the cable is not hanging and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.

- This appliance is for the household use only.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always ensure a faulty cable is replaced only by the manufacturer, by their customer service or by a qualified person and with a cable of the same type.
- The appliances can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid any hazard.
- Use only original spare parts.
- Pay careful attention to the following "Special Safety Instructions".
- **WARNING:** Do not remove the lid while the water is boiling.

1.3 Special Safety instructions for this kettle

- Use only cold water when filling.
- The water level must be between the MAX and MIN marks! If the water level exceeds the MAX level, boiling water and steam may be ejected, which may cause burn.
- Switch the kettle off before removing it from the base.
- The kettle is only to be used with the base unit provided.
- Do not immerse in water.
- If the supply cord is damaged, do not use the kettle, the cord must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid any hazard.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- If the kettle is overfilled, boiling water may be ejected.

2) Operation Instructions

2.1 Product overview

1. Filter (inside kettle)
2. Handle
3. Lid
4. Water Level Indicator
5. On/ Off Switch
6. Base
7. Power Indicator Light
8. Thermometer (optional)



2.2 First use of the kettle

Please read these operating instructions carefully and keep them in a safe place for future reference. Before using for the first time, boil and pour away the boiled water. Repeat once or more if a taste or smell is noticed. Use only water without any additives or ingredients.

2.3 Use

1. Place the kettle on a flat surface.
2. Lift off the kettle lid. Then fill with cold water. The water level can be read off the water level indicator at the side of the kettle. Do not overfill the kettle.
3. Put back the lid, make sure lid was fully inserted.
4. Place the kettle on the base unit.

2.4 Electrical connection

1. Check whether the mains voltage supply that you intend to use is same as the kettle. For information on the voltage supply of the kettle, please see the rating label on the base.
2. Switch on the kettle using the On/Off switch. The control lamp lights up.
3. The kettle switched off automatically when the water has boiled. Now disconnect the kettle from the mains power supply if on further use is required. Always ensure that the lid is locked in closed position when pouring the water out. Beware of scalding!

3. Maintenance

3.1 Regular Cleaning

- Read the safety instructions in this manual before cleaning.
- Switch off, unplug, empty the kettle and allow to cool before cleaning.
- Open the lid, remove the filter, rinse the filter under warm water and brush off any impurities.
- The extensor if the kettle should be cleaned, if necessary, with a slightly damp cloth. Do not use harsh or abrasive cleaners!
- It is recommended that you regularly descale your kettle using a kettle descaler to increase the life expectancy and reduce lime scale build up, in extreme hard areas we highly recommend using filtered water in your kettle to increase the life expectancy and prevent lime scale build up.

3.2 Descaling

- 1) Fill the kettle up to "max" with a mixture of one part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.
 - 2) Let the mixture remain inside the kettle overnight.
 - 3) Discard the mixture the next morning.
 - 4) Fill the kettle with clean water up to "max" mark and boil again.
 - 5) Discard the boiled water to remove any remaining scale and vinegar.
 - 6) Rinse the inside of the kettle with clean water.
- **Notice:** Descal the kettle regularly. With normal use: at least twice a year!

4) Technical Details

Model	AR-HE-WKR
Capacity	1.8 L
Power	220-240 V, 50/60 Hz, 3000 W
Protection Class	I
Degree of Protection	IPX0
Cable length	90 cm
Weight	1.5 kg
Material of heating element	Stainless steel
Material of housing	Stainless steel
Specials	<ul style="list-style-type: none">• 360° rotary base• Boiling dry protection• Automatically turns off when water boils• water scale• thermometer (optional)

5) Disposal instructions

5.1 Disposal of the packaging

- Please refer to the guidelines and standards for appropriate disposal of the packaging valid in your region. In part, the package may consist of plastic bags - watch this respect, with special care to ensure that this is not out of the reach of children. There is a risk of suffocation!

5.2 Disposal of old equipment

- Old equipment must be disposed of in accordance with the guidelines and regulations of the local waste disposal department.

5.3 Meaning of the “dustbin”



Protect our environment; electrical appliances do not belong in household waste. Use the provided for the disposal of electrical equipment collection points and enter your electrical and electronic equipment that you no longer use. They help ensure that the potential effects of incorrect disposal on the environment and human health to be avoided. So, do your part to recycle, recycling and other forms of recovery of waste electrical and electronic equipment. Information on where the device is disposed of, please contact your local authorities or local Governments.

Our customer service number: +49 (0) 931-45232700

EU Declaration of Conformity

We, the

Canbolat Vertriebs GmbH, Gneisenaustraße 10-11, 97074 Würzburg, Germany

hereby declare that the devices described in the following comply with the relevant, fundamental safety and health requirements of the EU directives due to their design and construction as well as in the versions marketed by us.

Product name: Water kettle 3000W Retro

Article number: AR-HE-WKRE/C/S/R (steel/ crème/ black/ red) (without Thermometer)

AR-HE-WKTRE/C/S/R (steel/ crème/ black/ red) (with Thermometer)

Model number: 4260627424368; 4260627424375; 4260627424382; 4260627424399;
4260627424405; 4260627424405; 4260627424412; 4260627424429; 4260627424436

If the device is modified without our consent, this declaration of conformity loses its validity.

Tested according to:

Low Voltage Directive 2014/35/EU

Electromagnetic Compatibility 2014/30/EU

ROHS 2011/65/EU

EU-Norm:

EN 60335-1:2012 + A11:2014 +A13:2017

EN 60335-2-2-15:2016

EN62233:2008

EN 55014-1:2006 + A1:2009 A2:2011

EN 55014-1:2017

EN 55014-2:2015

EN 61000-3-2:2014

EN 61000-3-3:2013

Date/Signature Manufacturer/Location:

Würzburg, June 19, 2020



Signature:

Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

Representative of this User Manual/Technical Data:

Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

Office address:

Canbolat Vertriebs GmbH

Gneisenaustraße 10-11

97074 Würzburg

You can find the return address in the imprint: <https://www.arebos.de/impressum/>

VAT identification number: DE 263752326

The court of entry in the commercial register is Würzburg, HRB 10082

WEEE-Reg.-Nr. DE 61617071