







 $40 Hz \sim 15 KHz$

18650 lithium battery(3.7V/1200mA)

18650 lithium battery(3.7V/1200mA)

>100dB

0~300mV

<150mA

Read this guide before installation and use, and keep it for later use $\,$

Microphone instructions




- Press and hold for 2 seconds to turn on and again for 2 seconds to turn off. 2. ▲ Simply press volume plus/long press to enter FM mode.
- 3. ▼ Simply press volume down/long press to enter FM mode.
- 1. How to adjust the volume?



The maximum volume is 9 The minimum volume is 1

Press the button: Press ▲ or ▼ to increase or decrease the volume.

2. How to tune the frequency? Long press the key: long press any key ▲ or ▼ for 3 seconds to enter the frequency modulation state. Under the frequency modulation state,

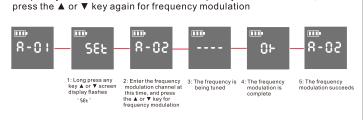

 $(\ Tips:\ Microphone\ and\ receiver\ please\ perform\ the\ above\ frequency modulation\ operation\ within\ 1\ meter\ properties and\ properties and\ properties and\ properties are performanced by the properties of the properti$


3. What should I do if I get crosstalk interference?

Step 1: The microphone is within Step 2: Simultaneously press the Power button and ▲ button for 2 seconds

4.Is a string frequency, snatch frequency can not get back how to do?

Resolving this situation requires the following actions

Receiver instructions

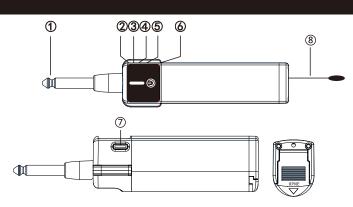

1: audio output

- Indicator light: 2: Blue light low voltage: white light flashes
- 3: Power supply: red light
 4: Charging: green light
 5: Fully charged: the green light is off
 C: Power butter.
- 6: Power button
- 7: DV 5V/1A Type-c charging port 8: Receiving antenna

Synthetic parameter

Frequency range:

Frequency response:

Dynamic range:

Audio output:

Receiver voltage:

Frequency modulation mode:

Receiver operating current:

Microphone power supply:

Receiver continuous use time:

Matters needing attention

- When the host is in use, the dead corner position should be avoided to Synthetic parameter Do not throw, drop or throw the product to avoid damage. • If the microphone is not used for a long time, take out the battery to 658.0MHz

 - If the receiver is not in use for a long time, please turn it off. • This product does not have waterproof function, please avoid water spray
 - If you find that the product is damaged, do not attempt to repair it yourself,
 - Products must not be exposed to conditions such as sunlight, fire or

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a $\,$ Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Only certificate antenna can authorization to use, Other types of antennas and/or higher gain antennas and cables may require the additional authorization for operation to ensurecompliance with the EIRP limits applicable to unlicensed wireless microphones.

Simple fault handling

TROUBLESHOOTING FAULTS CAUSES SOLUTIONS he microphone is not on Turn on the power No Response e microphone display is off/blinking Replace the battery and install it correctly Drop-outs Make sure the device is connected correctly Sound Anomaly Howling

If the above situation does not solve your problem, please consult your local dealer

warning

- To prevent the risk of electric shock and short circuit, do not place the
- Do not disassemble at will, there is a risk of electric shock, affecting normal use.





