

MAINTENANCE

To keep your vacuum's suction power optimal, follow these maintenance steps:

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before servicing.

Hand wash with water only to prevent damage from cleaning chemicals. Allow ALL filters to dry completely before replacing in the vacuum to prevent liquid from being drawn into electric parts.


IMPORTANT: Do not use soap when cleaning the FLD-A filter.

RECOMMENDED FILTER CLEANING SCHEDULE:


Pre-Motor Filter Kit
(Foam & Felt)
XH500C
Clean every 3 months.

Post-Motor Filter
(HEPA)
XH500
Clean once a year.

STEP 1

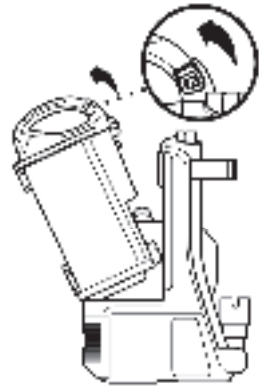



STEP 2

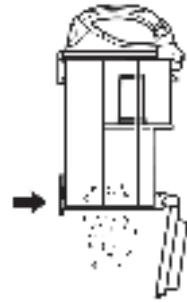

EMPTYING THE DUST CUP

1. Pull up on dust cup release latches and lift dust cup off pod.
2. Turn dust cup over to brush air and press the single-release latch on the bottom.

STEP 3

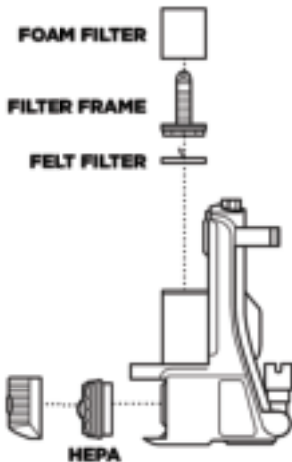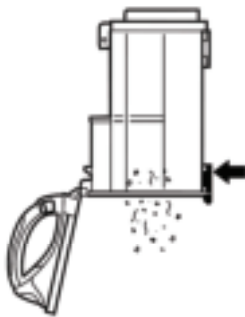

CLEANING THE FILTERS


1. **Pre-Motor (foam and felt):** With the dust cup removed, take out the foam and felt filters, and rinse with water. Tap loose dirt off filters between washes as needed.
2. **Post-Motor (HEPA):** To access the HEPA filter, press the button on top of the grill, and pull the grill away from the vacuum. Remove and rinse the HEPA filter.

MAINTENANCE


WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before servicing.

TIP: You can also check for blockages in the hose and tubes. Just remove your motor, dust cup, wand and hose and check for blockage in the openings.

STEP 1

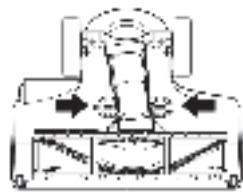

STEP 2

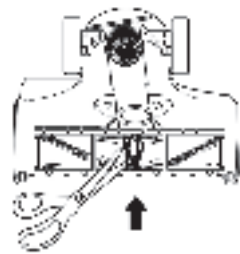


BOTTOM OF FLOOR NOZZLE

1. Using a coin, turn the screw to the unlock position and pull up to expose the airway. Remove the blockage.
2. Remove any string, hair or debris that may be wrapped around the brushroll.

STEP 1



STEP 2

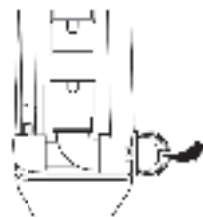

HOSE CUFF AT BASE OF POD

1. Squeeze sides and remove hose.
2. Open the dog access knob on the side of the pod.

There are a variety of accessories that are compatible with this vacuum series.

Note:

Your Quick Start Guide shows the accessories that are included with your model.

POLARIZED PLUG

To reduce the risk of electric shock, this vacuum cleaner has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT force into outlet or try to modify to fit.

TECHNICAL SPECIFICATIONS

Voltage: 120V, 60Hz
Watts: 1200W
Amps: 10A

SharkNinja Operating LLC
US: Newton, MA 02459
CAN: Ville St-Laurent, QC H4S 1A7

Illustrations may differ from actual product.
Lift-Away, Rotator, and Shark are registered trademarks of SharkNinja Operating LLC.
For SharkNinja U.S. Patent information, visit sharkninja.com/USPatents.



PRINTED IN MEXICO Elbrd: M.C
OBPN: NV500_Series_IB_E_160627
SC: 01-03-2023_R redesign SHNMDL: NV500_B

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before servicing.

Vacuum is not picking up debris. No suction or light suction.

(Refer to Maintenance section for more information.)

- Check filters to see if they need cleaning. Follow instructions for rinsing and drying the filters before re-inserting in the vacuum.
- Dust cup may be full; empty dust cup.
- Check hose, hose connections, nozzles, and accessories for blockages; clear blockages if required.
- Remove any string, carpet fibers, or hair that may be wrapped around the brushroll.

Vacuum lifts area rugs.

- Turn off unit to disengage the brushroll. Ensure brushroll is turned off and restart with the POWER button for suction only cleaning.
- Suction is powerful. Take care when vacuuming area rugs or rugs with delicately sewn edges.
- To minimize suction, refer to Suction Control section for more information on how to use.

Brushroll does not spin.

- If Brushroll Indicator Light on the floor nozzle turns red, the brushroll has stopped spinning. Immediately turn off and unplug vacuum, disconnect the nozzle, and remove blockage before reconnecting and turning vacuum back on.
- With the power on, recline the handle, which will automatically turn on the brushroll.
- Ensure that the BRUSH-ROLL button is on for brushroll to spin.

Vacuum turns off on its own or indicator light flashes red.

- This vacuum is equipped with a motor-protective thermostat. If your vacuum overheats, the thermostat will automatically turn the suction motor off. Perform the following steps to restart the thermostat:
 1. Turn vacuum off and unplug it.
 2. Empty dust cup and clean filters (see Maintenance section).
 3. Check for blockages in hose, accessories, and inlet openings.
 4. Allow unit to cool for a minimum of 45 minutes.
 5. Plug in vacuum and turn it on.
 6. Restart the unit using either the POWER or BRUSHROLL buttons.

Note: If vacuum still does not start, contact a service center.

Please be sure to read the enclosed Owner's Guide prior to using your unit.

804008928A


Shark ROTATOR™ LIFT-AWAY™ PROFESSIONAL

QUICK START GUIDE


WHAT'S INSIDE

- A Handle
- B Motorized Floor Nozzle
- C Hose
- D Crevice Tool
- E Wand
- F Dusting Brush
- G Vacuum Pod

ASSEMBLY

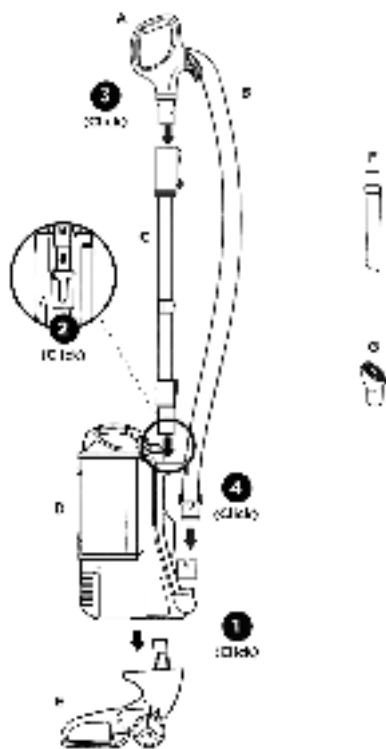


ATTACH ONBOARD ACCESSORIES

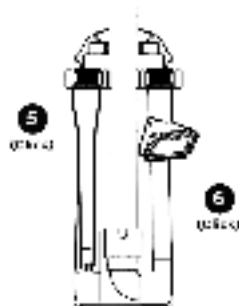

MAINTENANCE


Empty the dust cup after each use

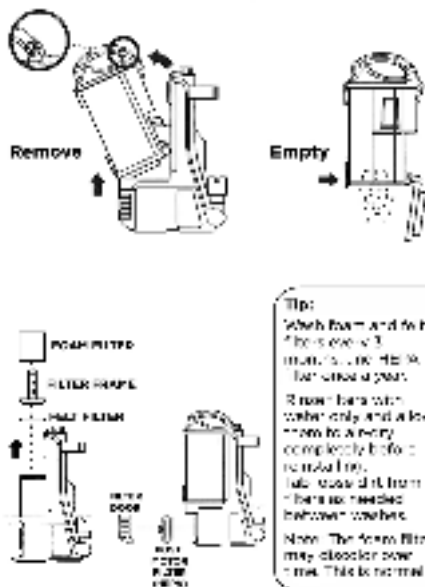


Tip: Wash foam and felt filters every 3 months. Use mild detergent and warm water. Rinse thoroughly with water only and a low-pressure hose. Allow to dry completely before reusing. Do not use hot water or harsh chemicals. **Note:** The foam filter may absorb power noise. This is normal.

2 WAYS TO CLEAN

UPRIGHT

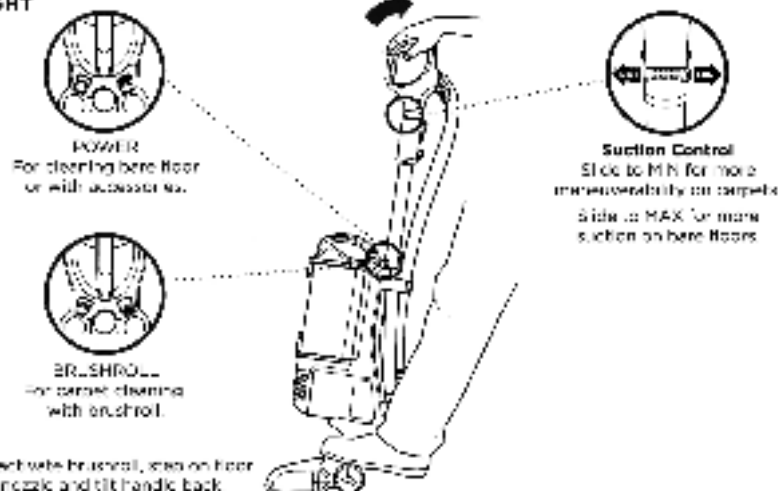

LIFT-AWAY™

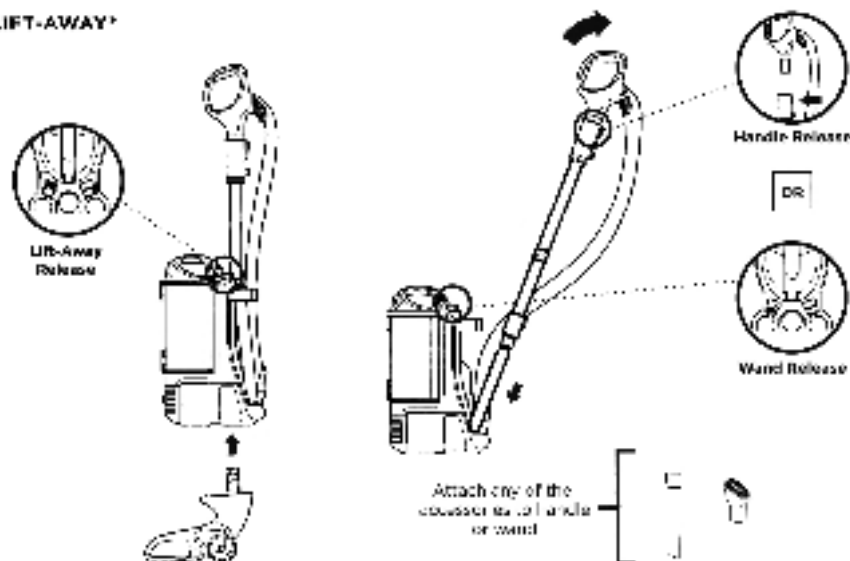

Notes: The images shown here are for illustrative purpose only and may vary.
* Accessories may vary depending on the model

Notes: The images shown here are for illustrative purpose only and may vary.



PRINTED IN MEXICO SC: 01-10-2020_1P
OBPN: NV500_QSG_REV_Mv5_190410
MODEL: NV500_26_ENUTGB Elbrd: Y.T.