
Panasonic®

Operating Instructions

Replacement Filter Unit Commercial Use

Model No. ET-RFV100

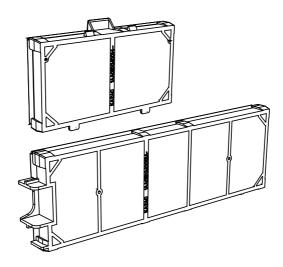

Thank you for purchasing this Panasonic product.

- Please read these operating instructions and the projector operating instructions carefully, and then use this product correctly.
- Please save this Operating Instructions for future use.

ENGLISH

Read this first!

Notes on replacing the air filter unit

- Turn off the power before you replace the air filter unit.
- When attaching the air filter unit, make sure that the projector is stable, and work in an environment that is safe, even in the event of the air filter unit dropping.
- Do not operate the projector with the filters removed. Dust may accumulate on the optical elements degrading picture quality.
- Do not put anything into the air vents. Doing so may result in malfunction of the projector.
- Do not wash the filters with water or any other liquid matter. Otherwise the filters may be damaged.

Replacing the air filter unit

Air filter units

Filter prevents dust from accumulating on the optical elements inside the projector. Should the filter become clogged with dust particles, it will reduce cooling fans' effectiveness and may result in internal heat buildup and adversely affect the life of the projector. If a "Filter warning" icon appears on the screen, replace the filters immediately.

Replacement of the air filter units

1) Remove the air filter units.

- Turn over the projector and pull out the filter cover (bottom); pull up the handle and take out the filter unit (bottom.)
- Press up the latches and pull out the filter cover (side); pull out the handle and take out the filter unit (side).

2) Replace the air filter units.

 Put new filters back into the position. Make sure that the filters are fully inserted to the projector.

3) Resetting the Filter Counter

 Be sure to reset the Filter counter after replacing the filter.

