



# QUICK START GUIDE

## Quick Installation

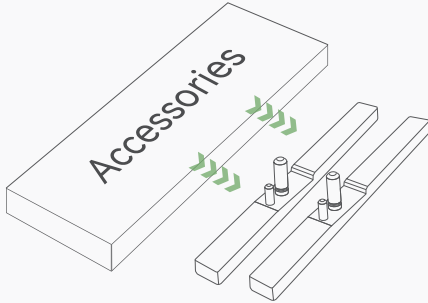


Take out two legs from a box labeled Accessories

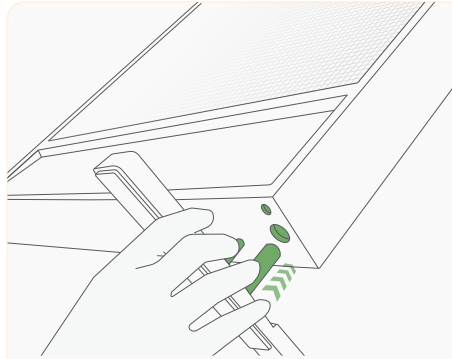


Insert the legs directly into the holes at the bottom of the heater manually.

## Remote Control

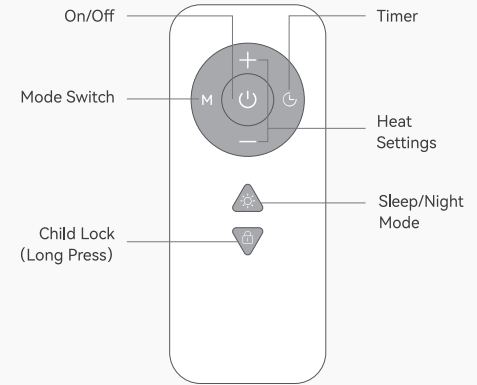

## Display & Control Panel

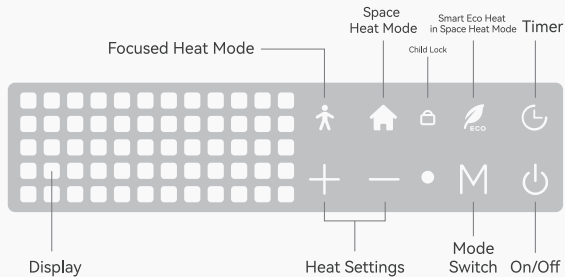

## Extend Warranty to 24 Months

Register your SUNKOS account to extend your warranty from 12 months to 24 months.



Register with Smart Life app




Register online



Register by E-mail

## Download the Smart Life app

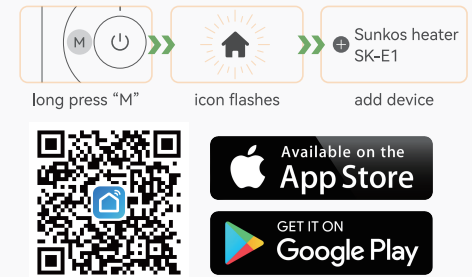

## Need Help?

We are committed to your satisfaction and are confident in our ability to address any concerns or questions you may have.

✉ support@sunkos.tech


🌐 www.sunkos.tech

# DO'S AND DON'TS




DO

Directly plugged into a **15A 120V** wall outlet only.

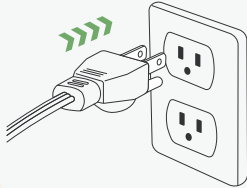


DO NOT USE A THREE-PRONG ADAPTER. IMPROPER CONNECTION MAY CAUSE THIS RISK OF ELECTROCUTION.

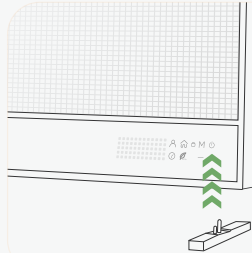

Must ensure proper installation of the two legs of SUNKOS heater before heating.




Read the user manual: Familiarize yourself with the specific instructions and safety guidelines provided by the manufacturer for your heater.

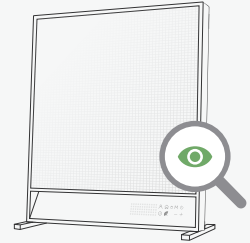


Inspect the heater: Regularly check the heater for any signs of damage, frayed cords, or loose connections before each use.




DON'T

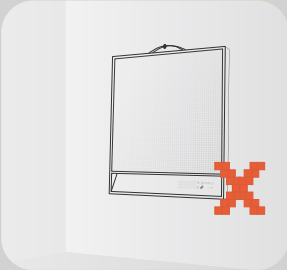


Do not hang the heater on the wall while it is in operation. The heater should always be placed on a stable and flat surface, away from any flammable objects or materials.

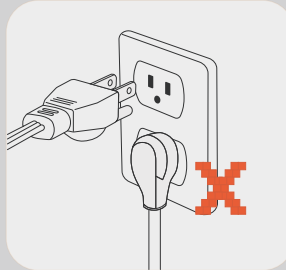

Overload electrical circuits: Be mindful of the power requirements of the heater and avoid plugging in multiple high-powered devices on the same circuit.

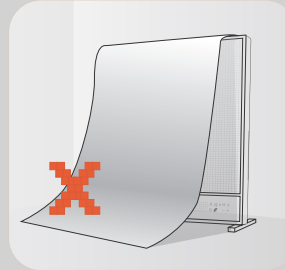

Cover the heater: Do not cover or obstruct the heater's vents, as it can hinder proper airflow and potentially overheat the unit.

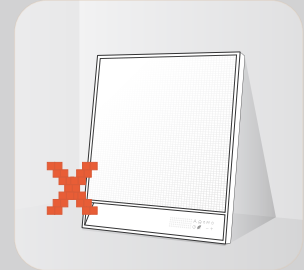

Do not operate the heater without the feet properly installed. Please ensure that the heater's feet are securely installed before operating.