 


MCHOSE K87 Handy Guide

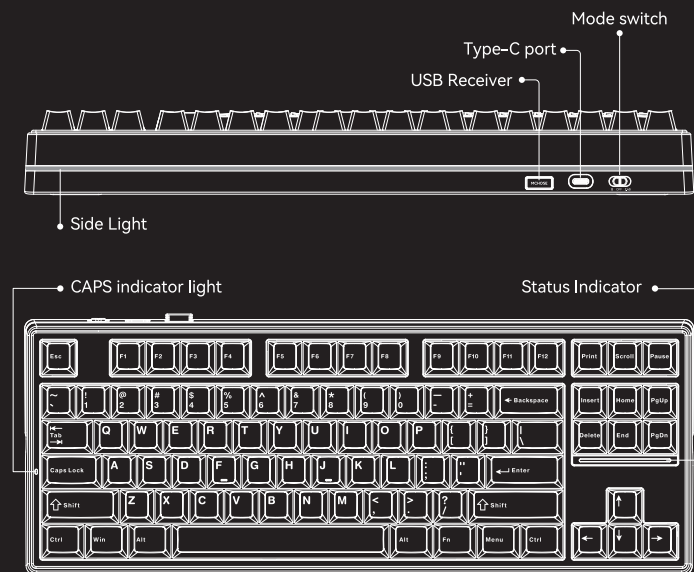

* For more functions, please refer to the User Guide.

MCHOSE

 
· System mode switch



· Side light setting



· Backlight setting

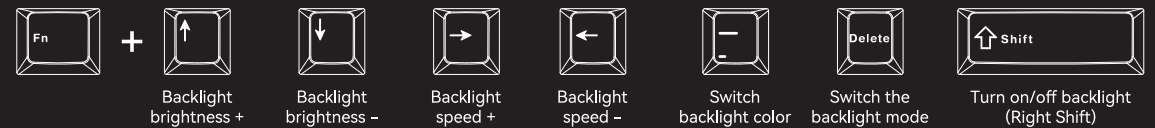

· Logo light setting



· Tip: When switched to Mac System, F1-F12 keys will function as multimedia keys.



MCHOSE.STORE

· WIRELESS CONNECTION



 
1. Switch the toggle to [B] to enter the wireless mode.

Note: The wireless device names for channels 1, 2, and 3 are [MCHOSE K87 3.0] or [MCHOSE K87 5.0].

- The combination key of wireless channel 2 is [FN+2@], indicator is purple.
- The combination key of wireless channel 3 is [FN+3#], indicator is green.



2. Press the combination key to switch to Wireless1 and hold for about 3 seconds until the W key bottom indicator light flashes quickly to activate wireless pairing.



3. Search for the wireless device name [MCHOSE K87 5.0] or [MCHOSE X87 3.0] on your device, and click to connect, the wireless indicator light will go back to normal after successful pairing.

· 2.4GHZ CONNECTION



1. Switch the toggle to [2.4G] to enter the 2.4GHz mode.

 


2. Open the nameplate cover from the higher right corner of the keyboard and take out the USB dongle from the dongle compartment.




3. Insert the USB dongle into the USB port on your computer. The keyboard is now ready for use.

· WIRED CONNECTION

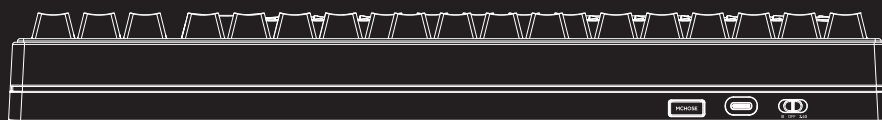

 1. Switch the toggle to [OFF] to enter the wired mode.

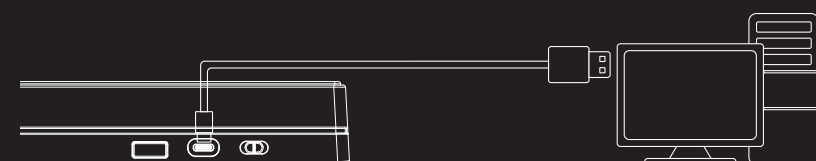

2. Plug the type-c port into the keyboard and computer port.