

[Back](#)

Baofeng UV5R

Programming Menu

0	SQL	Squelch Level	0 > 9
1	STEP	Frequency Step	2.5 / 5 / 6.25 / 10 / 12.5 / 25 kHz
2	TXP	Transmit Power	High / Low
3	SAVE	Battery Save 1:1 1:2 1:3 1:4	OFF / 1 / 2 / 3 / 4
4	VOX	Voice Operated Xmtr	OFF / 0, 1, 2 > 10
5	WN	Wideband / Narrowband	WIDE / NARR
6	ABR	Display Illumination Time	OFF / 1 / 2 / 3 / 4 / 5 seconds
7	TDR	Dual Watch / Dual Reception	OFF / ON
8	BEEP	Keypad Beep	OFF / ON
9	TOT	Transmit Timer	15 / 30 / 45 > 600 seconds
10	R-DCS	Rec - Digital Coded Squelch	OFF / D023N > D754I
11	R-CTCS	Rec - Continuous Tone Coded Squelch	67.0 Hz > 254.1 Hz
12	T-DCS	Trans - Digital Coded Squelch	OFF / D023N > D754I
13	T-CTCS	Trans - Continuous Tone Coded Squelch	67.0 Hz > 254.1 Hz
14	VOICE	Voice Prompt	OFF / ON or OFF / ENG / CHI
15	ANI-ID	Automatic Number ID of Radio (set with S/W)	
16	DTMFST	DTMF Tone of trans code	OFF / DT-ST / ANI-ST / DT+ANI
17	S-CODE	Signal Code (set with S/W)	1 > 15 groups
18	SC-REV	Scan Resume Method	TO / CO / SE
19	PTT-ID	When to send the PTT ID signal code	OFF / BOT / EOT / BOTH
20	PTT-LT	Signal Code sending delay	0 > 30 ms
21	MDF-A	Channel Mode A Display	FREQ / CHAN / NAME
22	MDF-B	Channel Mode B Display	FREQ / CHAN / NAME
23	BCL	Busy Channel Lockout	OFF / ON
24	AUTOLK	Automatic Keypad Lock	OFF / ON
25	SFT-D	Frequency shift direction	OFF / + / -
26	OFFSET	Frequency shift amount	00.000 > 69.990 MHz
27	MEM-CH	Store a memory channel	000 > 127
28	DEL-CH	Delete a memory channel	000 > 127
29	WT-LED	Illumination / Display Color - Standby	OFF / BLUE / ORANGE / PURPLE
30	RX-LED	Illumination / Display Color - Receive	OFF / BLUE / ORANGE / PURPLE
31	TX-LED	Illumination / Display Color - Transmit	OFF / BLUE / ORANGE / PURPLE
32	AL-MOD	Alarm Mode	SITE / TONE / CODE
33	BAND	Band Selection	VHF / UHF
34	TDR-AB	Transmit selection while in dual watch / reception	OFF / A / B
35	STE	Squelch Tail Elimination	OFF / ON
36	RP-STE	Squelch Tail Elimination through a repeater	OFF / 1, 2, 3 > 10
37	RPT-RL	Delay the squelch tail of repeater	OFF / 1, 2, 3 > 10
38	PONMSG	Boot / Power On Display Message	FULL / MSG
39	ROGER	Tone at end of transmission	OFF / ON
40	RESET	Restore to default settings	VFO / ALL

[Top of Page](#)

[UV5R Home](#)

[Back](#)

2,519

13,620