USER GUIDE





INFINITY QD-OLED USB-C CURVED GAMING MONITOR

(49", 5120 X 1440, DQHD, 144HZ 0.03MS)

KAMN49QDQUCLA

| Safety & Warnings | 3 |
|-------------------|----|
| Components | 4 |
| Overview | 5 |
| Assembly | 6 |
| VESA Mount | 8 |
| Connectivity | 9 |
| Operation | 12 |
| Specifications | 17 |
| Notes | 18 |

SAFETY & WARNINGS

- Read all instructions before using the appliance and retain for reference.
- This monitor is designed with ventilation holes on the back of the casing. Do not cover or block them.
- Do not insert any object or spray any liquid into the vents.
- Avoid placing the monitor near heaters, stoves, fireplaces or other sources of heat, as well as in rooms lacking adequate ventilation.
- Do not position the monitor in unsafe locations. If the monitor falls, it may be damaged and may injure nearby people.
- Unplug the monitor if it is not going to be used for an extended period.
- Do not place heavy objects on the monitor, its power cord or any connected cable.
- Do not open the back panel of the monitor, as it contains a high-voltage current even when not plugged in.
- There is a polariser layer (not a protective film) on the surface of the screen. Do not peel it off or the product may be damaged and the warranty will be invalid.



The terms HDMI and HDMI High-Definition Multimedia Interface and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

COMPONENTS




OVERVIEW

Controls



- Centre button (press in): Confirm key or access the main menu. 1
- 2 Left button: Exit or return to the previous menu.
- 3 Down button: Move down in the menu or select turn off the monitor.
- Right button: Quickly adjust the input signal. 4
- Up button: Move up in the menu or quickly adjust the Brightness. 5

Ports

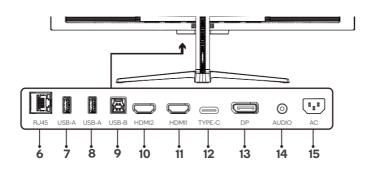

- Ethernet port 6
- HDMI1 11
- 7 USB-A
- USB-C 12
- 8 USB-A

- DisplayPort 13
- 9 USB-B
- Audio Output 14
- 10 HDMI 2
- 15 **AC Input**


ASSEMBLY

Before disposing of any packaging, place all items on a soft, clean and flat surface to ensure all components are accounted for.


WARNING: The panel of the monitor is the fragile. Keep the foam underneath the monitor screen while assembling the stand.

Installing the stand base

 Lay the monitor screen facing down on a table with the monitor still resting on the packing foam. Attach the stand base to the stand arm. Insert and tighten the base screws to the underside of the stand base.

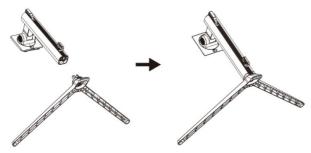

Open the packing foam with the monitor resting facing downwards. Take the assembled stand and insert it headfirst into the circular opening on the back of the monitor. Once it is inserted press downwards on the neck until you hear a 'click' sound.

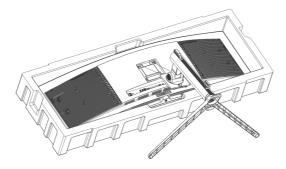


VESA MOUNT




VESA mounting pattern 75 x 75mm, screw size M4.

Note: VESA mount and mounting accessories are not included.

- 1. Open the box, lay the monitor screen facing down on a table with the monitor still resting on the packing foam.
- 2. Remove all components and the protective foam from the back of the monitor.
- 3. If the monitor is already attached to the stand, remove the stand from the monitor.
- 4. With the circular indention now open.
- 5. Install VESA screws into the rear of the monitor.

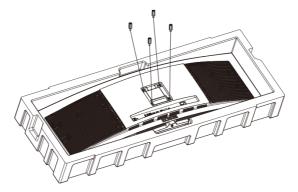


6. Once the VESA screws are installed, the monitor is ready to be wall mounted. The mounting pattern is 75mm x 75mm.

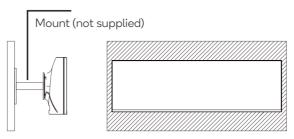

Note:


To prevent the monitor on the mount from failing, install it firmly and protect it fully. Do not place or hang any object on the mount and the using height of the mount should be less than 2 meters.

Adjustments

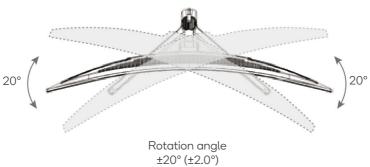



Tilting angle -5.0° (±2.0°) - +20° (±2.0°)

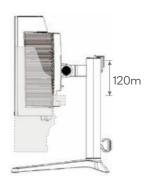


Height adjustment 120mm (±5mm)

CONNECTIVITY


Power Adapter

Connect the power cable plug to the AC input port of the monitor, and then connect the power cable to an electrical outlet.

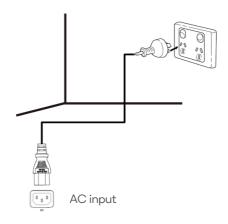

HDMI


Connect the provided HDMI cable (not supplied) from the computer's HDMI port to the monitor's HDMI port.

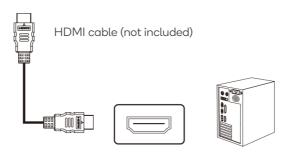

HDMI to **DVI**


Connect an HDMI to DVI cable (not provided) from the monitor's HDMI port to the computer's DVI port.

Note: Audio cannot always be transferred through a DVI port.

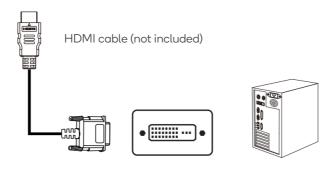


DisplayPort

Connect to DisplayPort cable from the computer's DisplayPort to the monitor's DisplayPort.

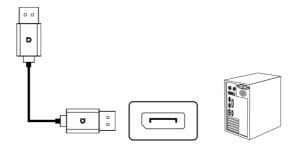


USB-C

Insert one end of the USB-C cable (not supplied) into the computer's USB-C output and connect the other end to the monitor's USB-C (Type-C) port.

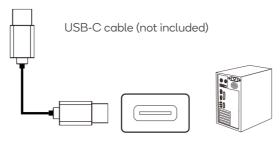


USB-A - USB-B

To enable your monitor to receive a signal from a USB device, connect the included USB cable from the USB-A port on the monitor to the USB-B port on the device.

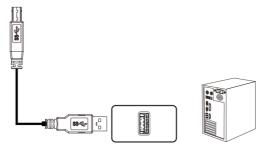

Audio Out

Earphones, headphones or other audio devices can be connected to the 3.5mm audio port (Audio Out) on the monitor. The monitor may need to be set as the PC's default sound output device.

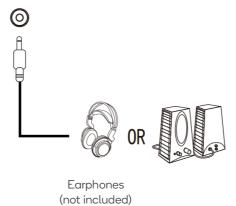


11

OPERATION

The on-screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the ▶ button is pressed.

Note: The images of the OSD menu shown in this user guide may differ slightly to the actual product.

1. Press the button to activate the browser screen.

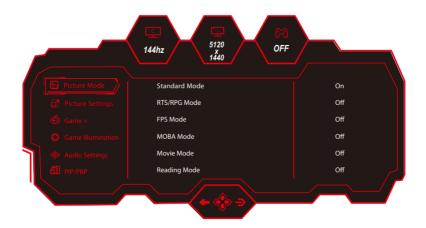

- **2.** Push the directional buttons \blacktriangle or \blacktriangledown to scroll through the functions.
- 3. Select the desired function and press ▶ to enter the sub-menu.
- **4.** Press ▲ or ▼ to scroll through sub-menus and press key ▶ to select and confirm the desired function.
- Press ▲ or ▼ to select one option and press ► to confirm settings and exit from the current menu.
- Press ◀ to exit from the menu screen.

On-Screen Display (OSD) Functions

Functions of the monitor vary with different models and the functions in this user guide are for reference only.

| Main Menu | Sub Menu | Option | | | | |
|------------------|---------------------------|----------------------------|-----------------|-------|--|--|
| | Standard Mode | Off/On (Custom) | | | | |
| | RTS/RPG Mode | Off/On (Custom) | | | | |
| | FPS Mode | Off/On (C | Custom) | | | |
| | MOBA Mode | Off/On (C | Off/On (Custom) | | | |
| | Movie Mode | Off/On (C | Off/On (Custom) | | | |
| | Reading Mode | Off/On (C | Custom) | | | |
| Picture Mode | Night Mode | Off/On (C | Custom) | | | |
| | Eye Care Mode | Off/On (C | Custom) | | | |
| | Mac View Mode | Off/On (C | Custom) | | | |
| | E-Book Mode | Off/On (C | Custom) | | | |
| | sRGB Mode | Off/On (C | Off/On (Custom) | | | |
| | Adobe RGB Mode | Off/On (Custom) | | | | |
| | DCI-P3 Mode | Off/On (Custom) | | | | |
| | Brightness | 0-100 | | | | |
| | Brightness Mode | Normal/Highlight | | | | |
| | Low Blue Light | 0-100 | | | | |
| | Sharpness | 0-5 | | | | |
| | Gamma | 1.1/2.0/2.2/2.4/2.6/Screen | | | | |
| | Aspect Ratio | Wide Screen/4:3/1:1/Auto | | | | |
| | | Warm | | | | |
| Picture Settings | | Natural | | | | |
| | Calar in Tanana anata ina | Cool | | | | |
| | Colour Temperature | User1 | Red/Green/Green | 0-100 | | |
| | | User2 | Red/Green/Green | 0-100 | | |
| | | User3 | Red/Green/Green | 0-100 | | |
| | Hue | 0-100(R/G/B/C/M/Y) | | | | |
| | Saturation | 0-100(R/G/B/C/M/Y) | | | | |
| | Eye shield Remind | Off/On | | | | |

| | Reset Picture Settings | Off/On | | |
|--------|------------------------|------------------------------|--|--|
| | HDR | Off/Auto/HDR Game/HDR Movie | | |
| | | Adaptive-Sync | O-/On | |
| | | Colour Enhancement | Off/Level 1-10 | |
| | | CR Enhancement | Off/Level 1-5 | |
| | | Shadow Balance | 0-100 | |
| | Picture Enhancement | Night Vision Mode | Off/Level1/Level2/Auto Level1/Auto Level2 | |
| | | Game Rush Mode | Off/On | |
| | | Super Resolution | Off/Level 1-5 | |
| Game + | | Reset Picture Enhancement | Off/On | |
| | Game Aid | Refresh Rate | Off/On/Position | |
| | | Game Crosshair | Off/On/Crosshair1/Cross hair2/Crosshair3/Crossh air4/Crosshair5/ Crosshair6 | |
| | | Crosshair Colour | Red/Yellow/Green/Cyan /Blue/Purple/Colour Palette/White/ Auto | |
| | | Stop Watch | Off/15:00/30:00/45:00/6 0:00/Position | |
| | | Game Time | Off/15:00/30:00/45:00/6 0:00/Position | |
| | | Magnifier Mode | Off/On/Window Size/Window Position/Night Vision Mode | |
| | | Alignment Aid | Off/On | |
| | | Reset Game Aid | Off/On | |
| | Game illumination | Off/On | | |

| | LED Bar | Colour (Red/Yellow/Green/Cyan/Blue/Purple/Colo urful) | | |
|----------------|----------------------------|--|--|--|
| | | Strength (Highlight/Standard/So) | | |
| Game | | Mode (Normal/Breath/Flicker/Plain Water/Star/Colourful Pearls/Colourful Water) | | |
| illumination | | Front Colour (Red/Green/Blue//Yellow/Purple/Cyan) | | |
| | | Rear Colour (Red/Green/Blue//Yellow/Purple/Cyan) | | |
| | Reset Game illumination | Off/On | | |
| | Volume | 0-100 | | |
| Audio Settings | Audio Mute | Off/On | | |
| | Reset Audio Settings | Off/On | | |
| | PIP/PBP Mode | Off/PIP Mode/PBP 2Win 1:1/PBP 2Win 2:1/PBP 2Win 1:2 | | |
| | Sub-Signal Source | Type-C/DP1/DP2/HDMI | | |
| | Audio Source | Auto/Type-C/DP1/DP2/HDMI | | |
| PIP/PBP | PIP Position | Top Right/Top Left/Bottom Right/Bottom Left | | |
| | PIP Size | Small/Medium/Large | | |
| | Window Swap | Off/On | | |
| | Reset PIP/PBP | Off/On | | |
| | Input Signal | Auto/Type-C/DP/HDMI1/DHMI2 | | |
| | HDMI EDID Mode | 4K/5K | | |
| | DP EDID Mode | 4K/5K | | |
| | Quick Boot | Off/On | | |
| I/O Sottings | Type-C DSC | Off/On | | |
| I/O Settings | USB-Switch | Туре-А/Туре-В | | |
| | DDC/CI | Off/On | | |
| | Quantisation Range | RGB Limit (16~235)/RGB Full (0~255)/Auto | | |
| | USB Power (Sleep) | Off/On | | |
| | Reset I/O Settings | Off/On | | |

| | Language | 简体中文/English/한국어/ピープ/Portugues do Brasilazil/Deutsch/Nederland/Suomi/Franç ais/Ελληνικά/ Indonesia/ Italiano/日本語 /Malaysia/Polskie/Português/Русский/ Español/ใив/Українська/Tiếng Việt/繁體中 文/Türkçe | | |
|-----------------|-----------------------------|--|--------------------------|--|
| | OSD Time Out | 0-60 | | |
| | OSD H-Position | 0-100 | | |
| | OSD V-Position | 0-100 | | |
| | OSD Transparency | 0-5 | | |
| System Settings | Hotkey1 Setting | Brightness/Contrast/Volume/Audio Mute/Shadow Balance/Game Crosshair/Magnifier Mode / Refresh Rate/Game Time/Colour Enhancement/Night Vision Mode/Adaptive Night Vision/ Super Resolution/Adaptive- Sync/Picture Mode/HDR/Input Source/Game Illumination/PIP/PBP/ USB- Switch | | |
| | Hotkey2 Setting | | | |
| | OSD Lock | Off/On | | |
| | Panel Maintenance | | | |
| | Energy Saving | Power LED | Off/Level1/Level2/Level3 | |
| | Energy Saving | Power Saving | Off/Level1/Level2 | |
| | Software Upgrade | Information | | |
| | | USB Upgrade | | |
| | Restore Factory Settings | Off/On | | |

SPECIFICATIONS

| Screen size | | 49inch | |
|--------------------------|---------------|--|--|
| Aspect ratio | | 32:9 | |
| Viewing angle | | 178°(H) / 178°(V) | |
| Contrast ratio | | 3000:1(TYP) | |
| Colour | | 1.07Billion | |
| Resolution | | 5120 x 1440 | |
| Refresh rate | | 144Hz | |
| Power input | | 100-240V~50/60HZ,4.0A | |
| Product dimensions | Without stand | 1199.11 x 170.23 x 365.35mm | |
| | Without stand | 1199.11 x 360.48 x 453.2mm | |
| Tilting angle | | Forward tilting -5° (±2.0°); Backward tilting 20° (±2.0°) | |
| Height range | | 120±5mm | |
| Swivel angle | | ±20° (±2.0°) | |
| Environmental conditions | Action | Temperature: 0°C~ 35°C (32°F ~ 104°F) Humidity: 10%~80% RH (non-condensing) | |
| | Storage | Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing) | |

NOTES

| - | | |
|---|--|--|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

