# **Screen Views**



# Double heads flash

Press side button once to select unit Press a second time to select A head



# 2 pages dashboard

When there is 5 units or more units are shown on 2 pages or more. Swipe to access other pages (Touchscreen is automatically activated)



# Auto Stand-by 4 15 min •

## Sub-menu screen

Swipe left or right to change value hetween the arrows



# Connection





Use only AA Batteries.

# Attachina

- 1. Turn off the camera and the Elinchrom transmitter.
- 2. Align the Elinchrom transmitter's hotshoe with the camera's hotshoe mount.
- 3. Slide it all the way on the camera's hotshoe mount.
- 4. Lock the mounting foot from left to right until the locking lever clicks in place.

# Detachina

- 1. Unlock; press the lock-release button while sliding from right to left.
- 2. Slide the Elinchrom transmitter off the camera's hotshoe mount.

# Reset To Default Settings

Go to menu, select i icon (info), press "Factory Reset", and confirm to reset to factory settings

- Consult the dealer or an experienced radio/TV technician for help.
   Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition compliance with exposure requirements.

- ains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's
- This device may not cause interference.

  This device must accept any interference, including interference that may cause undesired operation of the device.

- This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.
- Cet appareil contient des émetteurs/récepteurs exempts de licence est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : Cet annareil ne doit pas provoquer d'interférences nuisibles, et



# www.elinchrom.com







OSG Transmitter Pro II - 08.2024

Route de la Venoge 20, 1026 Echandens, Switzerland Tel.: +41 21 637 26 77 E-mail: support@elinchrom.ch



# **Transmitter** Pro X



Quick **Start Guide** 

# Setup Menu



0	• •	0 (	•		
	<b>SCAN</b> Scan for new uni	ts s	cole Flosh	Swip	e Flash e to select e Flash

Sound Switch on/off

Swipe to select ID

Access info, Factory

Touchscreen Switch on/off

Certifications

Show certifications





Second Curtain

Switch on/off

Brightness

Swipe to select



Frequencies

Swipe to choose

the frequency

Switch on/off



F 19





Change duration or switch off



Auto Stand-by Change duration or switch off

ODS	OFF / 0.1 to 5.0 ms
Auto Off	OFF / 15min / 30min /45min / 60min
Auto Stand-by	OFF / 15min / 30min /45min / 60min
Scale Flash	EL-scale / 1-10 / Ws
ID	Type / Name / ID

in		Firmware rev.	0.101		
		Skyport ID	2643		
		xxx	31		
	into	Protocol	CAN		
		Factory Reset button	Reset to factory settings		
		How to update button	Show QR code, scan with smartphone		

# **Control panel / Touch Screen**



Short press: access to menu

# Wheel:

On dashboard:

**(**→ CW: +0.1 f-stop / up

On menu: scroll trough

# Display panel - Dashboard

The colour of the Group corresponds to the group number: blue for group 1, yellow for group 2, red for group 3 and green for group 4

Frequency

Bluetooth on/off

Battery level

Selected unit

Flash power

TTL on/off

11. TTL dashboard

12. multiple pages

10. HSS on/off

Modlamp on/off





CCW: -0.1 f-stop / down

menu items

