

126M00

Illustrated Parts List

Model Series

126M00

TYPE NUMBERS

0001, 0002, 0003, 0003, 0004, 0005, 0006, 0007, 0009, 0010, 0011, 0012, 0015, 0017,
0019, 0020, 0022, 0108, 0111, 0115, 0118, 0119, 0120, 0122, 0124, 0125, 0128, 0130,
0131, 0132, 0133, 0135, 0136, 0137, 0148, 0152, 0156, 0192, 0194, 0197, 0198, 0203,
0284, 0289, 0290, 0291, 0295, 0297, 0298, 0299, 0301, 0303, 0318, 0321, 0335, 0342,
0344, 0345, 0364, 0365, 0366, 0379, 0402, 0420, 0426, 0431, 0432, 0434, 0436, 0437,
0440, 0441, 0442, 0444, 0447, 0449, 0450, 0451, 0464, 0482, 0495, 0521, 0523, 0523,
0675, 0795, 0795, 0863, 0930, 0988, 1002, 1004, 1005, 1006, 1007, 1009, 1010, 1011,
1014, 1015, 1016, 1018, 1025, 1026, 1030, 1031, 1225, 1297, 1346, 1347, 1350, 1378,
1401, 1414, 1415, 1424, 1428, 1443, 1445, 1459, 1479, 1525, 1525, 1527, 1576, 1602,
1615, 1620, 1625, 1701, 3205, 3426, 3427, 4475, 6521, 6523, 6675, 6782, 6795, 6863,
0018, 0109, 0121, 0123, 0126, 0362, 0856, 1252, 1349, 1409, 1446, 1462, 1561, 3216,
3428, 4678, 5455, 5856, 6856, 0023, 0110, 0114, 0127, 0129, 0153, 0213, 0414, 0415,
5050, 5060, 5062, 5213, 5214, 5414, 5660, 5662.

 


 
PRINTED IN U.S.A.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

 
 
 
 
 
 
 
 
1319 WARNING LABEL

 
1330 REPAIR MANUAL

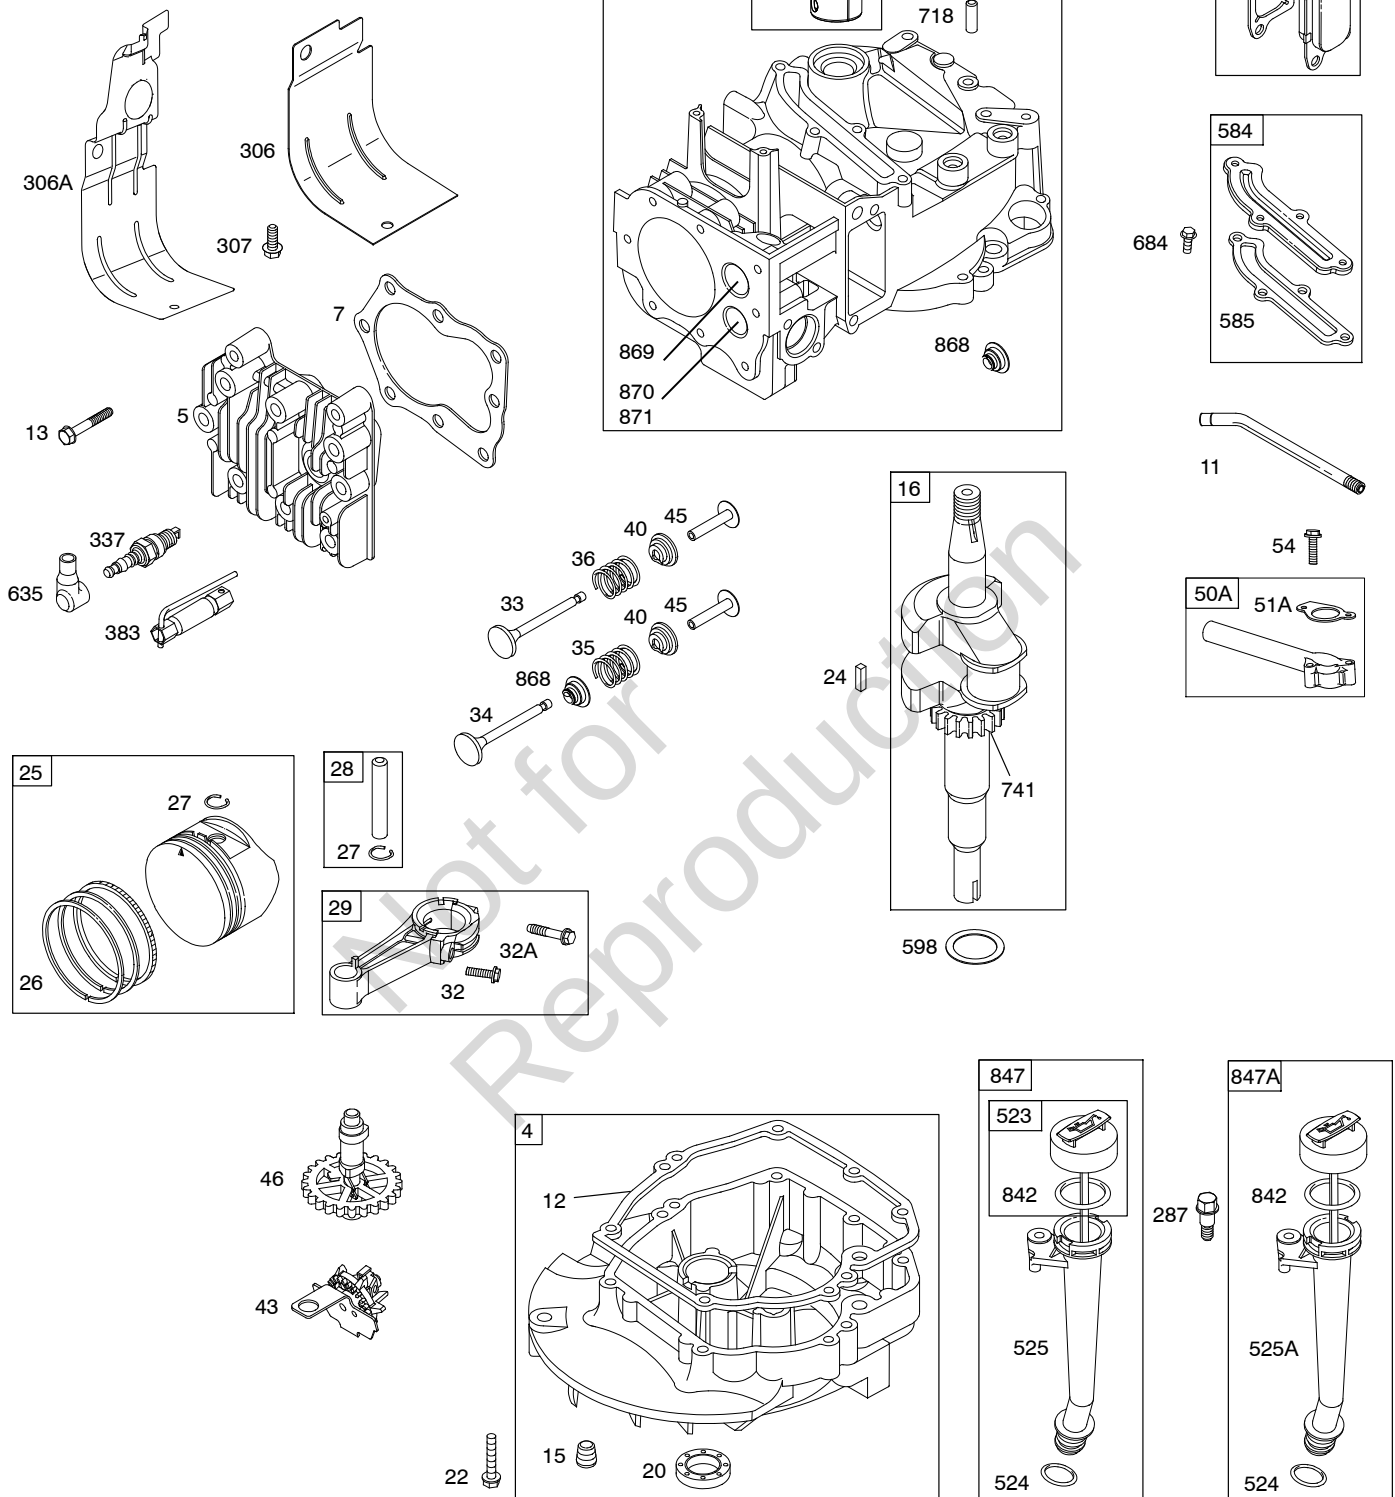 


 
 
 
 
 
 
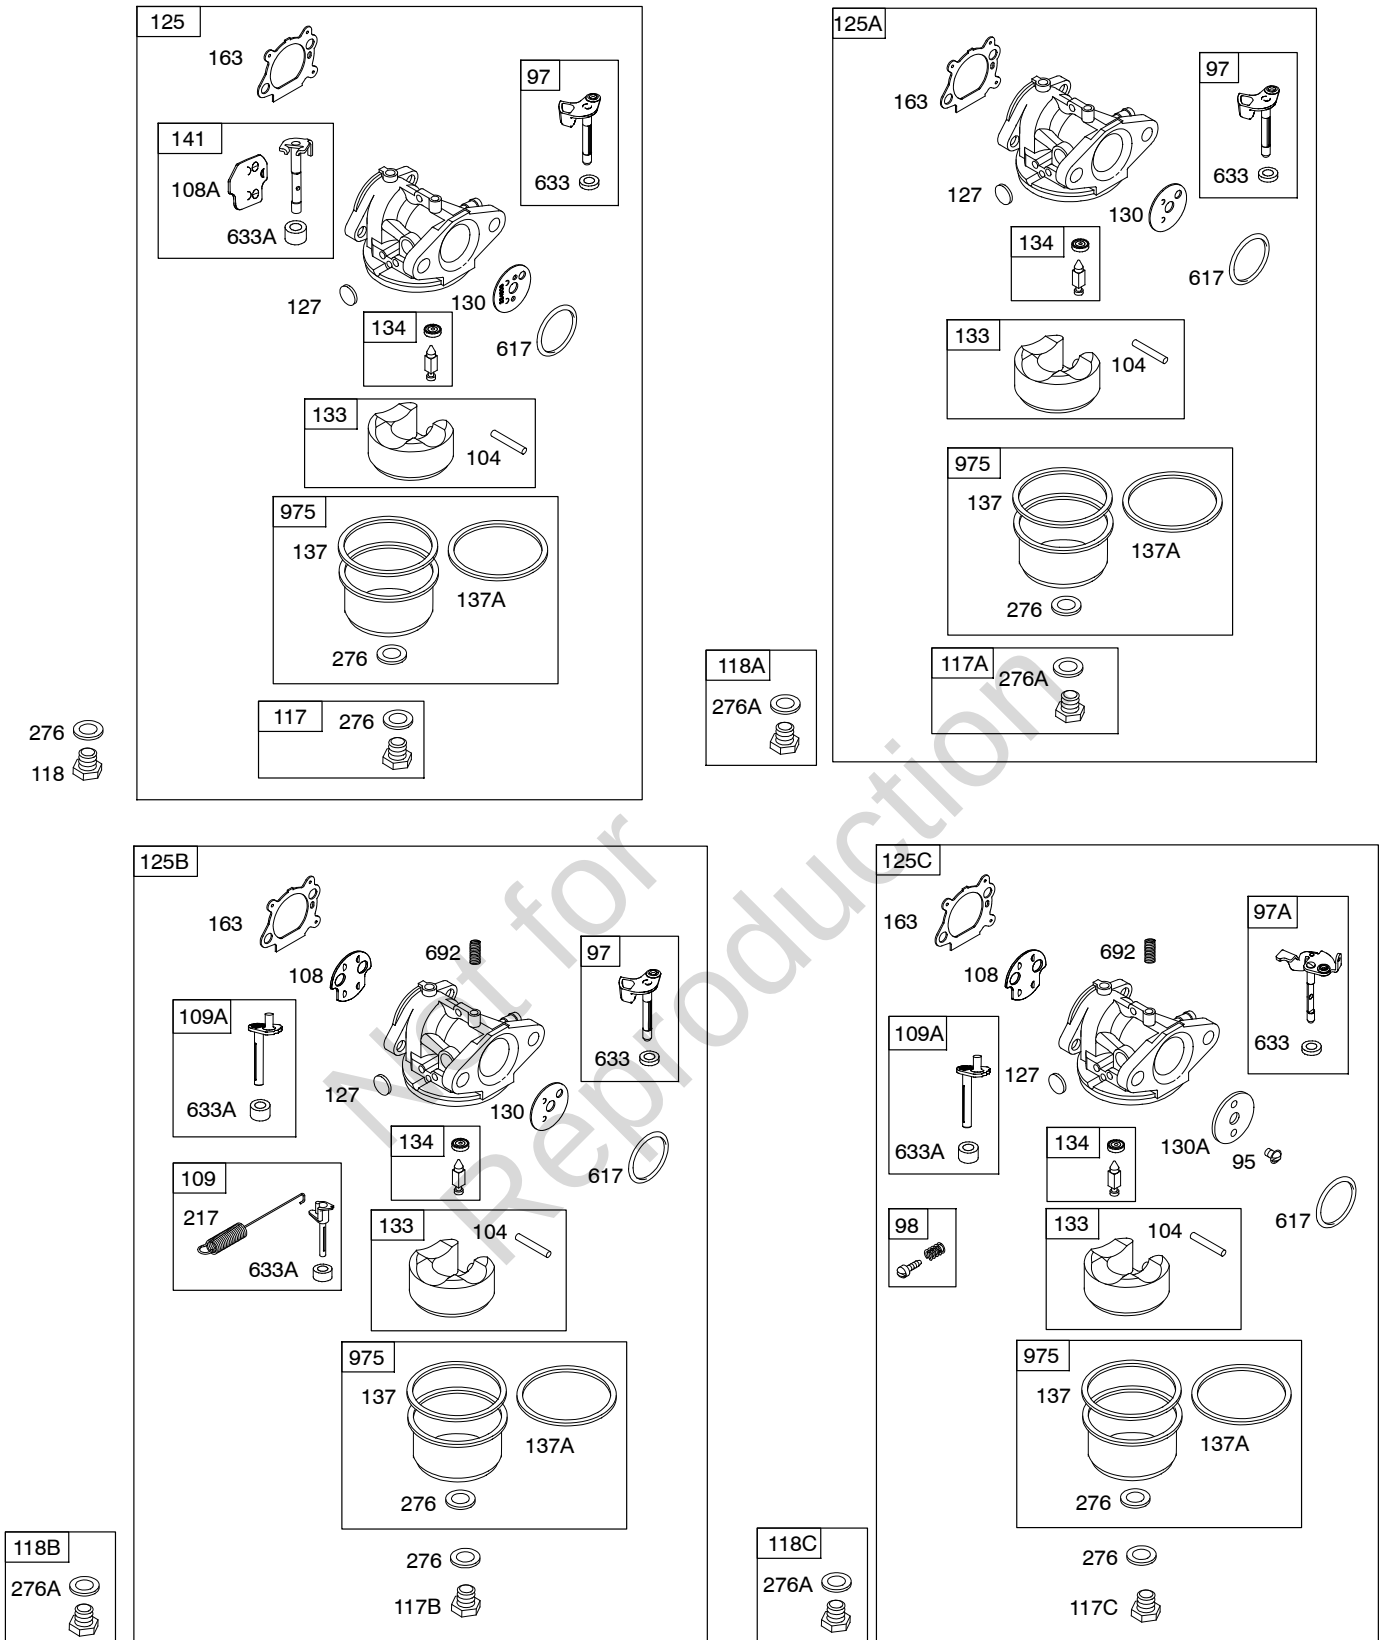 


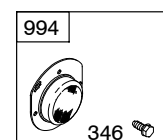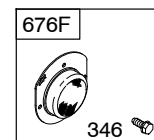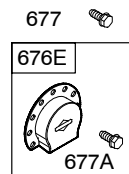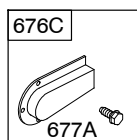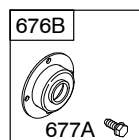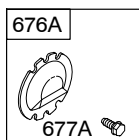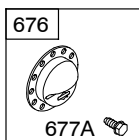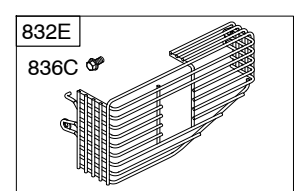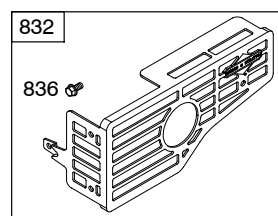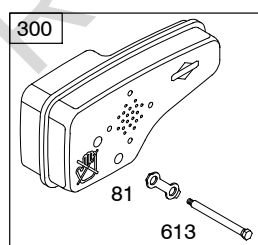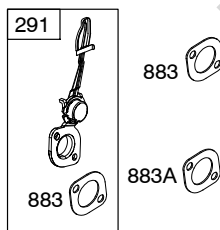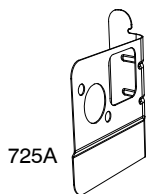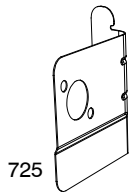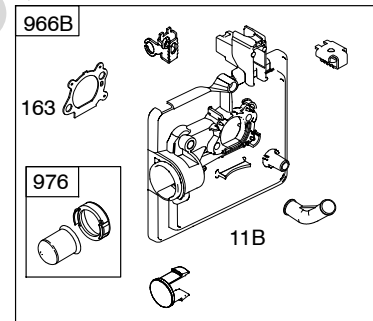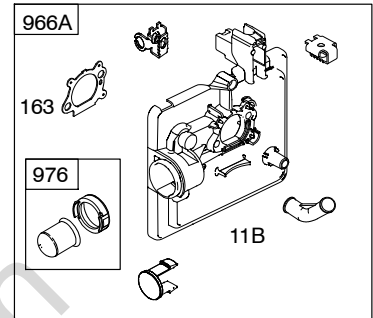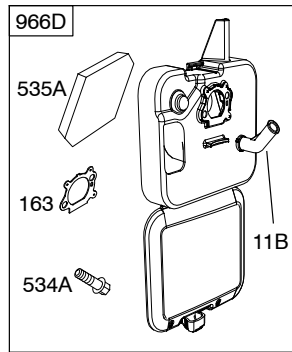 
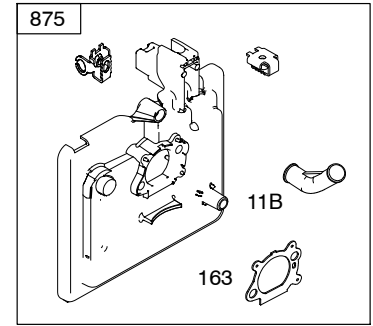 
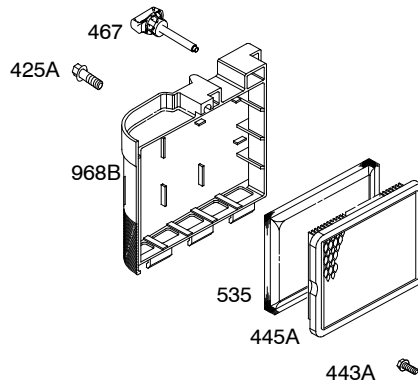 
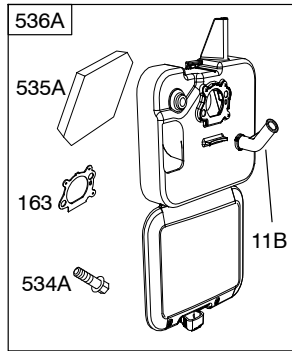 


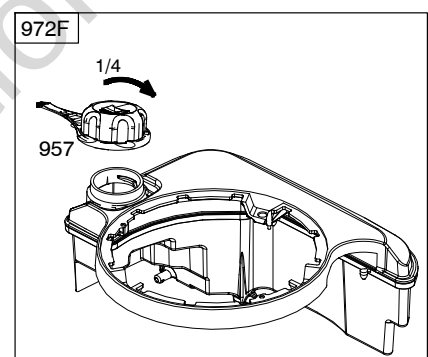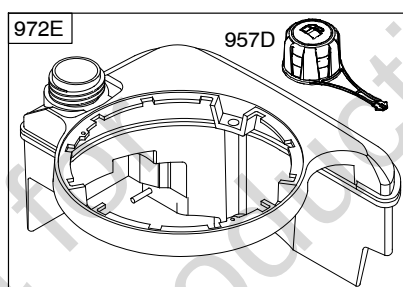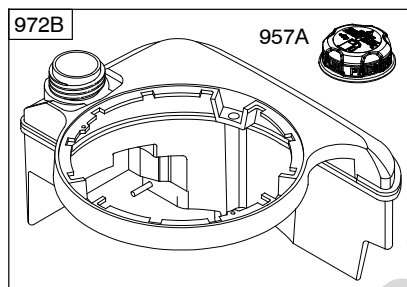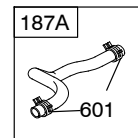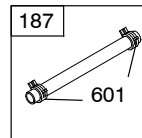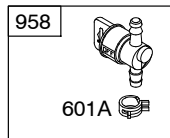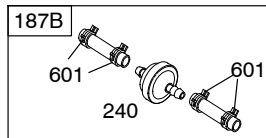

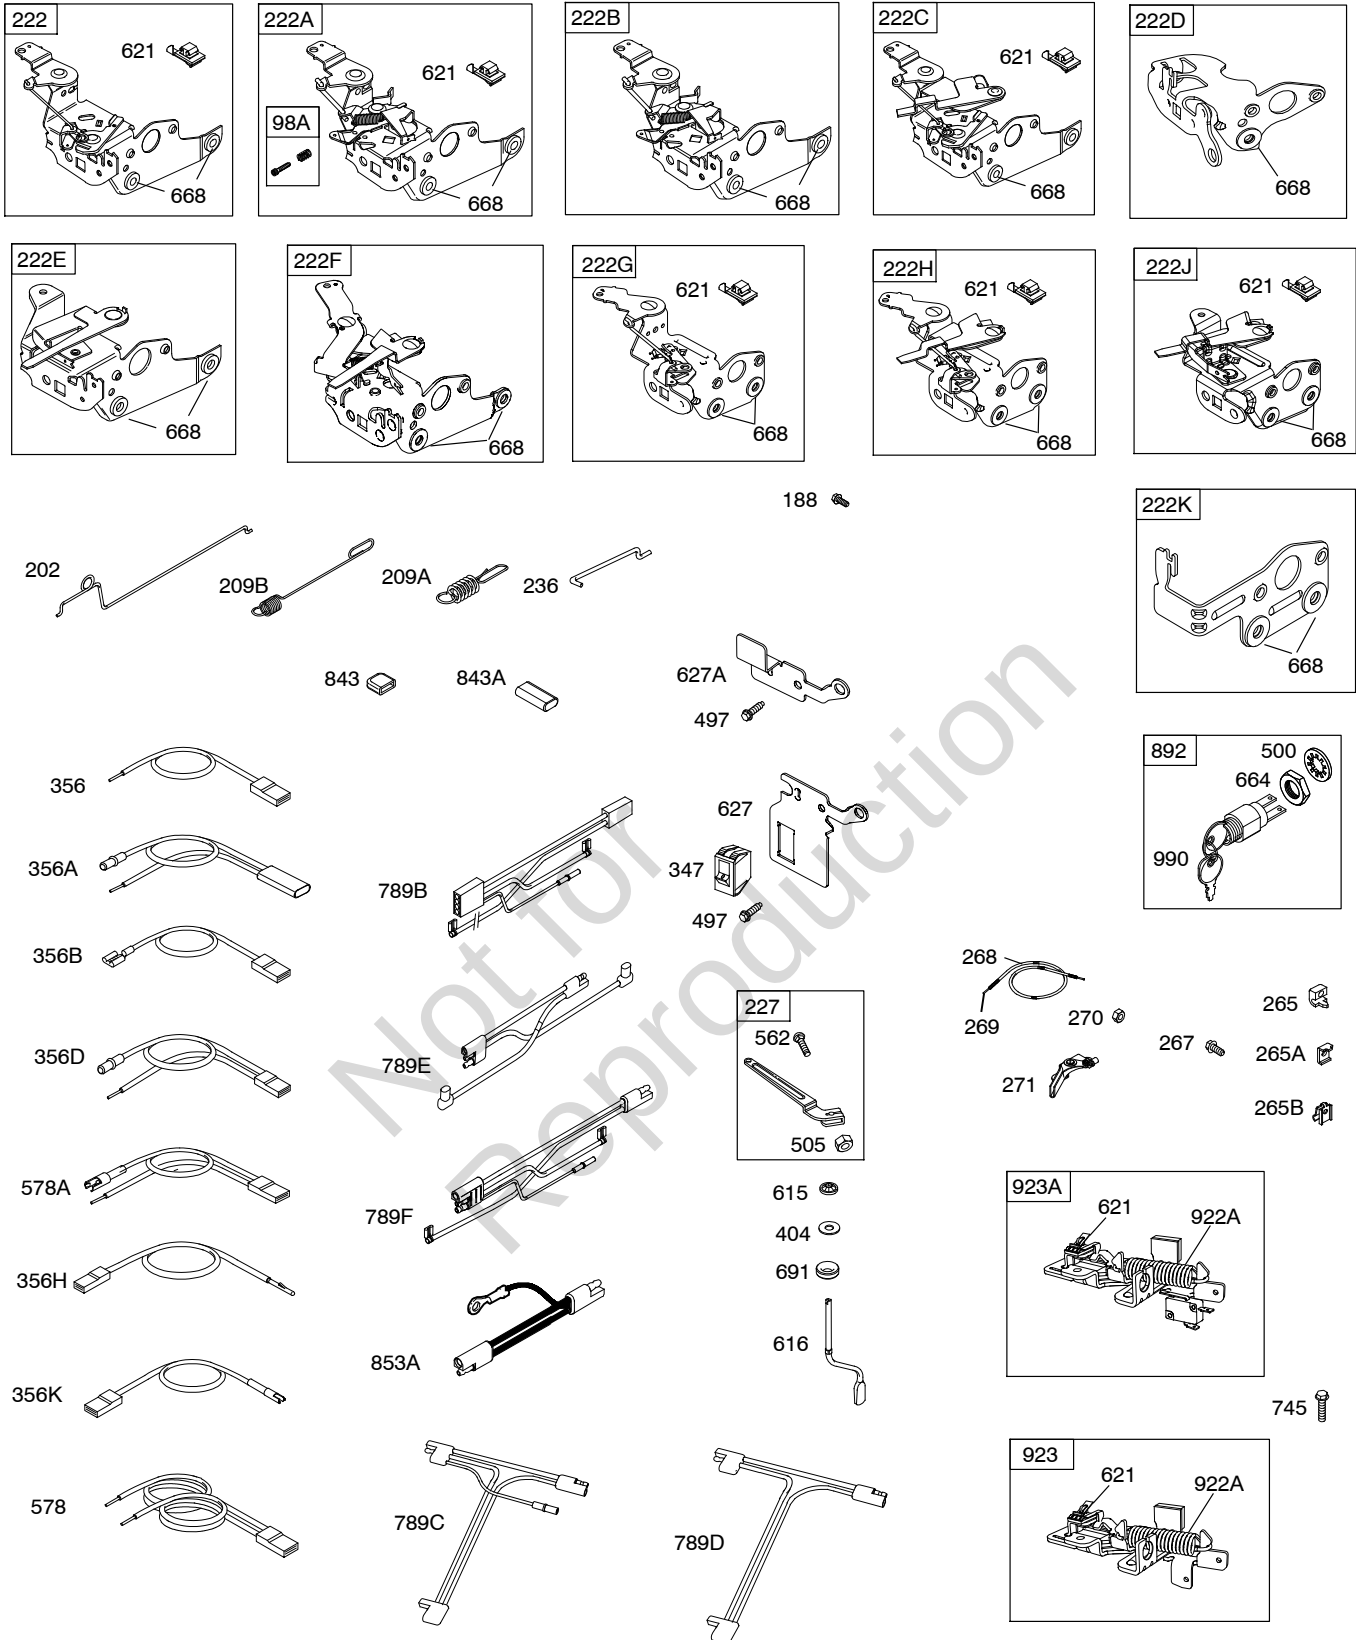

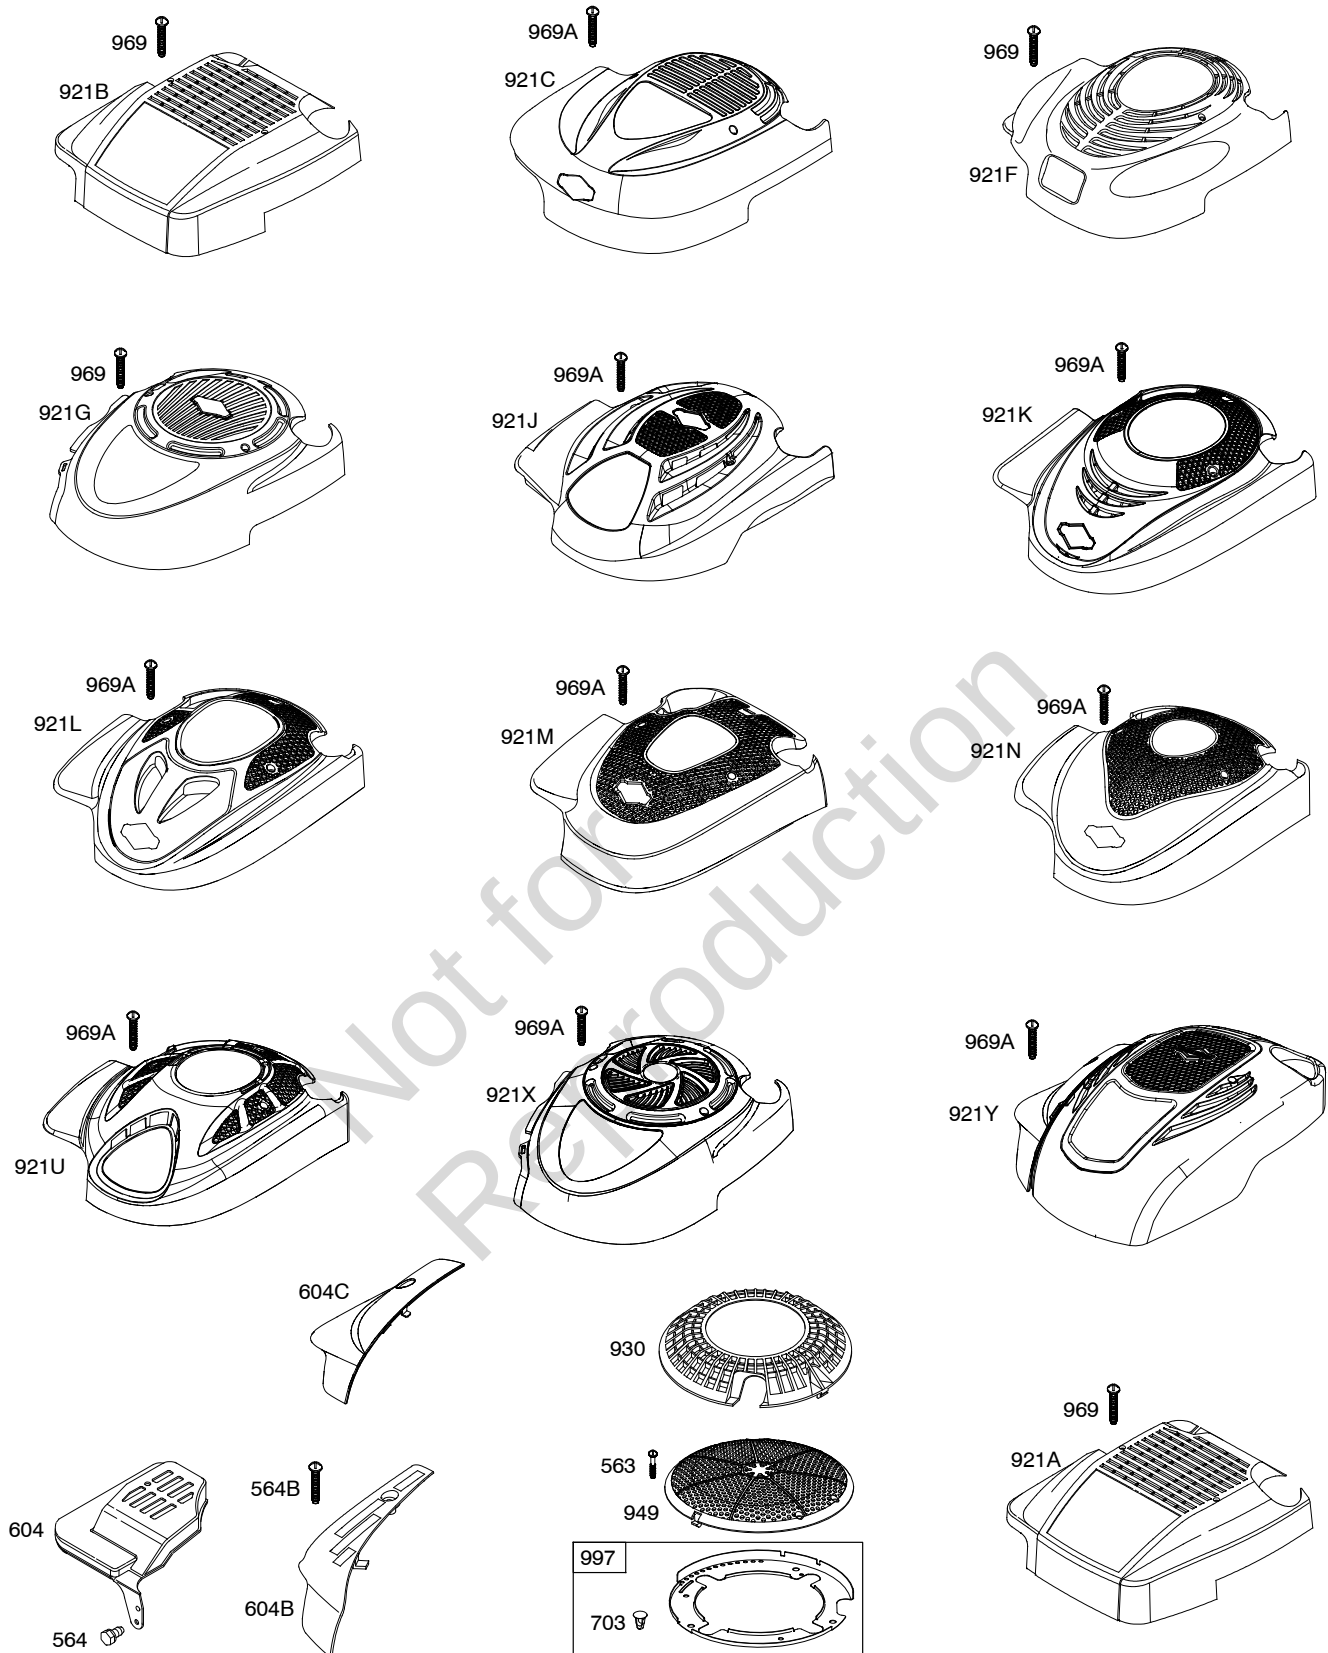

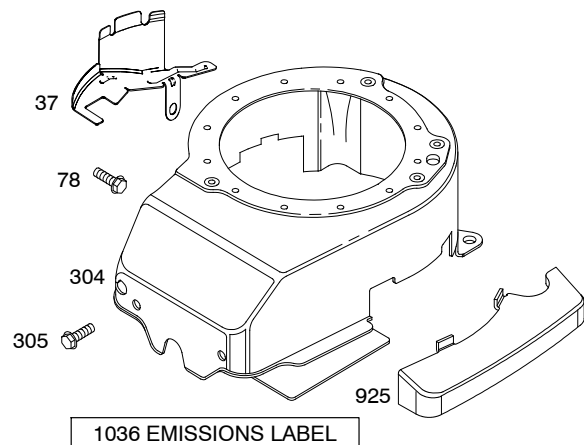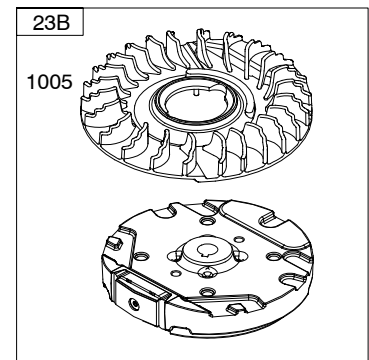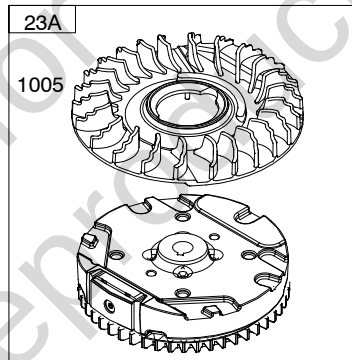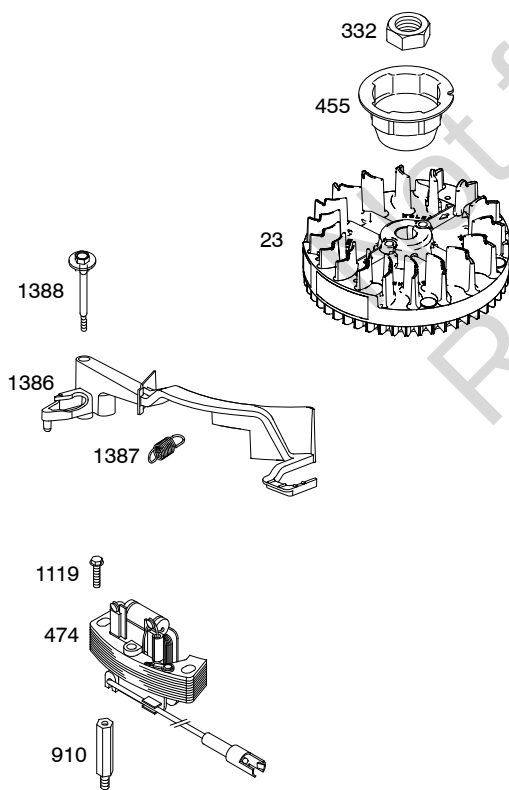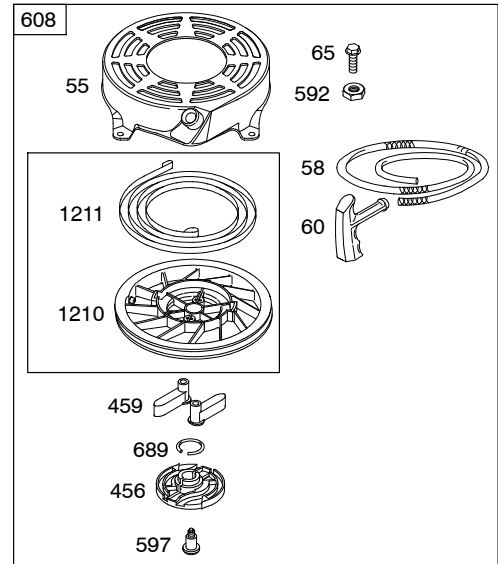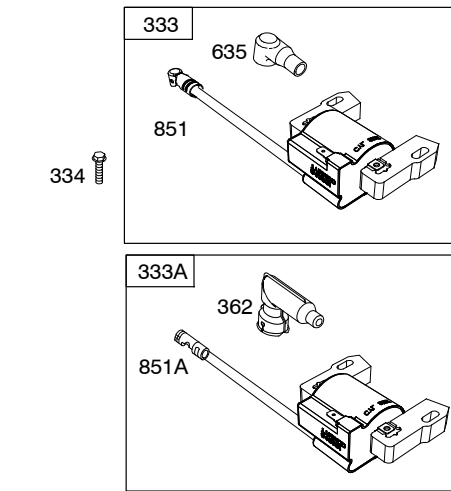

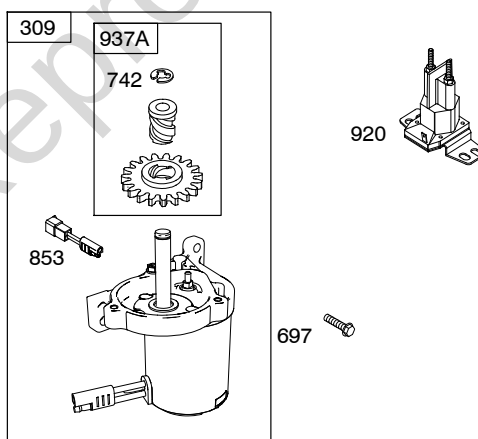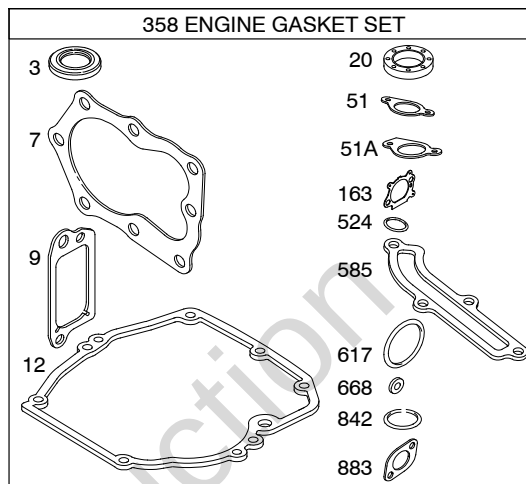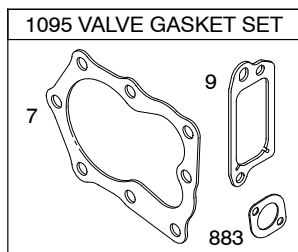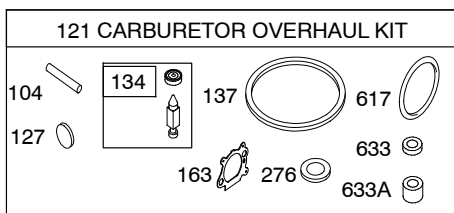

126M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	592645	Cylinder Assembly			Used on Type No(s).	23B	790536	Flywheel
2	796961	Kit-Bushing/Seal (Magnetos Side)			0297, 0335.			Used on Type No(s).
3	299819s	Seal-Oil (Magnetos Side)			797019 Crankshaft			0002, 0003, 0005,
4	493279	Sump-Engine			Used on Type No(s).			0006, 0009, 0017,
		----- Note -----			0005, 0122, 0194,			0115, 0118, 0120,
		498983 Sump-Engine			0290, 0364, 0402,			0122, 0130, 0132,
		Used on Type No(s).			0440, 0444, 1007,			0135, 0148, 0152,
		0122, 0432, 1006,			1009, 1016.			0192, 0194, 0289,
		1007.			797681 Crankshaft			0295, 0297, 0298,
5	590411	Head-Cylinder			Used on Type No(s).			0301, 0321, 0335,
7	799875	Gasket-Cylinder Head			0019, 0006, 0115,			0342, 0344, 0364,
8	590395	Breather Assembly			0118, 0148, 0426,			0365, 0379, 0426,
9	699833	Gasket-Breather			0523, 1006, 1018,			0432, 0436, 0440,
10	691125	Screw			6523.			0441, 0442, 0450,
		(Breather Assembly)			791061 Crankshaft			0451, 0523, 1002,
11	691781	Tube-Breather			Used on Type No(s).			1004, 1005, 1006,
11B	691923	Tube-Breather			1030.			1007, 1010, 1014,
12	692232	Gasket-Crankcase			694478 Crankshaft			1030, 1378, 1479,
13	590422	Screw			Used on Type No(s).			6523.
		(Cylinder Head)			0434, 0521, 6521.	24	222698s	Key-Flywheel
15	690946	Plug-Oil Drain			797020 Crankshaft	25	590404	Piston Assembly
		(External 7/16" Sq)			Used on Type No(s).			(Standard)
		----- Note -----			1026.			----- Note -----
		691680 Plug-Oil,			694079 Crankshaft			590405 Piston
		Drain			Used on Type No(s).			Assembly
		(Internal 3/8" Square			1701.			(.020" Oversize)
		Socket)			590808 Crankshaft	26	590402	Ring Set
16	797017	Crankshaft			Used on Type No(s).			(Standard)
		----- Note -----			0120, 0379.			----- Note -----
		797018 Crankshaft			590807 Crankshaft			590403 Ring Set
		Used on Type No(s).			Used on Type No(s).			(.020" Oversize)
		0003, 0009, 0110,			0022, 0119, 0121,	27	691588	Lock-Piston Pin
		0023, 0114, 0152,			0123, 0124, 0125,	28	298909	Pin-Piston
		0153, 0192, 0197,			0126, 0127, 0128,	29	797306	Rod-Connecting
		0203, 0213, 0284,			0129, 0299, 0362,	32	691664	Screw
		0291, 0318, 0365,			0420, 1031, 3205,			(Connecting Rod)
		0414, 0415, 0437,			3216, 3428, 3426,	32A	695759	Screw
		0441, 0447, 0449,			3427.			(Connecting Rod)
		0451, 1004, 1010,			591159 Crankshaft	33	590394	Valve-Exhaust
		1011, 1015, 1378,			Used on Type No(s).	34	590393	Valve-Intake
		1479, 1615, 5050,			0017, 0132, 0135.	35	691270	Spring-Valve
		5060, 5213, 5214,	20	399781s	Seal-Oil			(Intake)
		5414, 5660.			(PTO Side)	36	691270	Spring-Valve
		797372 Crankshaft	22	691092	Screw			(Exhaust)
		Used on Type No(s).			(Crankcase	37	793756	Guard-Flywheel
		0002, 0130, 0295,			Cover/Sump)	40	692194	Retainer-Valve
		0301, 0321, 0342,	23	691987	Flywheel	43	691997	Slinger-Governor/Oil
		0344, 0436, 0442,	23A	591282	Flywheel			----- Note -----
		0450, 1005, 1014.			Used on Type No(s).			691486 Slinger-
		694850 Crankshaft			0019, 0023, 0110,			Governor/Oil
		Used on Type No(s).			0114, 0153, 0213,			Used on Type No(s).
		0289, 0298, 0432,			0414, 0415, 5050,			0019.
		1002.			5060, 5213, 5214,			
		696290 Crankshaft			5414.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
45	690548	Tappet-Valve	117A	799604	Jet-Main (Standard) Used on Type No(s). 0003, 0005, 0006, 0007, 0009, 0023, 0114, 0118, 0197, 0203, 0289, 0290, 0291, 0298, 0365, 0414, 0415, 0432, 0441, 0444, 0447, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5214, 5414.	118B	797575	Jet-Main (High Altitude) Used on Type No(s). 0019, 0110, 0115, 0148, 0152, 0153, 0156, 0194, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1002, 1004, 1005, 1006, 6521, 6523.
46	691449	Camshaft				118C	798660	Jet-Main (High Altitude) Used on Type No(s). 0122, 0192, 0213, 1007, 5213.
50A	794305	Manifold-Intake				121	498260	Kit-Carburetor Overhaul
51	272199s	Gasket-Intake				125	799866	Carburetor (Autochoke System) ----- Note ----- 592647 Carburetor (Mow n Stow) Used on Type No(s). 0022.
51A	794306	Gasket-Intake				125A	799868	Carburetor (Primer System) Used on Type No(s). 0003, 0005, 0006, 0007, 0009, 0023, 0114, 0118, 0197, 0203, 0289, 0290, 0291, 0298, 0365, 0414, 0415, 0432, 0441, 0444, 0447, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5214, 5414.
54	691650	Screw (Intake Manifold)						
55	691421	Housing-Rewind Starter ----- Note ----- 697670 Housing Review Starter Used on Type No(s). 0003, 1378, 1479.	117B	797574	Jet-Main (Standard) Used on Type No(s). 0019, 0110, 0115, 0148, 0152, 0153, 0156, 0194, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1002, 1004, 1005, 1006, 6521, 6523.			
58	697316	Rope-Starter (Cut To Required Length)	117C	798661	Jet-Main (Standard) Used on Type No(s). 0122, 0192, 0213, 1007, 5213.			
60	281434s	Grip-Starter Rope						
60C	799716	Grip-Starter Rope						
65	690837	Screw (Rewind Starter)						
78	691108	Screw (Flywheel Guard)	118	798661	Jet-Main (High Altitude)			
81	691740	Lock-Muffler Screw	118A	799227	Jet-Main (High Altitude) Used on Type No(s). 0003, 0005, 0006, 0007, 0009, 0023, 0114, 0118, 0197, 0203, 0289, 0290, 0291, 0298, 0365, 0414, 0415, 0432, 0441, 0444, 0447, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5214, 5414.			
95	691636	Screw (Throttle Valve)						
97	696565	Shaft-Throttle (Plastic)						
97A	795881	Shaft-Throttle Used on Type No(s). 0122, 0192, 0213, 1007, 5213.						
98	398185	Kit-Idle Speed						
98A	493280	Kit-Idle Speed						
104	797622	Pin-Float Hinge						
108	691182	Valve-Choke ----- Note ----- 796993 Valve-Choke Used on Type No(s). 0019, 0115, 0148, 0152, 0153, 0156, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1005, 1006, 6521, 6523.						
108A	795935	Valve-Choke						
109	494218	Shaft-Choke Used on Type No(s). 0110, 0152, 0153.						
109A	498593	Shaft-Choke						
117	590440	Jet-Main (Standard)						

126M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125B	799869	Carburetor (Choke System) Used on Type No(s). 0019, 0115, 0148, 0156, 0194, 0297, 0335, 0426, 0431, 0434, 0436, 0440, 0521, 0523, 1002, 1004, 1005, 1006, 6521, 6523. ----- Note ----- 799867 Carburetor (Choke System) Used on Type No(s). 0110, 0152, 0153.	130A	691181	Valve-Throttle Used on Type No(s). 0122, 0192, 0213, 1007, 5213.			691291 Spring-Governor Used on Type No(s). 0003, 0006, 0009, 0023, 0114, 0156, 0203, 0289, 0291, 0297, 0298, 0335, 0365, 0414, 0426, 0431, 0432, 0434, 0436, 0440, 0441, 0447, 0451, 0521, 1002, 1006, 1010, 1011, 1378, 1479, 5050, 5214, 5414, 6521.
125C	799870	Carburetor (Choke System) Used on Type No(s). 0122, 0192, 0213, 1007, 5213.	133	398187	Float-Carburetor			691851 Spring-Governor Used on Type No(s). 0004, 0005, 0007, 0018, 0108, 0111, 0115, 0118, 0364, 0415.
127	694468	Plug-Welch	134	398188	Kit-Needle/Seat ----- Note ----- 593873 Kit-Needle-Seat (Mow n Stow) Used on Type No(s). 0022.			793007 Spring-Governor Used on Type No(s). 0152, 0153.
130	696564	Valve-Throttle	137	796610	Gasket-Float Bowl (1/8" Thick)			691852 Spring-Governor Used on Type No(s). 0011, 0022, 0119, 0120, 0121, 0124, 0126, 0128, 0129.
			137A	693981	Gasket-Float Bowl (1/16" Thick)			799505 Spring-Governor Used on Type No(s). 0110.
			141	796193	Shaft-Choke			217 690354 Spring-Choke Return
			163	795629	Gasket-Air Cleaner			222 790143 Bracket-Control (Remote/Manual Friction)(Primer) Used on Type No(s). 0003, 0005, 0009, 0023, 0129, 0289, 0291, 0298, 0365, 0432, 0441, 0442, 0444, 0449, 0451, 1010, 1011, 1479, 5050, 5214.
			187	791766	Line-Fuel (Cut to Required Length)			222A 692021 Bracket-Control (Remote, Choke A Matic) Used on Type No(s). 0152, 0153.
			187A	791873	Line-Fuel (Molded)			222B 790982 Bracket-Control Used on Type No(s). 0110.
			187B	791891	Line-Fuel (Includes Filter)			
			188	693399	Screw (Control Bracket)			
			190	690940	Screw (Fuel Tank)			
			202	691829	Link-Mechanical Governor			
			209A	795883	Spring-Governor			
			209B	699056	Spring-Governor ----- Note ----- 691292 Spring-Governor Used on Type No(s). 0123, 0125, 0127, 0290, 0299, 0402, 0420, 0444, 3426. 691290 Spring-Governor Used on Type No(s). 0002, 0019, 0130, 0194, 0197, 0295, 0301, 0321, 0342, 0344, 0442, 0449, 0450, 1005, 1014. 790944 Spring-Governor Used on Type No(s). 0148, 0523, 6523. 795879 Spring-Governor Used on Type No(s). 0122, 0192, 0213, 1007, 5213.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke) Used on Type No(s). 0019, 0115, 0194, 0436, 0440.	236	691826	Link-Lockout			692038 Muffler (Used Before Code Date 13121600). Used on Type No(s). 0003, 0005, 0006, 0009, 0110, 0114, 0115, 0118, 0122, 0148, 0152, 0153, 0156, 0192, 0194, 0197, 0203, 0213, 0289, 0290, 0291, 0297, 0298, 0335, 0365, 0414, 0415, 0426, 0431, 0432, 0434, 0440, 0441, 0444, 0447, 0449, 0451, 0521, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5213, 5214, 6521, 6523.
222D	793754	Bracket-Control (Fixed Speed) Used on Type No(s). 0364.	240	298090s	Fuel-Filter			
222E	692982	Bracket-Control (Manual Friction, 5 Position Manual Choke) Used on Type No(s). 0148, 0523.	265	690798	Clamp-Casing			
222F	795880	Bracket-Control Used on Type No(s). 0122, 0192, 0213, 1007, 5213.	265A	691024	Clamp-Casing			
222G	593542	Bracket-Control Used on Type No(s). 0002, 0004, 0006, 0011, 0017, 0111, 0114, 0118, 0130, 0132, 0135, 0197, 0203, 0290, 0295, 0301, 0321, 0342, 0344, 0402, 0414, 0415, 0437, 0447, 0450, 1009, 1014, 1015, 1016, 1018, 1025, 1026, 1031, 1378, 1615, 1625, 1701, 5060, 5062, 5414, 5660, 5662.	265B	692179	Clamp-Casing			
			267	691044	Screw (Casing Clamp)			
			268	691025	Casing-Control Wire (Cut to Required Length)			
			269	691026	Wire-Control (Cut to Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever-Control			
			276	271716	Washer-Sealing			
			276A	797632	Washer-Sealing			
			287	690940	Screw (Dipstick Tube)			
			291	593208	Thermostat			
			300	593581	Muffler (Used After Code Date 13121500). ----- Note ----- 790828 Muffler (Used Before Code Date 13121600). 593819 Muffler (Used After Code Date 13121500). Used on Type No(s). 0003, 0005, 0006, 0009, 0110, 0114, 0115, 0118, 0122, 0148, 0152, 0153, 0156, 0192, 0194, 0197, 0203, 0213, 0289, 0290, 0291, 0297, 0298, 0335, 0365, 0414, 0415, 0426, 0431, 0432, 0434, 0440, 0441, 0444, 0447, 0449, 0451, 0521, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1378, 1479, 1701, 5050, 5060, 5062, 5213, 5214, 6521, 6523. 692038 Muffler Used on Type No(s). 0019.	304	790826	Housing-Blower ----- Note ----- 493294 Housing-Blower Used on Type No(s). 0003, 0005, 0006, 0009, 0019, 0023, 0110, 0114, 0115, 0118, 0122, 0148, 0152, 0153, 0156, 0192, 0194, 0197, 0213, 0289, 0297, 0298, 0335, 0365, 0414, 0415, 0426, 0431, 0432, 0434, 0436, 0440, 0441, 0449, 0451, 0521, 0523, 1002, 1004, 1005, 1006, 1007, 1010, 1378, 1479, 5050, 5213, 5214, 5414, 6521, 6523.
222H	593541	Bracket-Control Used on Type No(s). 6523.						
222J	593823	Bracket-Control Used on Type No(s). 0156, 0297, 0335, 0426, 0431, 0434, 0521, 1002, 1004, 1005, 1006, 6521.						
222K	593582	Bracket-Control (Fixed Speed)						
227	690783	Lever-Governor Control						

126M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
		695892 Housing-Blower Used on Type No(s). 0203, 0290, 0291, 0444, 0447, 1011, 1015, 1016, 1018, 1025, 1026, 1701, 5060, 5062.	337	593941	Plug-Spark (Resistor) ----- Note ----- 591910 Plug-Spark Used on Type No(s). 0001, 0017, 0020, 0132, 0135, 0303, 0345, 0366, 0482, 0782, 1225, 1252, 1346, 1347, 1349, 1350, 1409, 1414, 1415, 1443, 1445, 1446, 1462, 1525, 1561, 6782, 6863.	445A	491588s	Filter-Air Cleaner Cartridge		
		791291 Housing-Blower Used on Type No(s). 0002, 0017, 0120, 0130, 0135, 0295, 0301, 0321, 0342, 0344, 0364, 0379, 0442, 0450, 1014, 1030.			796560 Plug-Spark Used on Type No(s). 0015. (Platinum, Resistor)	455	791960	Cup-Flywheel		
305	691108	Screw (Blower Housing)	346	593440	Screw (Spark Arrester) (Self Drilling) (Thread Forming)	456	692299	Plate-Pawl Friction		
306	690450	Shield-Cylinder			347	691396	Switch-Rocker	459	281505s	Plate-Ratchet
306A	790836	Shield-Cylinder	356	692390	Wire-Stop	467	790842	Knob-Air Cleaner Cover		
307	690345	Screw (Cylinder Shield)	356A	795609	Wire-Stop	474	691991	Alternator		
309	799045	Motor-Starter	356B	693010	Wire-Stop	497	690664	Screw (Stop Switch Bracket)		
332	690662	Nut (Flywheel)	356D	496381	Wire-Stop	500	691086	Washer (Key Switch)		
333	590454	Armature-Magneto	356H	690791	Wire-Stop	505	691251	Nut (Governor Control Lever)		
333A	590455	Armature-Magneto Used on Type No(s). 0003, 0015, 0017, 0019, 0022, 0023, 0119, 0120, 0121, 0123, 0124, 0126, 0127, 0128, 0129, 0131, 0132, 0135, 0192, 0303, 0318, 0344, 0365, 0426, 0436, 0675-F3, 1002, 1004, 1005, 1006, 1007, 1009, 1010, 1011, 1014, 1015, 1016, 1018, 1025, 1026, 1030, 1031, 1576, 1615, 1625, 1701, 5050, 5060, 5062, 5213-F1, 5214, 5660, 5662.	356K	696030	Wire-Stop	523	499621	Dipstick		
			358	590508	Gasket Set-Engine	524	692296	Seal-Dipstick Tube		
			362	793351	Boot-Spark Plug	525	495265	Tube-Dipstick		
			363	19069	Flywheel Puller	525A	593806	Tube-Dipstick (Mow N Stow)		
			383	89838s	Wrench-Spark Plug	534A	798294	Screw (Air Cleaner)		
			404	690272	Washer (Governor Crank)	535	493537s	Filter-Pre Cleaner		
			425A	690670	Screw (Air Cleaner Cover)	535A	797301	Filter-Air Cleaner Foam Used on Type No(s). 0002, 0321, 0342, 0344, 0442, 0450.		
			443A	692523	Screw (Air Cleaner Primer Base)	536A	798293	Cleaner-Air (Used Before Code Date 14012700).		
						562	691119	Bolt (Governor Control Lever)		
						563	691138	Screw (Debris Guard Screen)		
334	691061	Screw (Magneto Armature)				564	690664	Screw (Control Cover)		

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
564B	698589	Screw (Control Cover)	668	493823	Spacer	847	692047	Dipstick/Tube Assembly
578	698153	Wire-Assembly	670	692294	Spacer-Fuel Tank	847A	593808	Dipstick/Tube Assembly (Mow N Stow)
578A	695283	Wire-Assembly	676	396548	Deflector-Muffler	851	493880s	Terminal-Spark Plug
584	697734	Cover-Breather Passage	676A	393756	Deflector-Muffler	851A	692424	Terminal-Spark Plug
585	691879	Gasket-Breather Passage	676B	397931	Deflector-Muffler	853	695268	Adapter-Wire
592	690800	Nut (Rewind Starter)	676C	493871	Deflector-Muffler	853A	695897	Adapter-Wire
597	691696	Screw (Pawl Friction Plate)	676E	393760	Deflector-Muffler	868	590410	Seal-Valve
598	592587	Shim-End Play (0.012" Thick)	676F	590745	Deflector-Muffler	869	691155	Seat-Valve (Intake)
601	791850	Clamp-Hose	677	690661	Screw (Muffler Deflector) (Thread Forming)	870	690380	Seat-Valve (Exhaust)
601A	691038	Clamp-Hose	677A	593440	Screw (Self Drilling) (Thread Forming)	871	590409	Bushing-Valve Guide
604	691757	Cover-Control	684	690345	Screw (Breather Passage Cover)	875	593580	Base-Air Cleaner (Used After Code Date 14012600).
604B	790703	Cover-Control	689	691855	Spring-Friction	----- Note -----		
604C	792418	Cover-Control (No Longer Available)	691	593837	Seal-Governor Shaft	593580 Base-Air Cleaner Primer (Used After Code Date 14020200).		
608	497680	Starter-Rewind	692	590931	Spring-Detent	Used on Type No(s). 0004, 0011, 0017, 0020, 0111, 0132, 0135, 0295, 0301, 0437, 1009, 1014, 1031, 1615, 1625, 5660, 5662.		
----- Note -----			697	691127	Screw (Drive Cap) (1/4-20 x .81" lg)	593580 Base-Air Cleaner Primer (Used After Code Date 14041300).		
697671 Starter- Rewind Used on Type No(s). 0003, 1378, 1479.			703	696309	Clip	Used on Type No(s). 0018, 0110, 0122, 0152, 0153, 0192, 0213, 0364, 1007, 5213.		
613	691340	Screw (Muffler) (1/4-20 x 2.75" Lg, 2.25" Shoulder Lg)	718	690959	Pin-Locating	593832 Base-Air Cleaner (Auto Choke)(Mow N Stow™) Used on Type No(s). 0022.		
----- Note -----			725	590459	Shield-Heat	883	691881	Gasket-Exhaust
790833 Screw (Muffler) (1/4-20 x 2.75" Lg, 2.08" Shoulder Lg)			725A	590460	Shield-Heat	883A	793497	Gasket-Exhaust
615	690340	Retainer-Governor Shaft	741	797521	Gear-Timing (Metal)	892	690646	Switch-Key
616	698801	Crank-Governor	742	93941	Retainer-E Ring	910	691094	Stud (Alternator)
----- Note -----			745	691648	Screw (Brake)			
593871 Crank-Governor (Mow N Stow™)			789B	792685	Harness-Wiring			
617	270344s	Seal-O Ring (Intake Manifold)	----- Note -----					
621	692310	Switch-Stop	789C	796385	Harness-Wiring			
627	792565	Bracket-Stop Switch	789D	796574	Harness-Wiring			
627A	793211	Bracket-Stop Switch	789E	594392	Harness-Wiring			
633	691321	Seal-Choke/Throttle Shaft	789F	594393	Harness-Wiring			
633A	693867	Seal-Choke/Throttle Shaft	832	593875	Guard-Muffler			
635	66538s	Boot-Spark Plug	832E	793568	Guard-Muffler			
664	691087	Nut (Key Switch)	836	690664	Screw (Muffler Guard)			
			836C	790745	Screw (Muffler Guard)			
			842	691031	Seal-O Ring (Dipstick Tube)			
			843	691884	Sleeve-Lever (Speed Control)			
			843A	691895	Sleeve-Lever (Choke)			

126M00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
920	691656	Solenoid-Starter	958	698183	Valve-Fuel Shut Off	966D	593945	Base-Air Cleaner
921A	796921	Cover-Blower Housing Used on Type No(s). 0010, 0136, 0137, 0988.	966A	593942	Base-Air Cleaner Primer (Used After Code Date 14020200). Used on Type No(s). 0003-F1, 0005, 0006, 0009, 0114, 0118, 0289, 0291, 0298, 0365, 0432, 0444, 0449, 0451, 1010, 1011, 1015, 1016, 1018, 1025, 1026, 1479-F1, 1701, 5050, 5060, 5062, 5214.	968B	692298	Cover-Air Cleaner
921B	692931	Cover-Blower Housing				969	690700	Screw (Blower Housing Cover)
921C	695889	Cover-Blower Housing				969A	691138	Screw (Blower Housing Cover)
921F	697343	Cover-Blower Housing				972B	699374	Tank-Fuel (Plastic)(Threaded)
921G	795064	Cover-Blower Housing				972E	796578	Tank-Fuel (Plastic)(Threaded) (Flourinated)
921J	790036	Cover-Blower Housing				972F	590490	Tank-Fuel (Plastic)(1/4 Turn)
921K	699984	Cover-Blower Housing				975	796611	Bowl-Float
921L	791026	Cover-Blower Housing				976	694395	Primer-Carburetor
921M	792652	Cover-Blower Housing				990	691959	Key Set
921N	792675	Cover-Blower Housing				994	398067	Arrestor-Spark
921U	794355	Cover-Blower Housing				997	696310	Shield-Debris
921X	796706	Cover-Blower Housing				1005	691346	Fan-Flywheel
921Y	591955	Cover-Blower Housing				1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
922A	692135	Spring-Brake				1059	692311	Kit-Screw/Washer
923	796136	Brake (Rewind Starter)				1095	590507	Gasket Set-Valve
923A	796387	Brake (Electric Starter)				1119	692979	Screw (Alternator)
925	795403	Cover-Linkage	966B	795259	Base-Air Cleaner Primer (Used Before Code Date 14012700) ----- Note ----- 795259 Base-Air Cleaner Primer (Used Before Code Date 14020300) Used on Type No(s). 0003, 0004, 0005, 0006, 0009, 0011, 0111, 0114, 0118, 0132, 0135, 0289, 0291, 0295, 0301, 0365, 0402, 0437, 0444, 0449, 0451, 1009, 1010, 1011, 1014, 1031, 1479, 1615, 1625, 5050, 5214, 5660, 5662. 795259 Base-Air Cleaner Primer (Used Before Code Date 14041400) Used on Type No(s). 0110, 0122, 0152, 0153, 0192, 0213, 0290, 0364, 1007, 5213.	1210	498144	Pulley/Spring Assembly (Pulley)
930	691919	Guard-Rewind				1211	498144	Pulley/Spring Assembly (Spring)
937A	799420	Spline-Starter				1319	794467	Label-Warning
946	691738	Stop-Rope				1330	270962	Manual-Repair
949	696306	Guard-Debris Screen				1386	790848	Vane-Air (Autochoke System)
957	799585	Cap-Fuel Tank (Black) (1/4 Turn) ----- Note ----- 591003 Cap-Fuel Tank (Red) (1/4 Turn)				1387	790849	Spring-Air Vane
957A	692046	Cap-Fuel Tank (Black) (Threaded)				1388	790850	Screw (Air Vane)
957D	796577	Cap-Fuel Tank (Black) (Threaded)						