

SONGESAND



Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

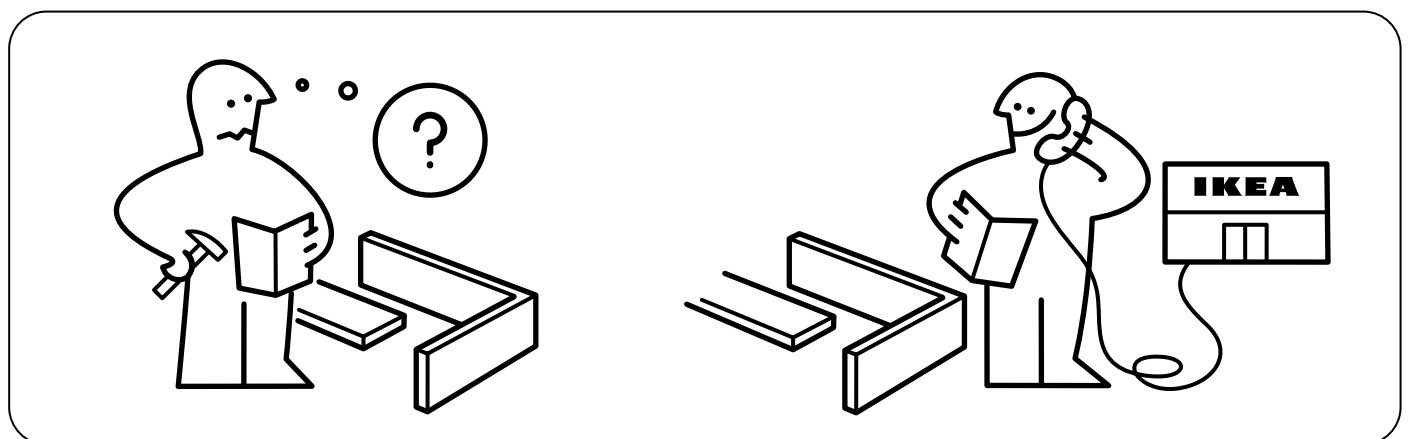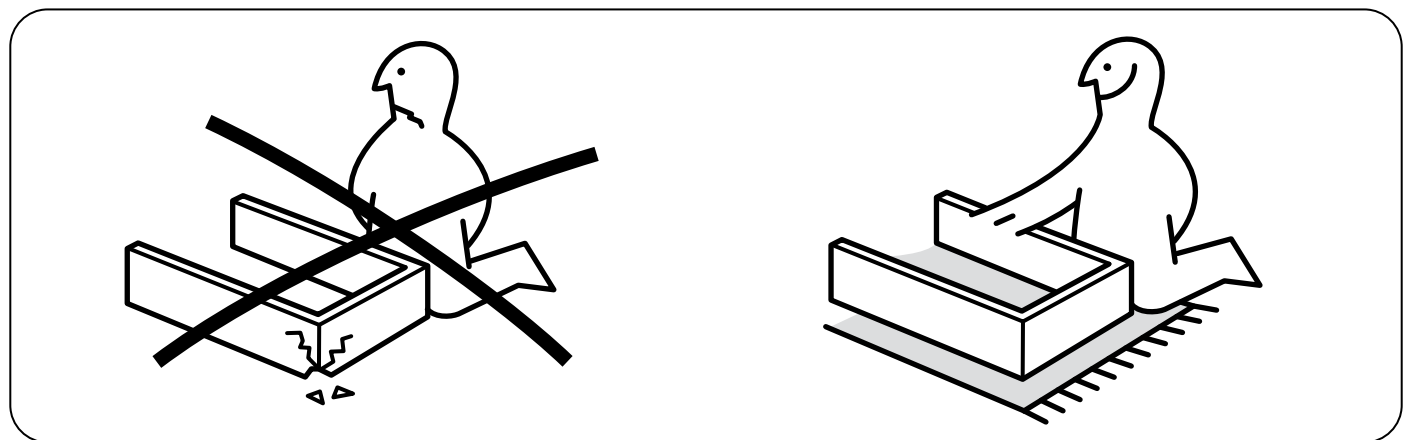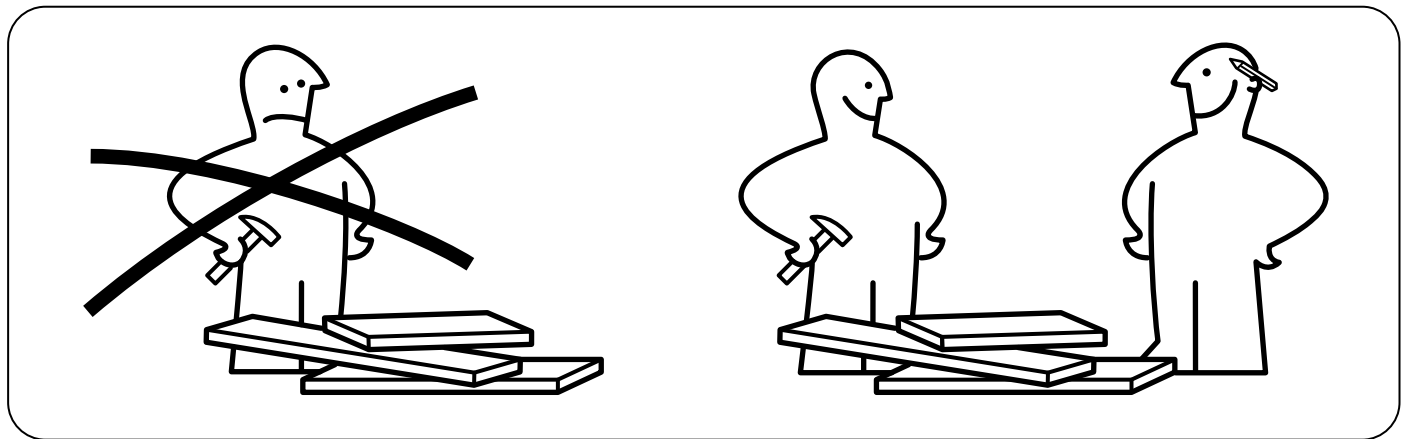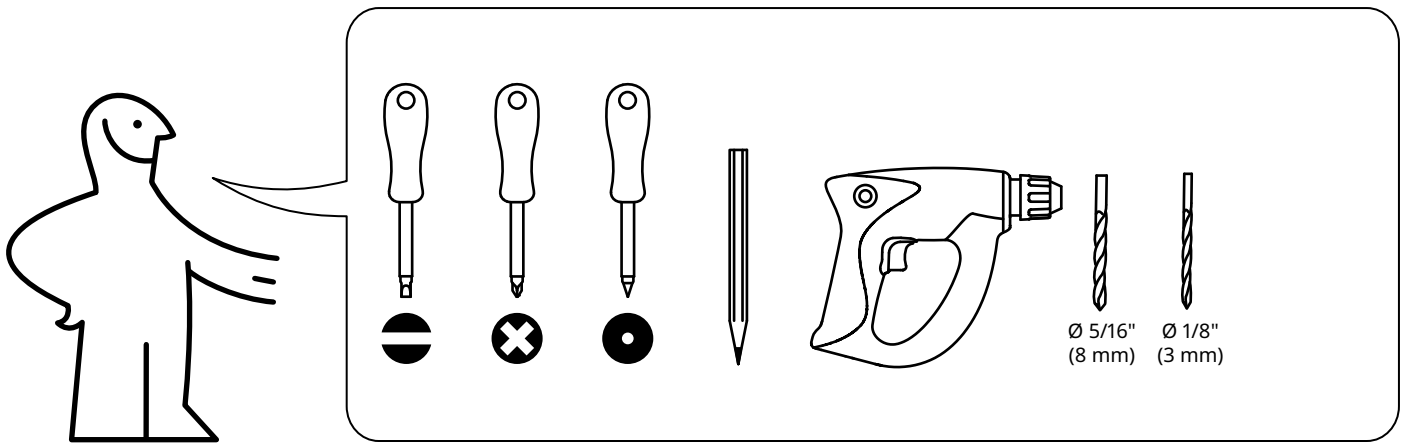

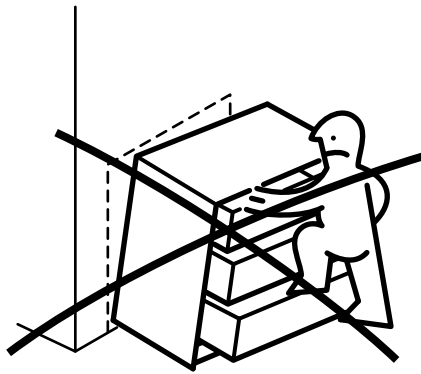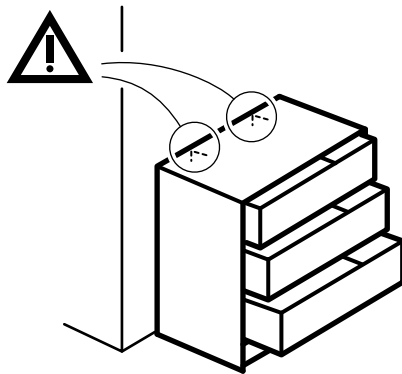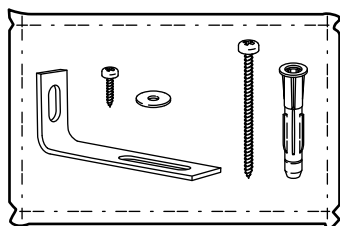

1

 

118331

14x



101345

16x



105248

4x



146114

 
24x



119252

119250


14x

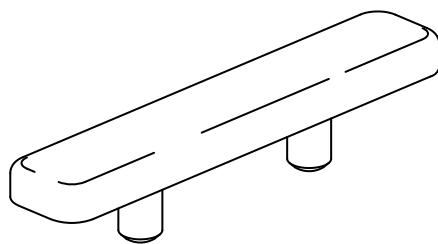

153548


158568

 5x

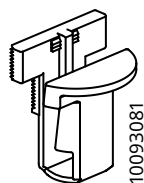


10093081

 14x

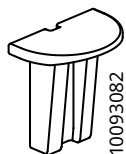




10093082

 14x



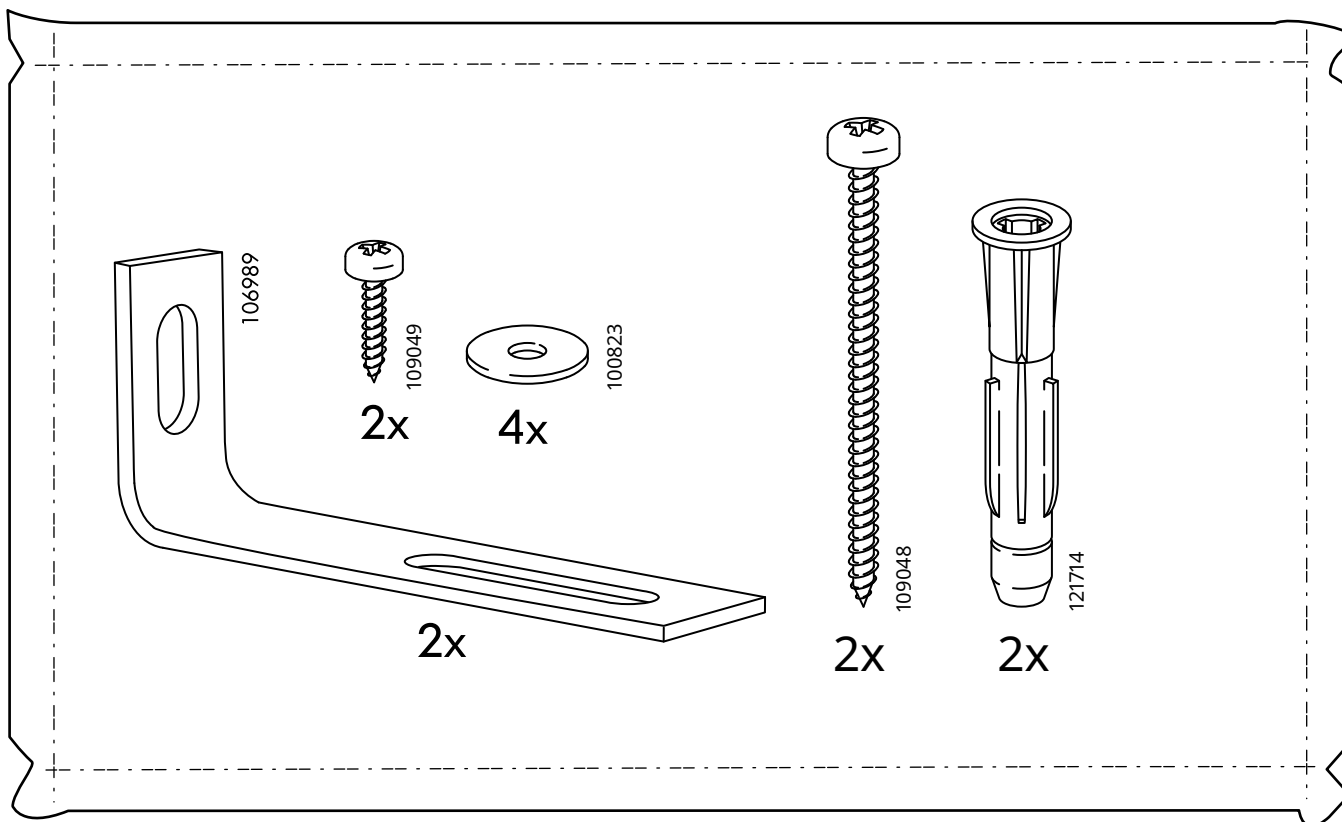


326949

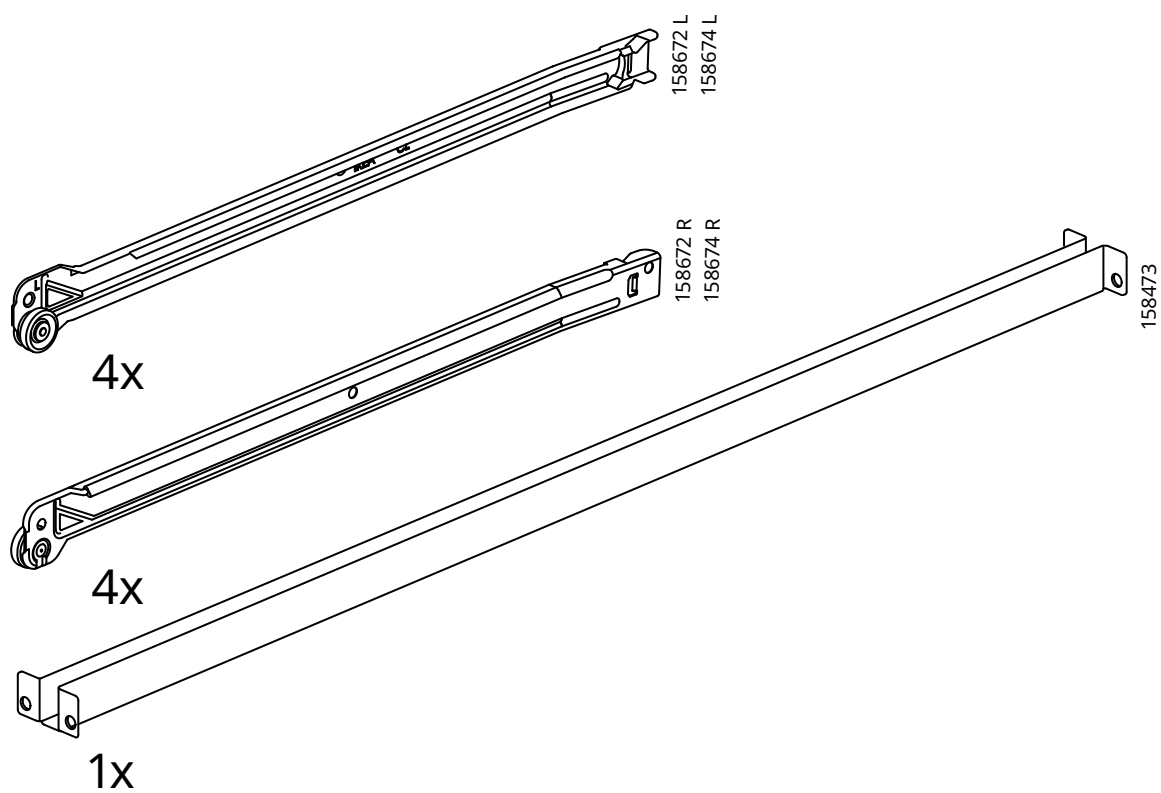 


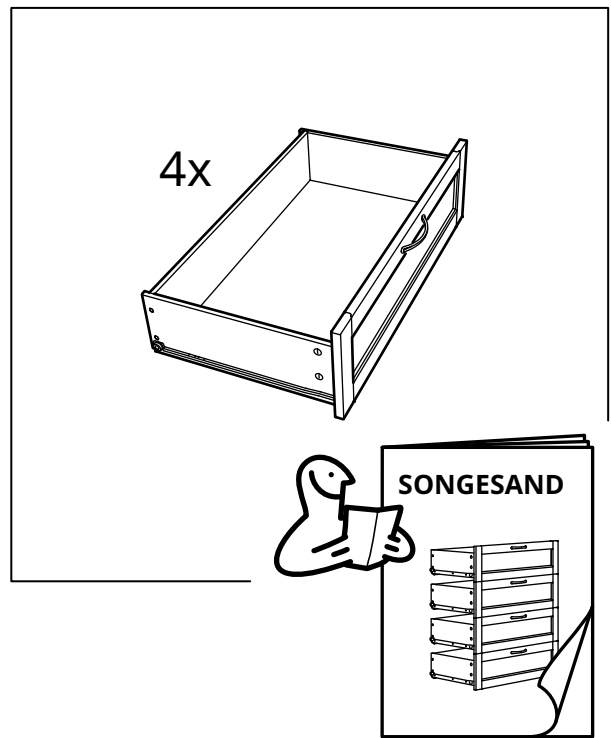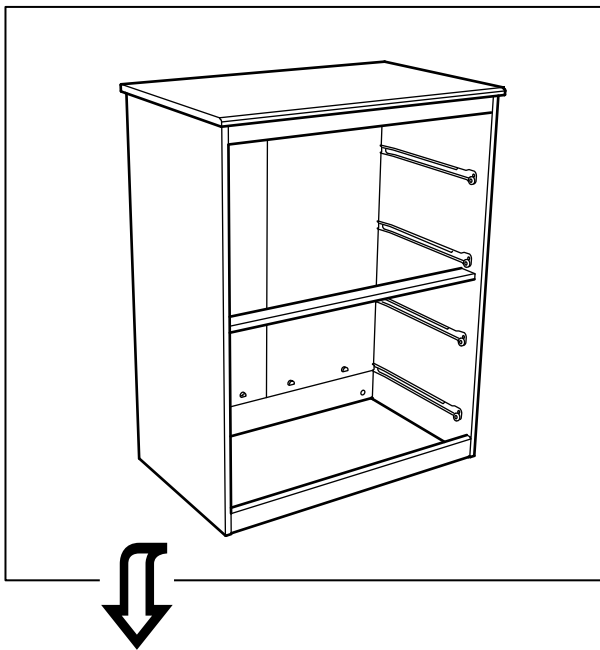  


1

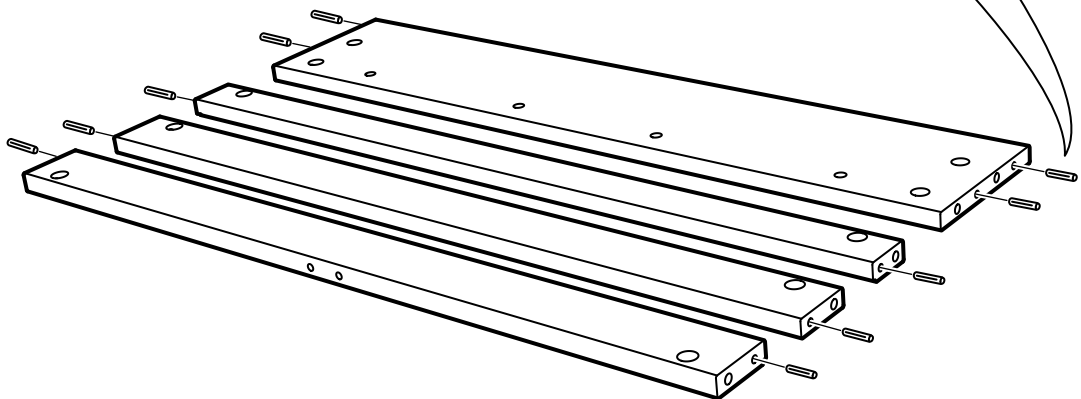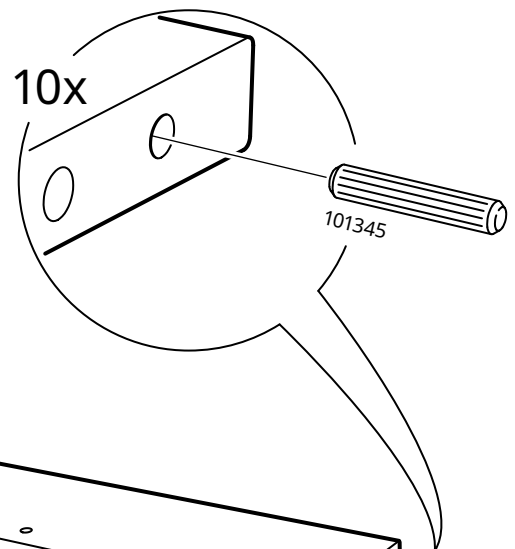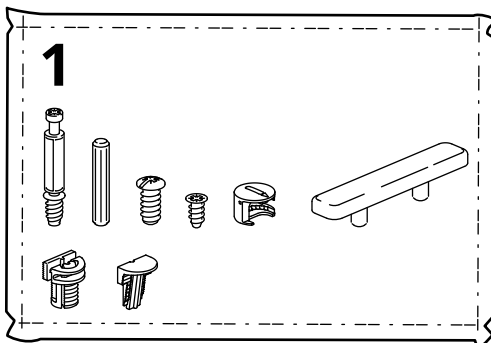   


2

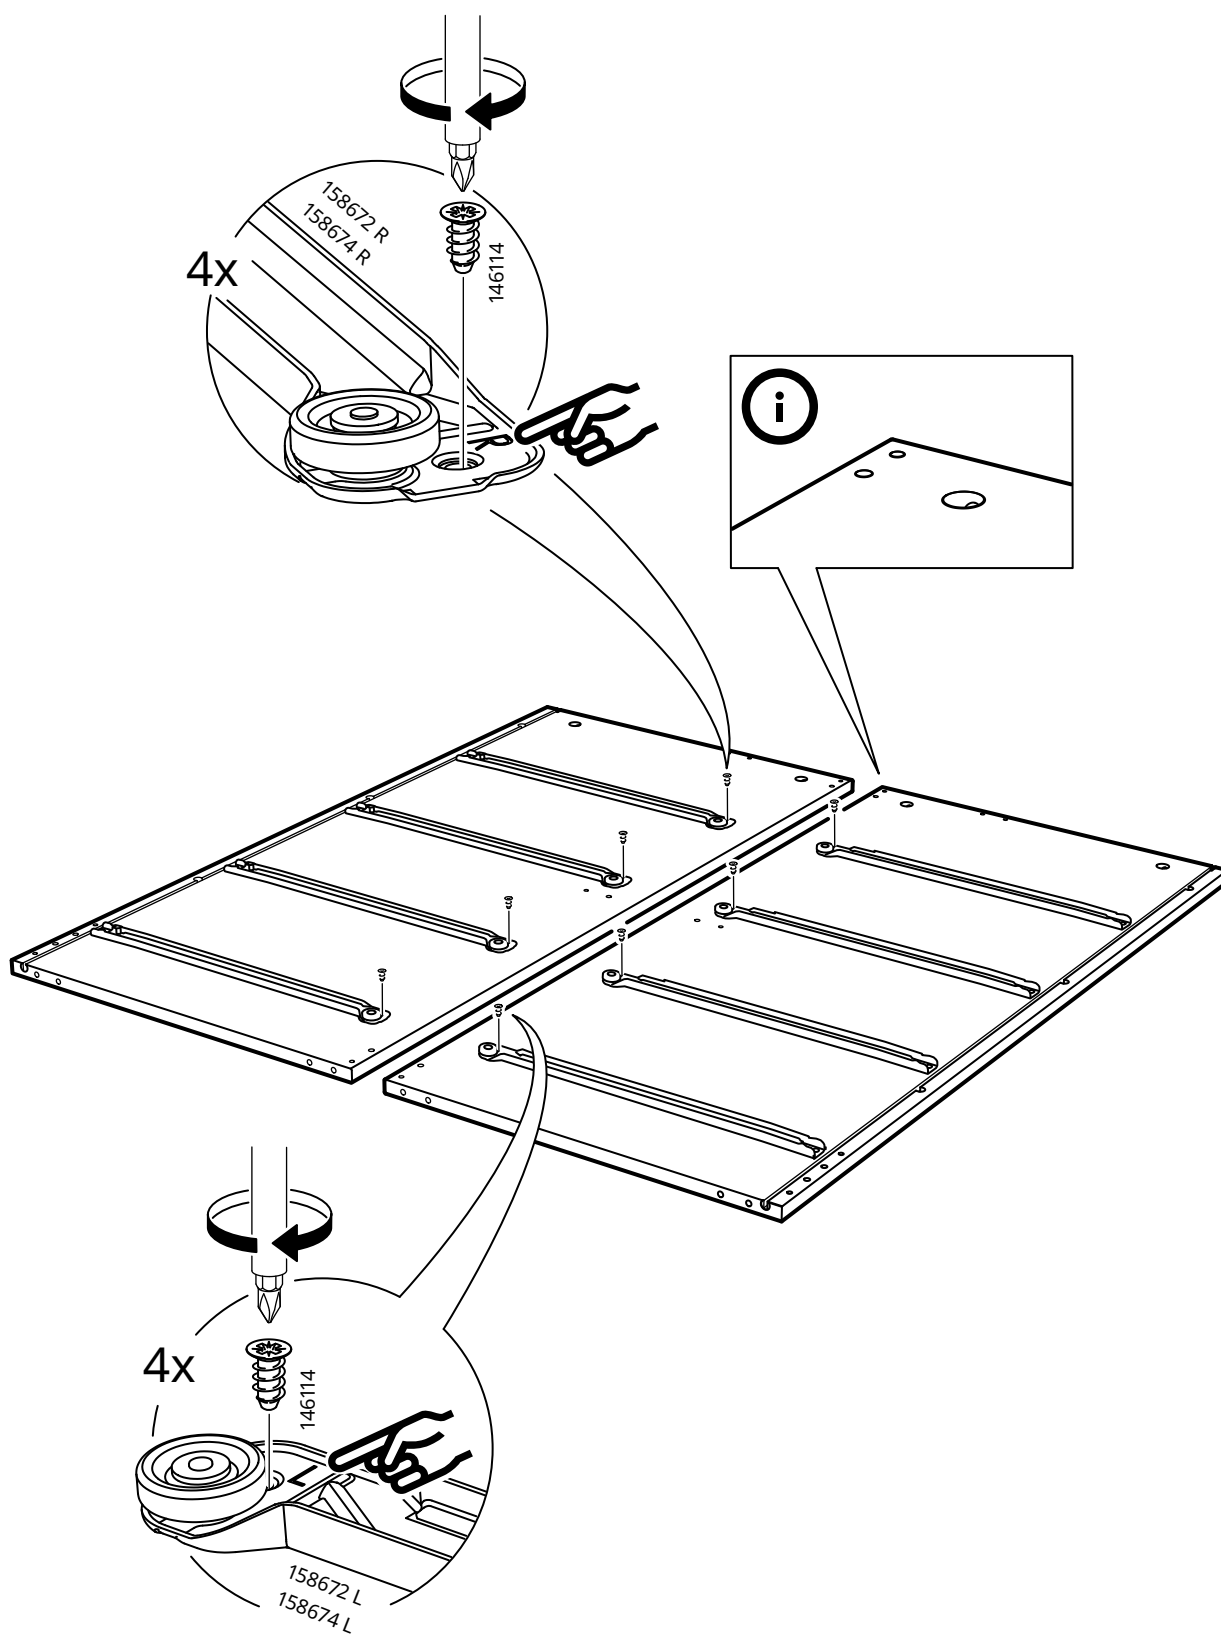 


3

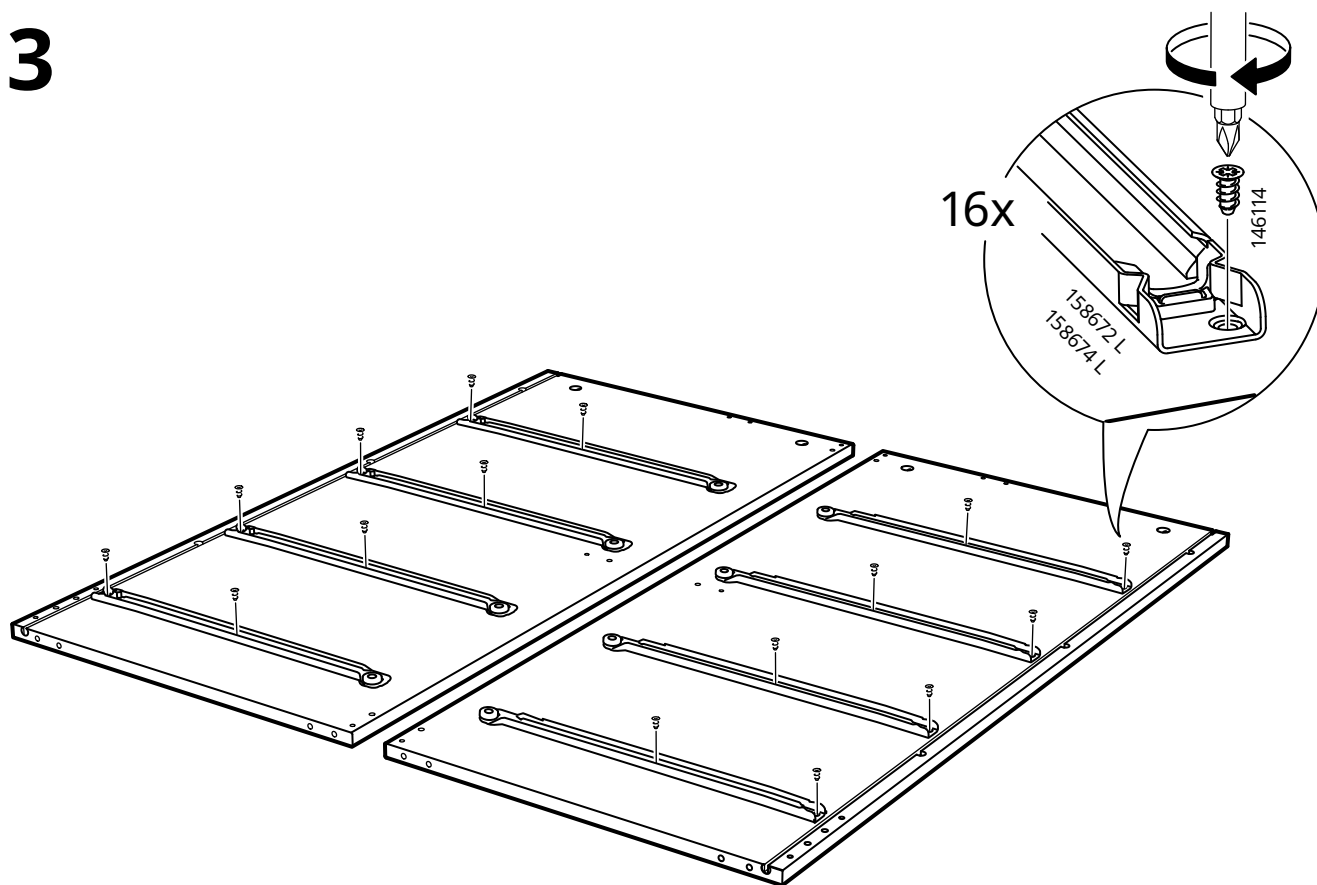 


4

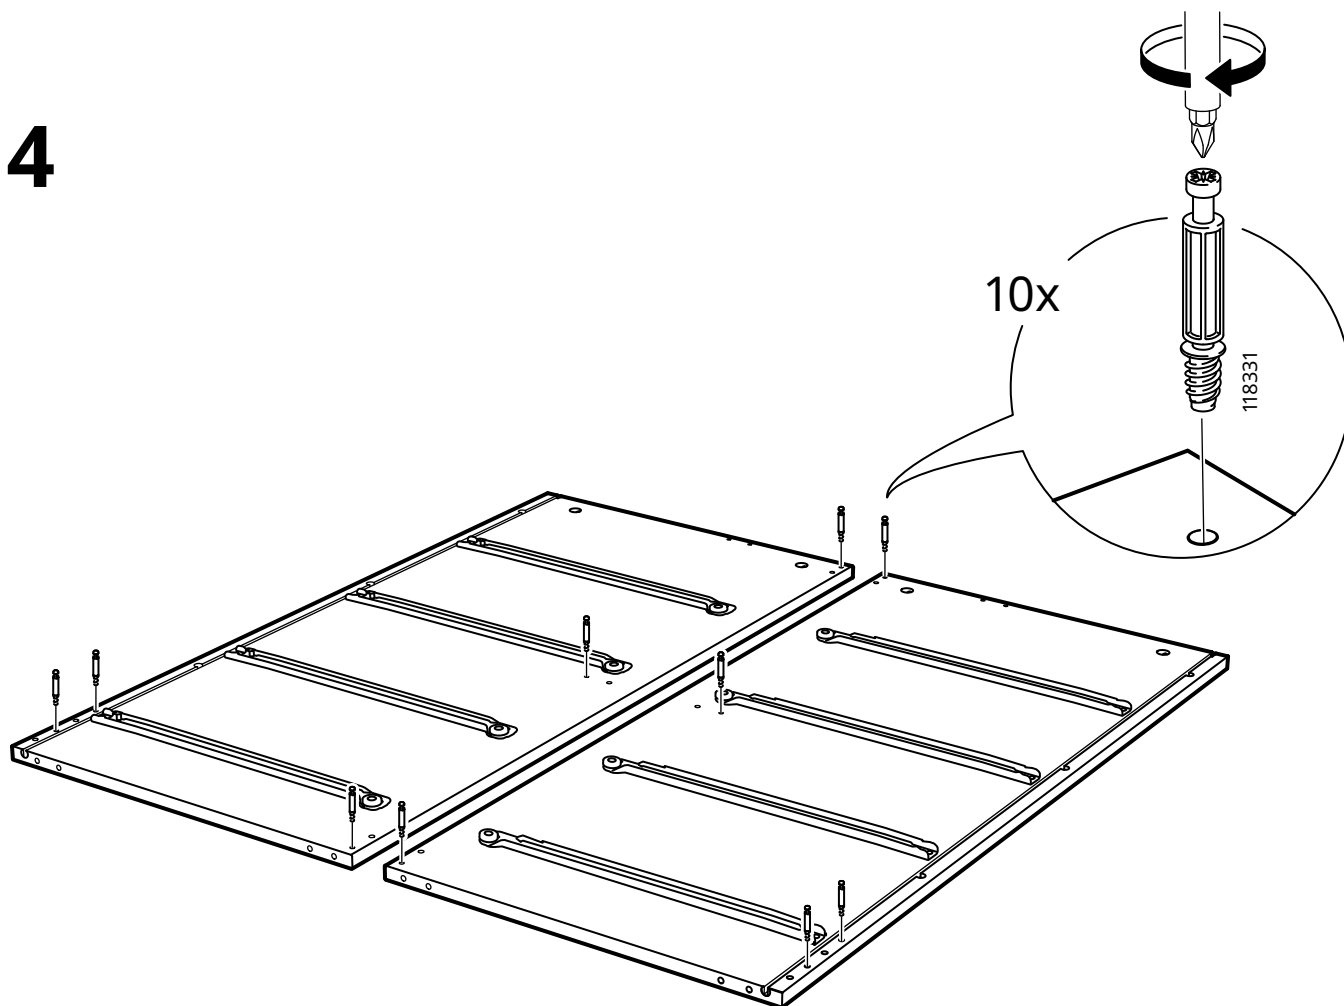 


5

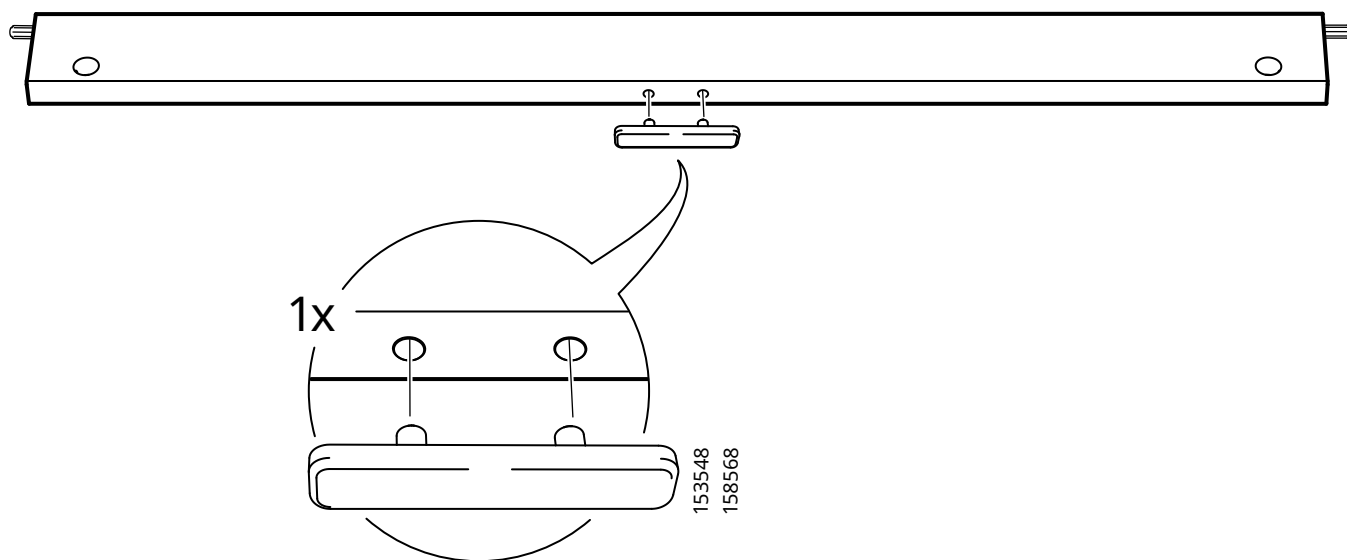 


6

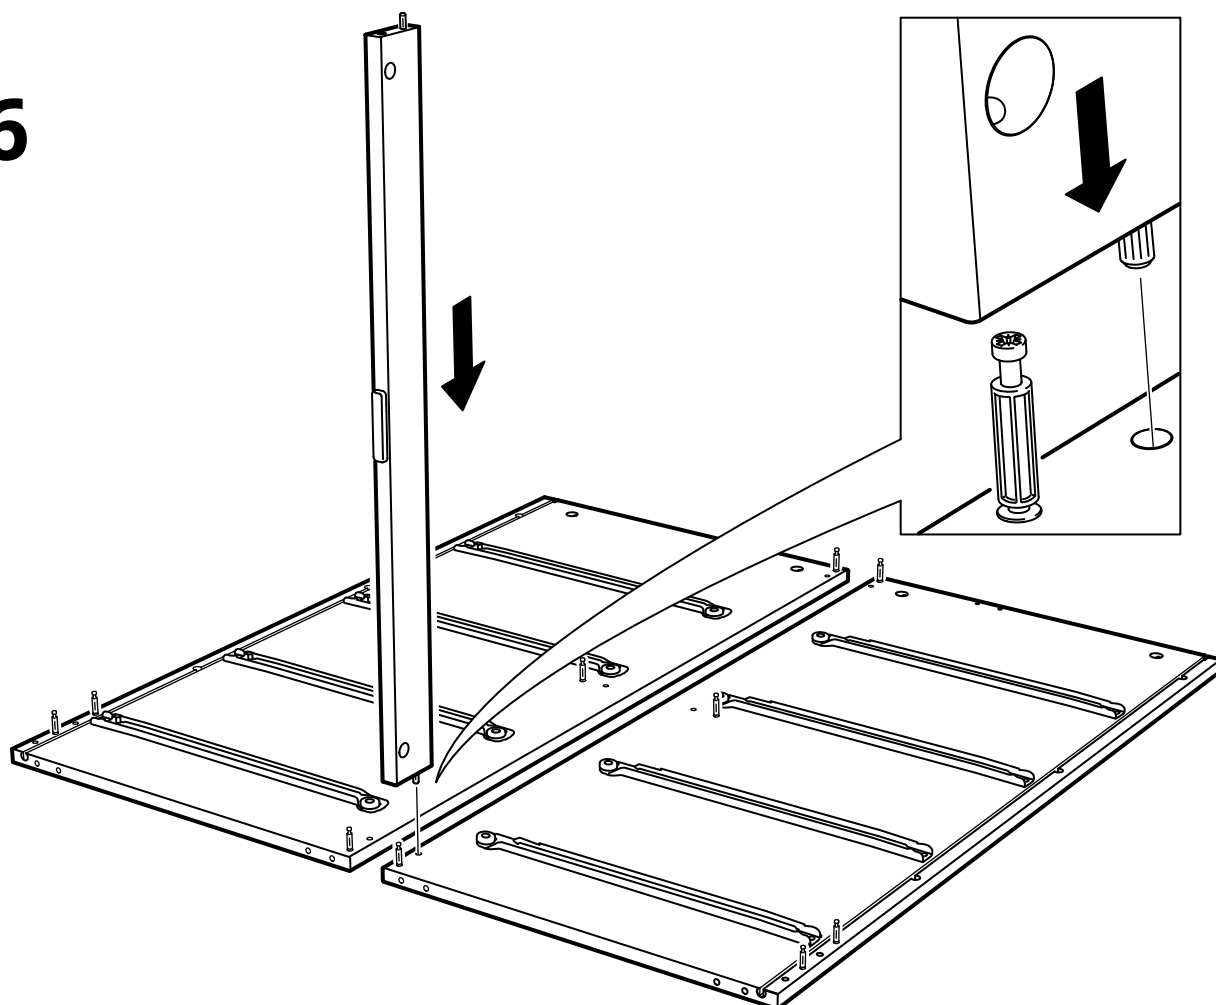 


7

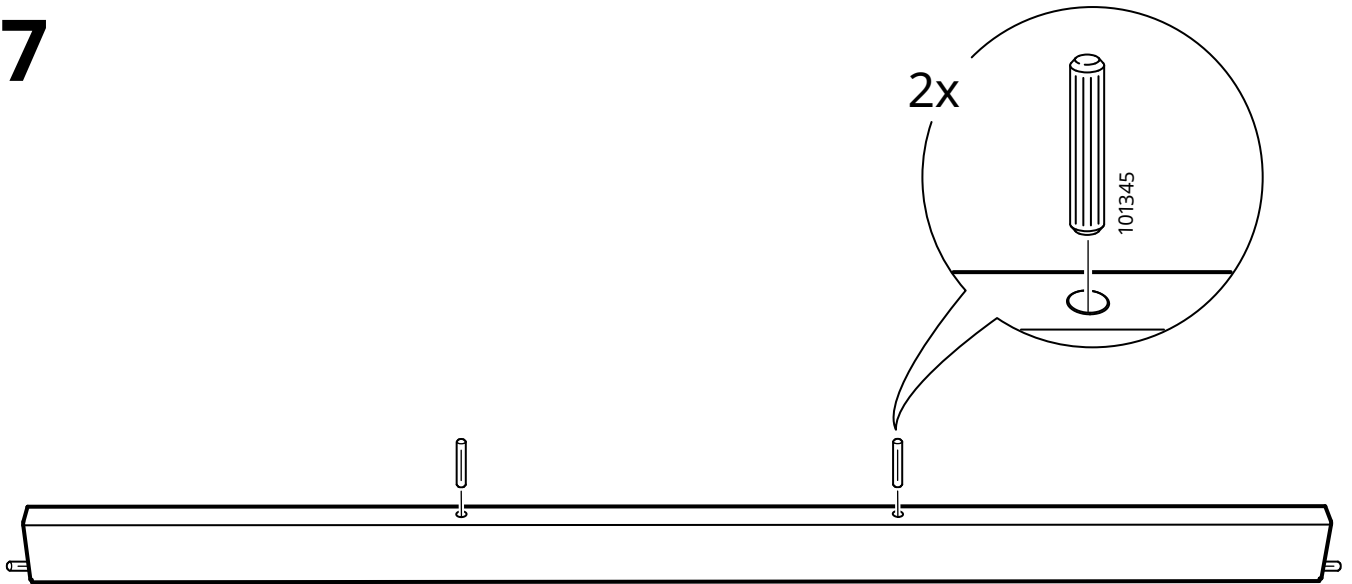 


8


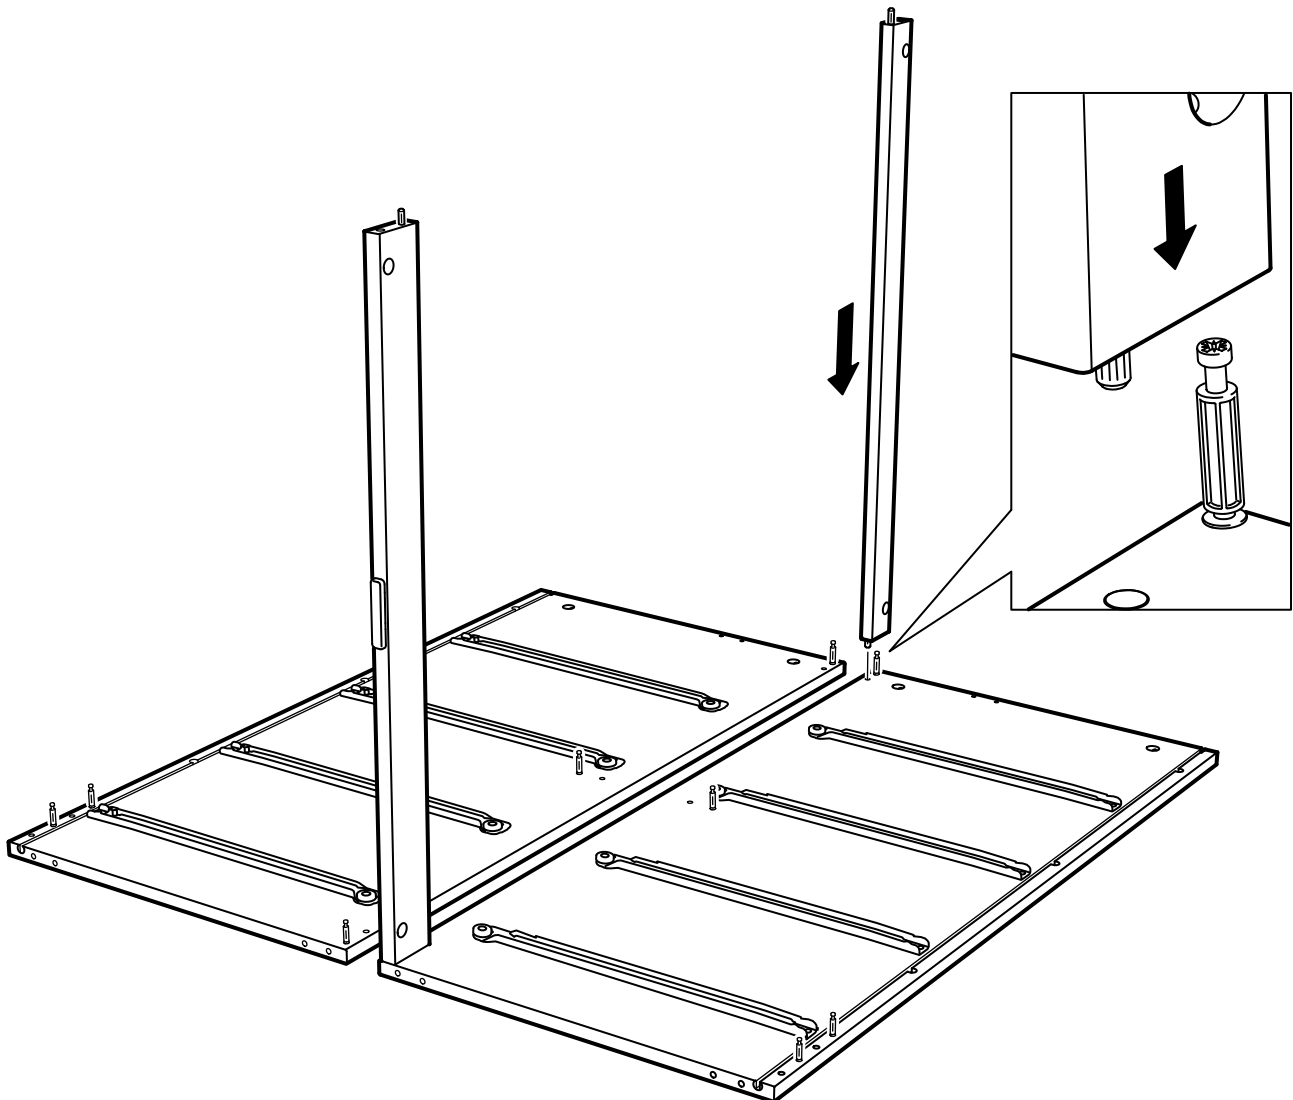 



9

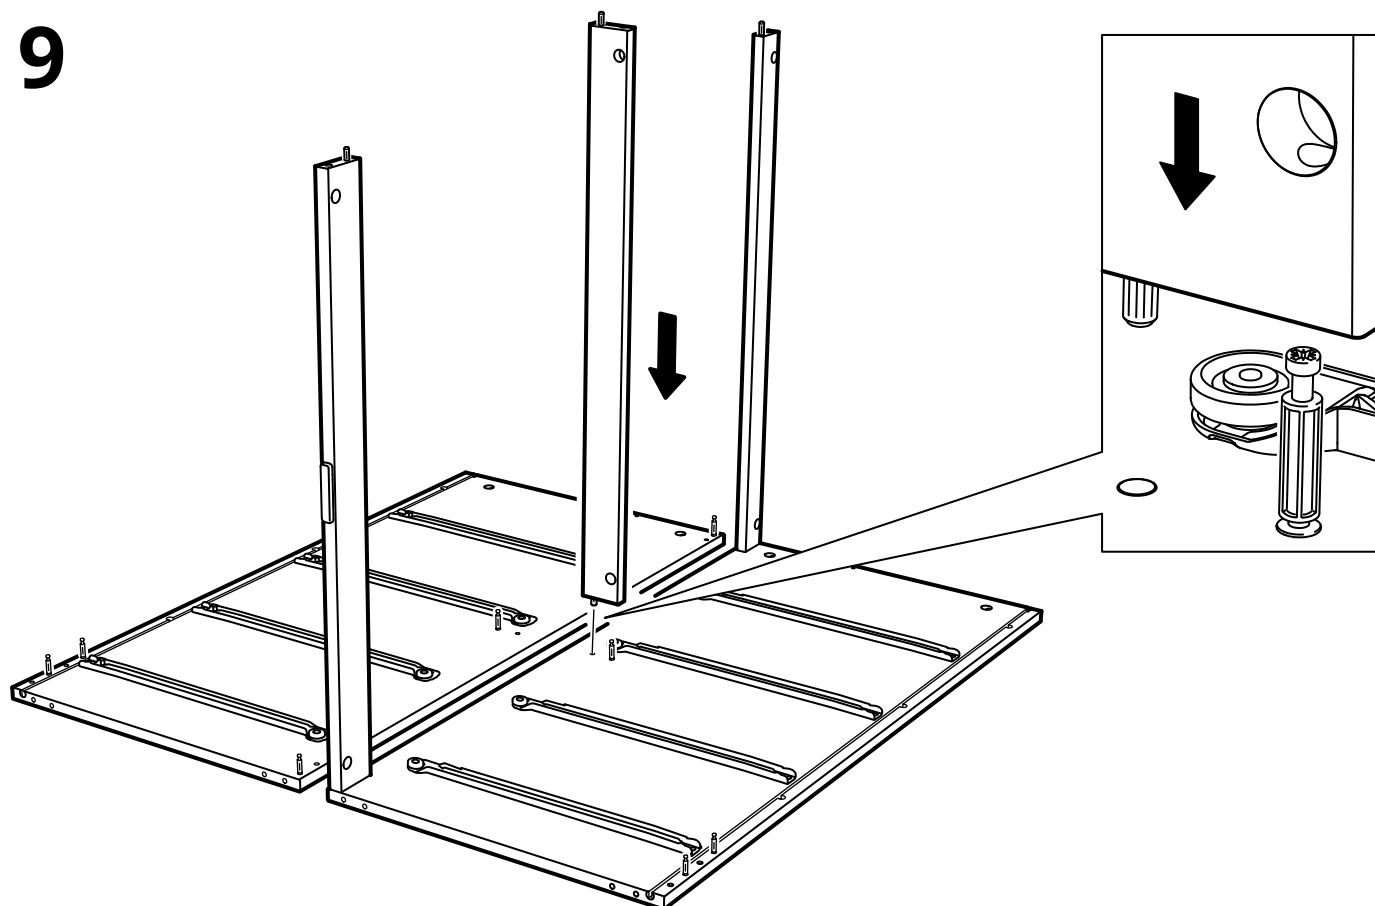 


10

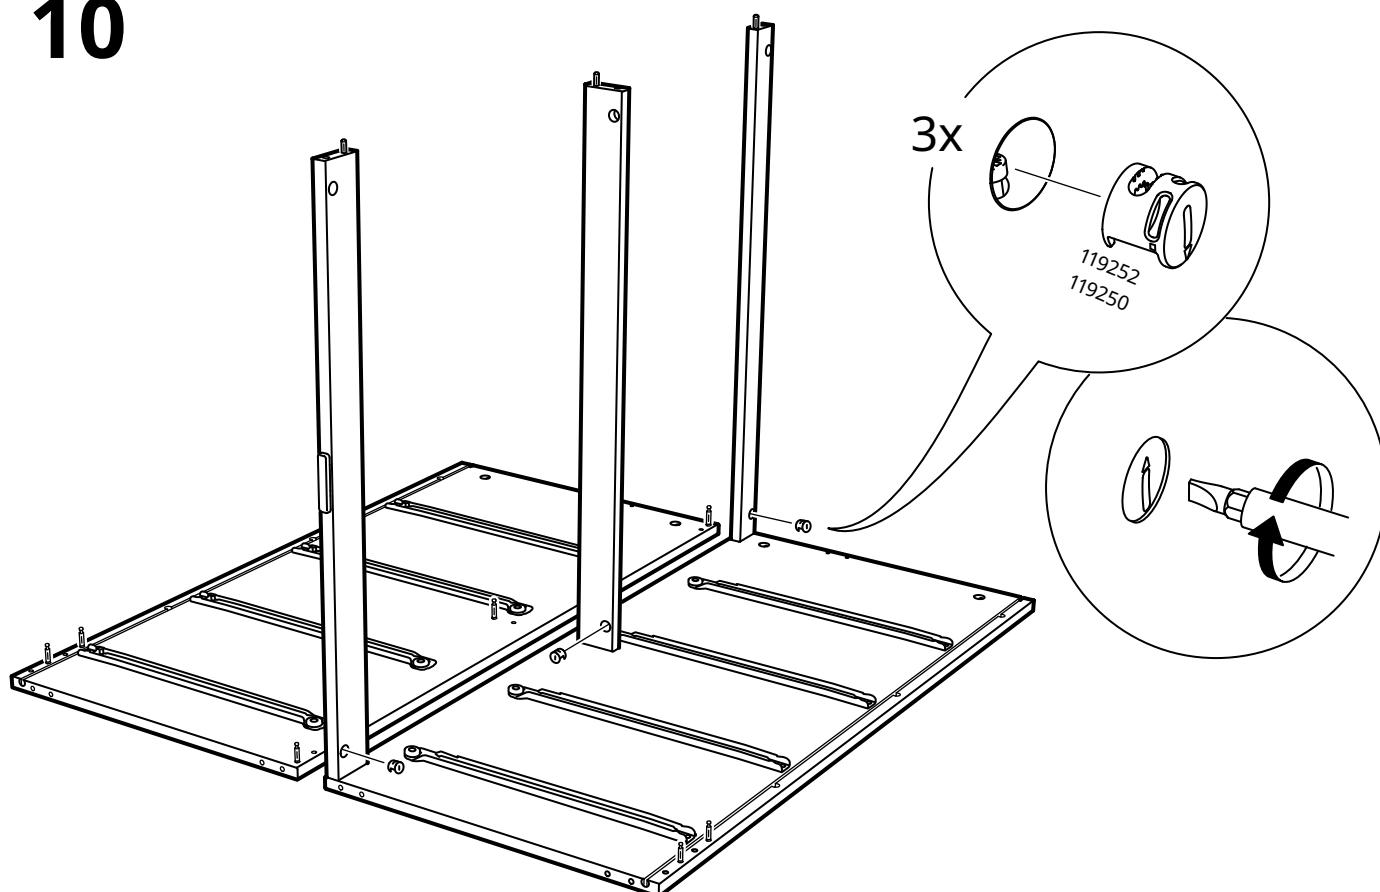 


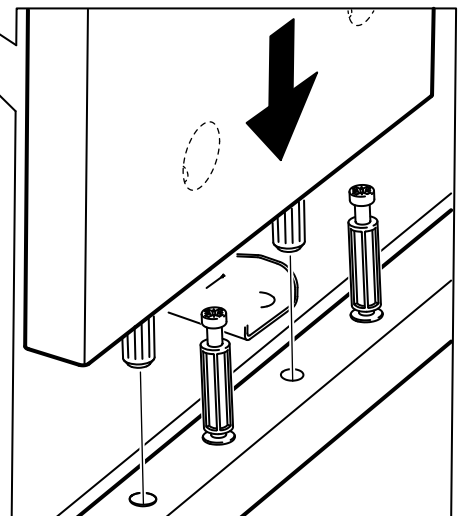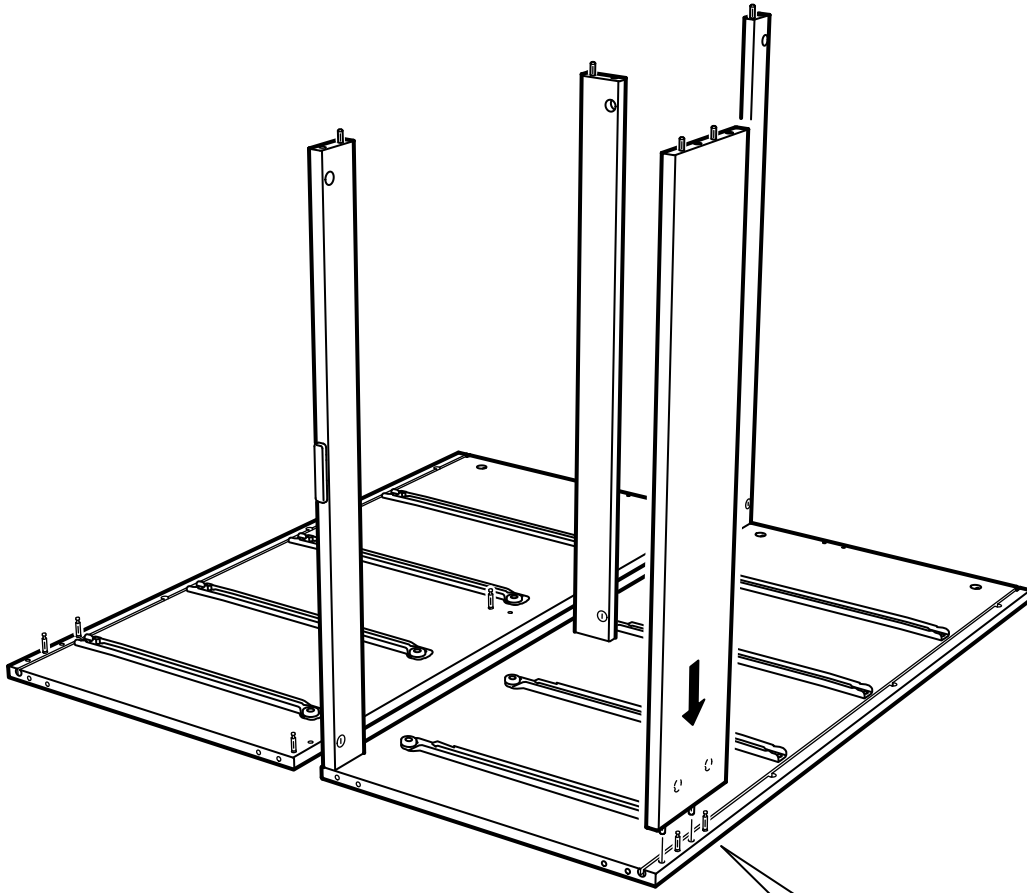  

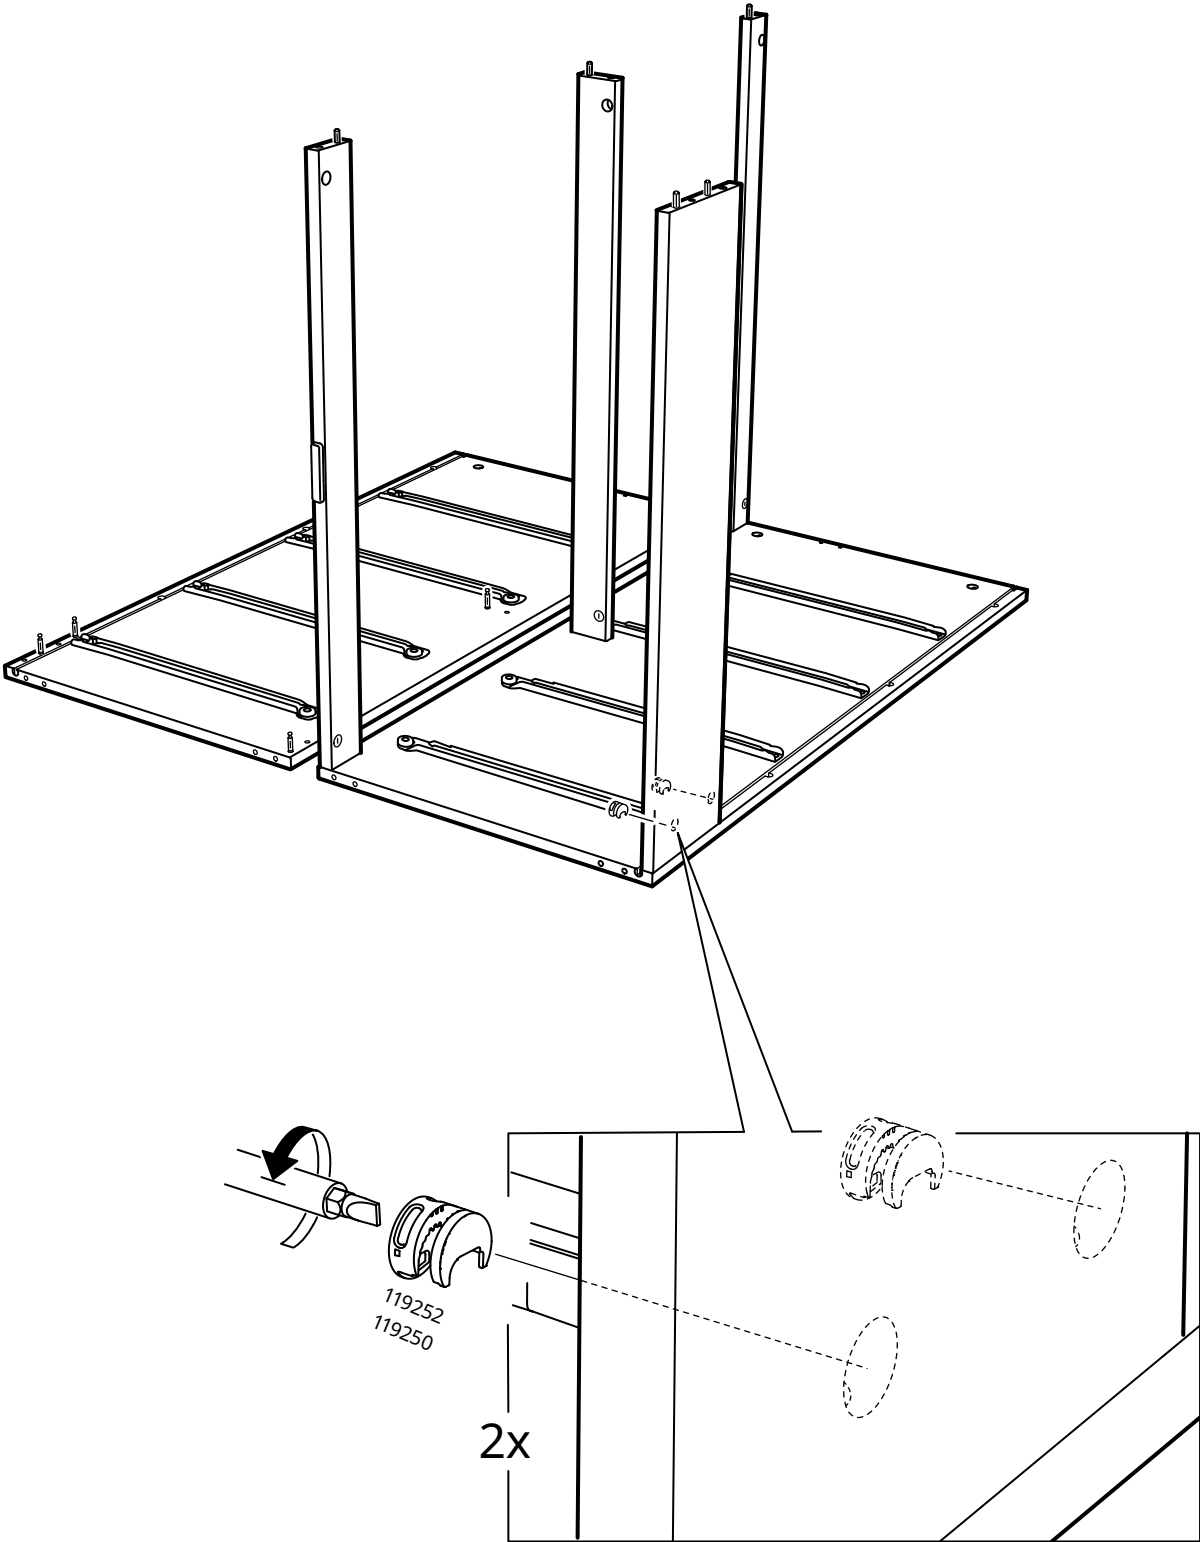 


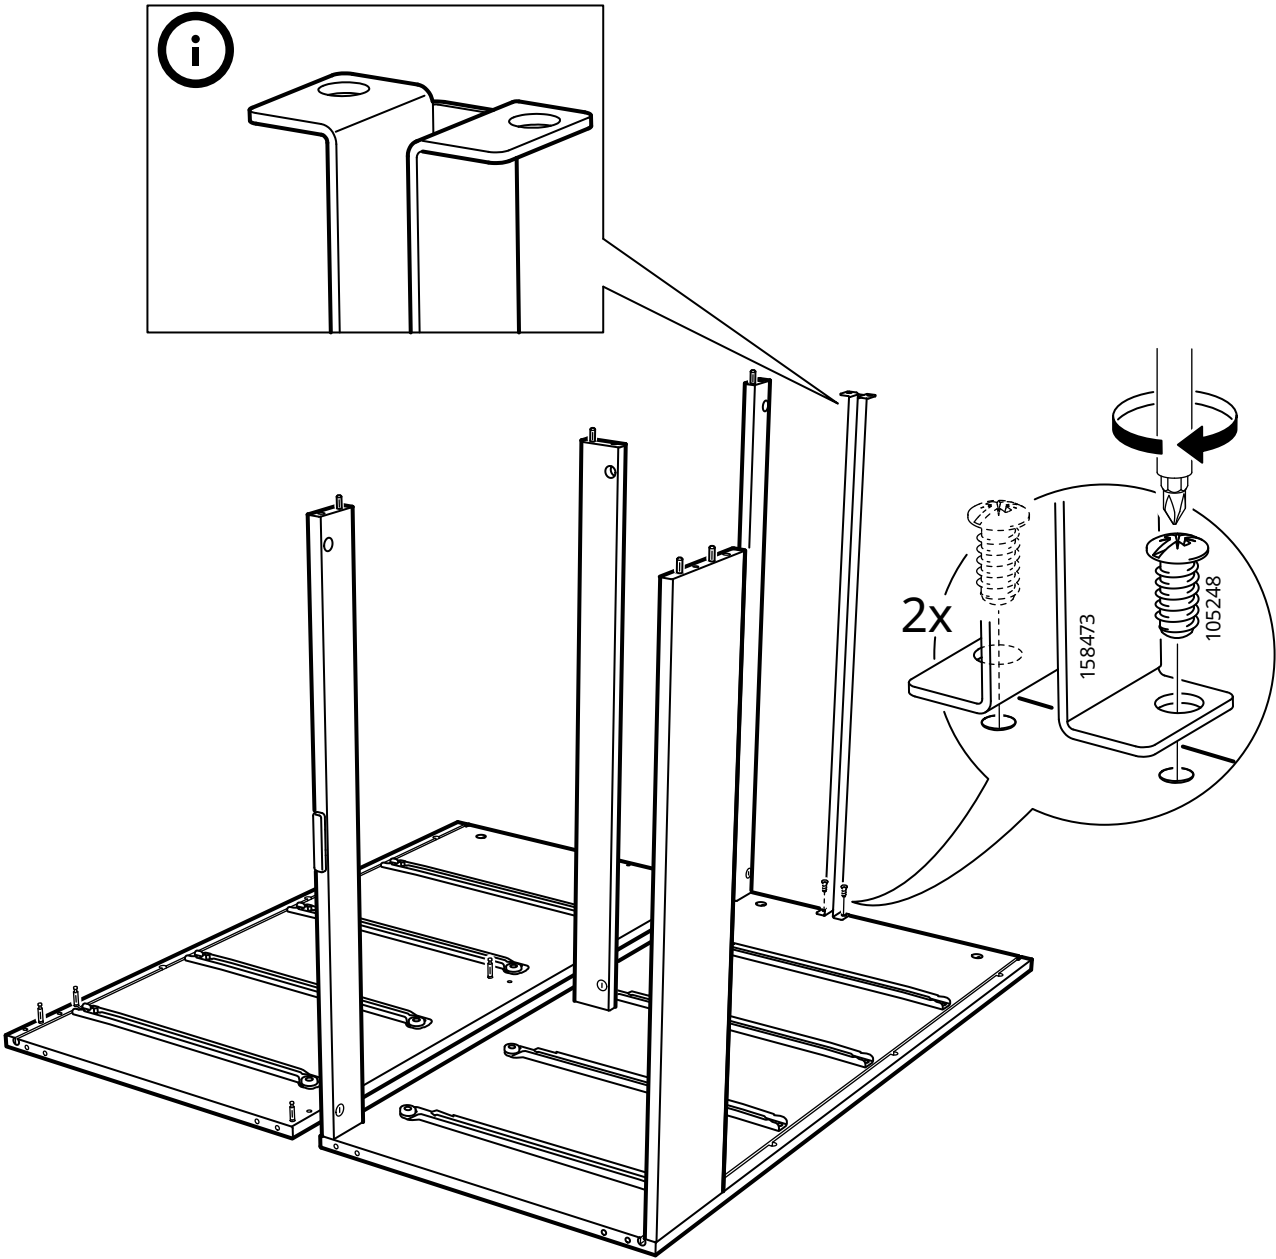 



14

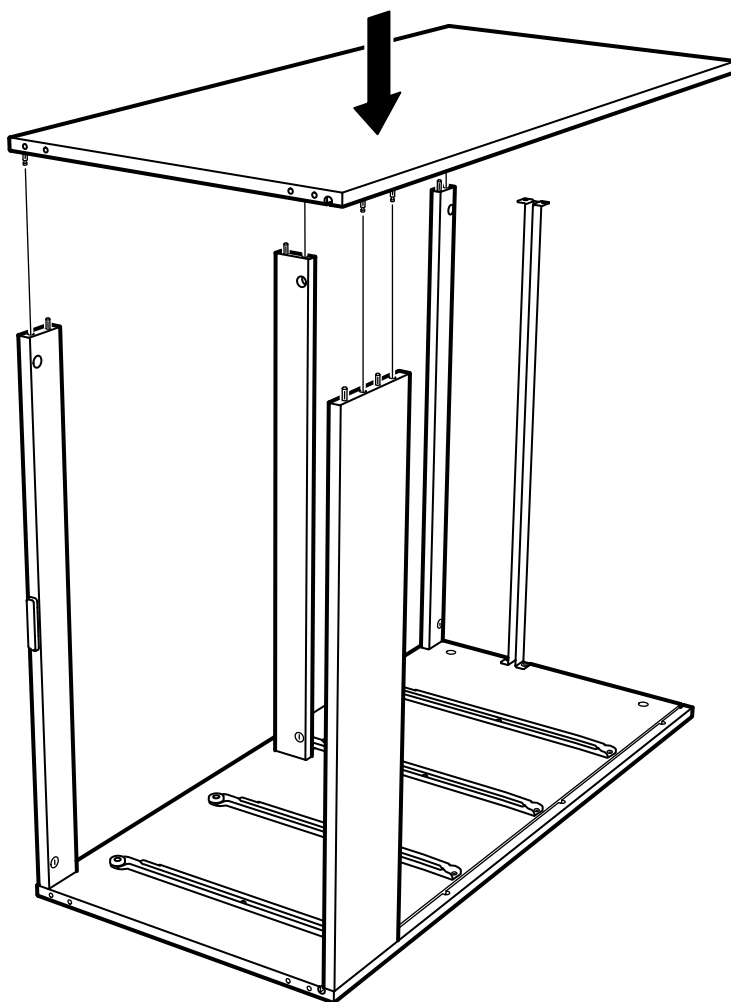 



15

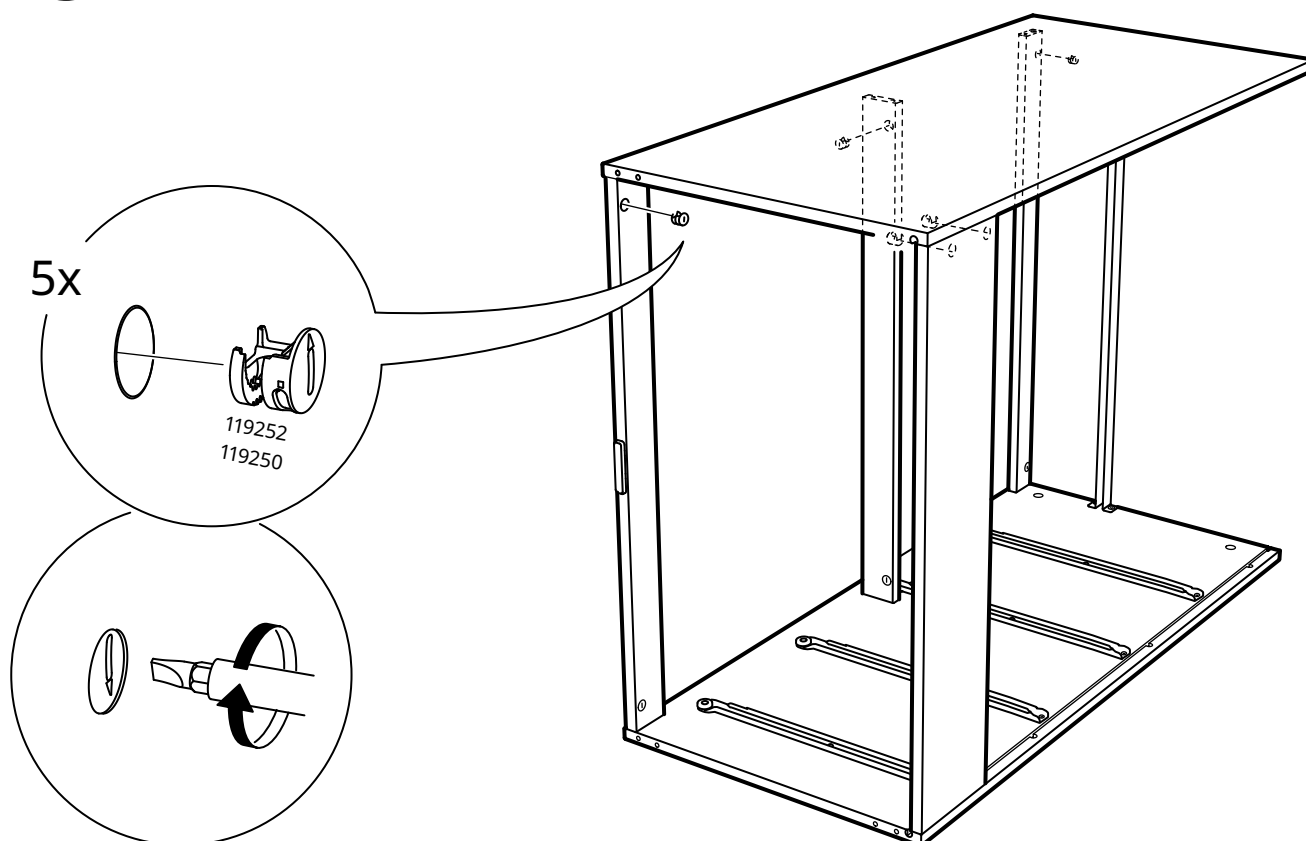 


16

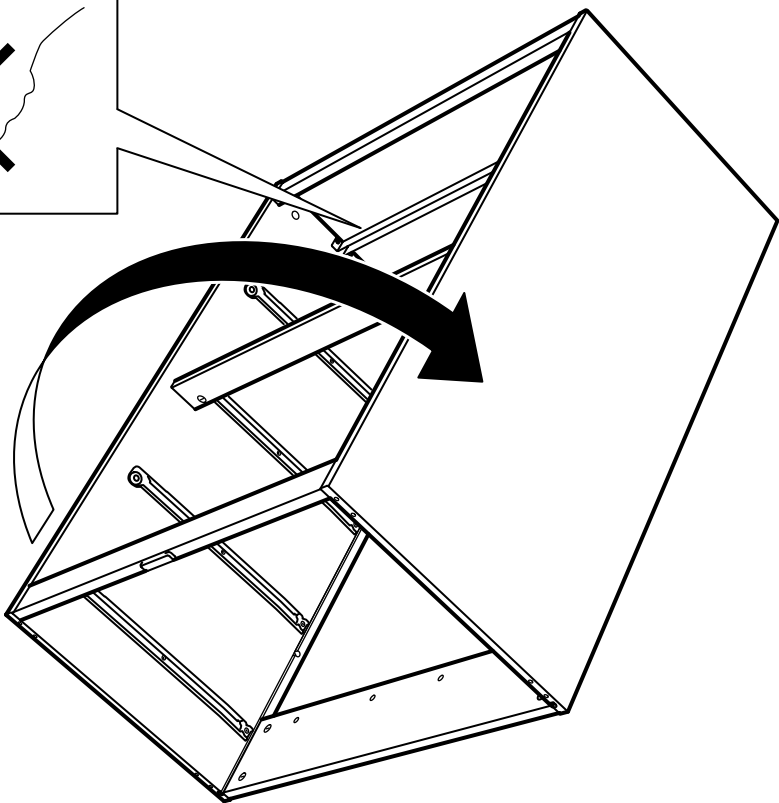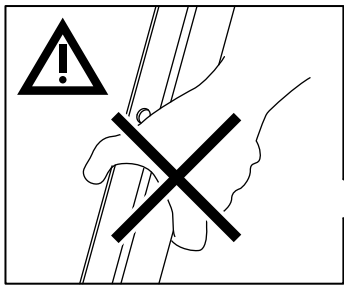  


17

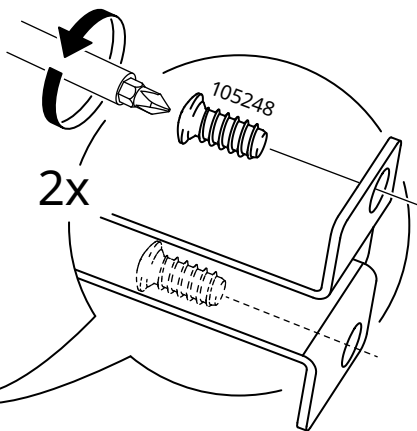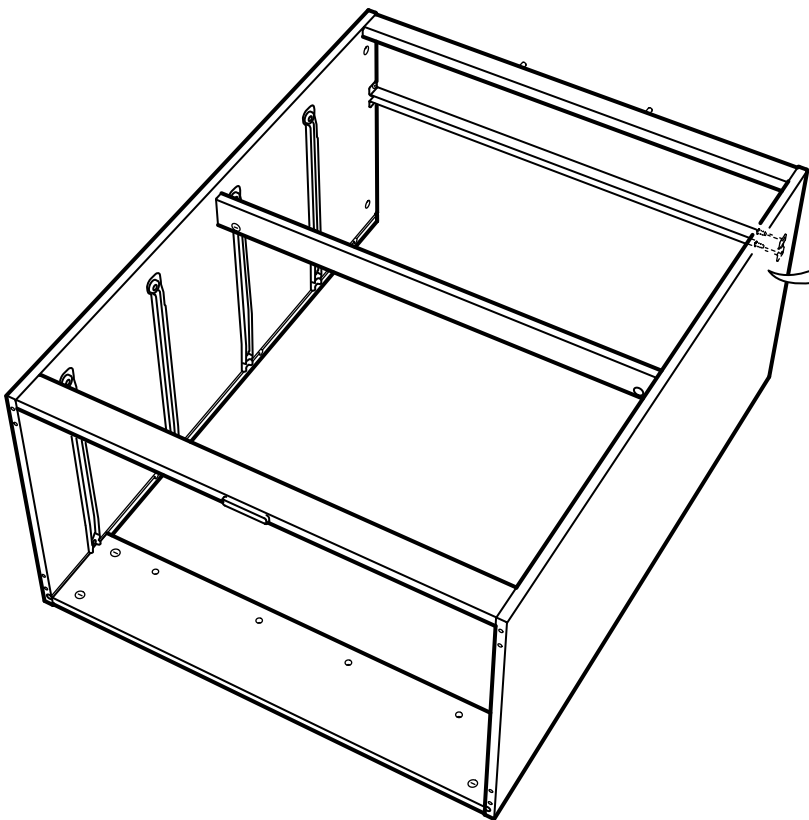  


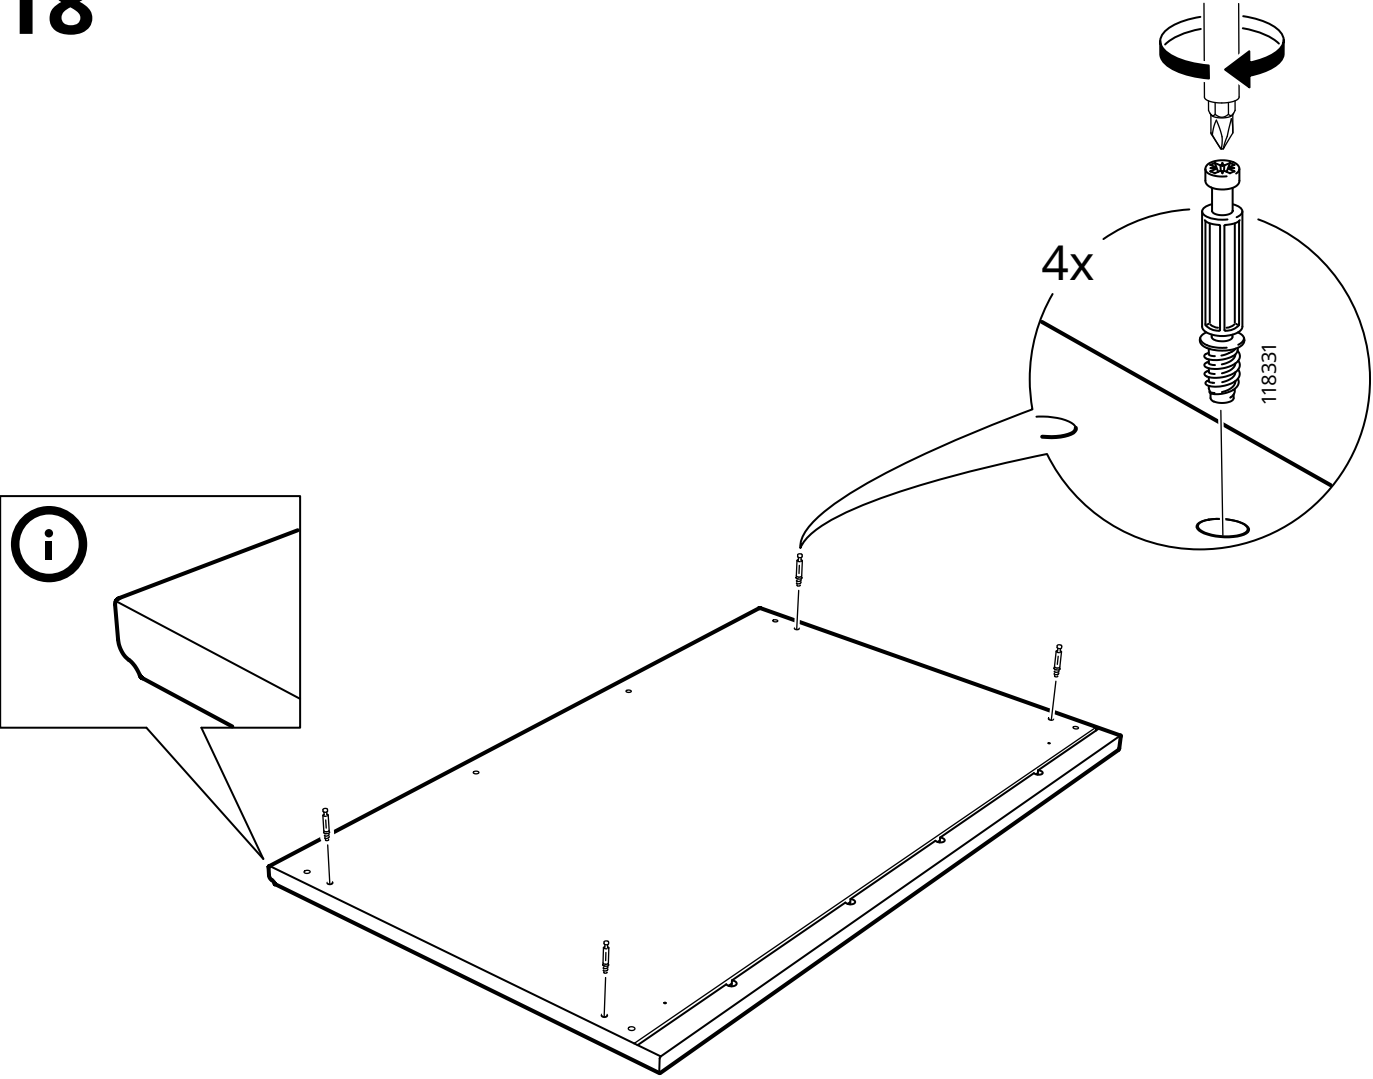 


19

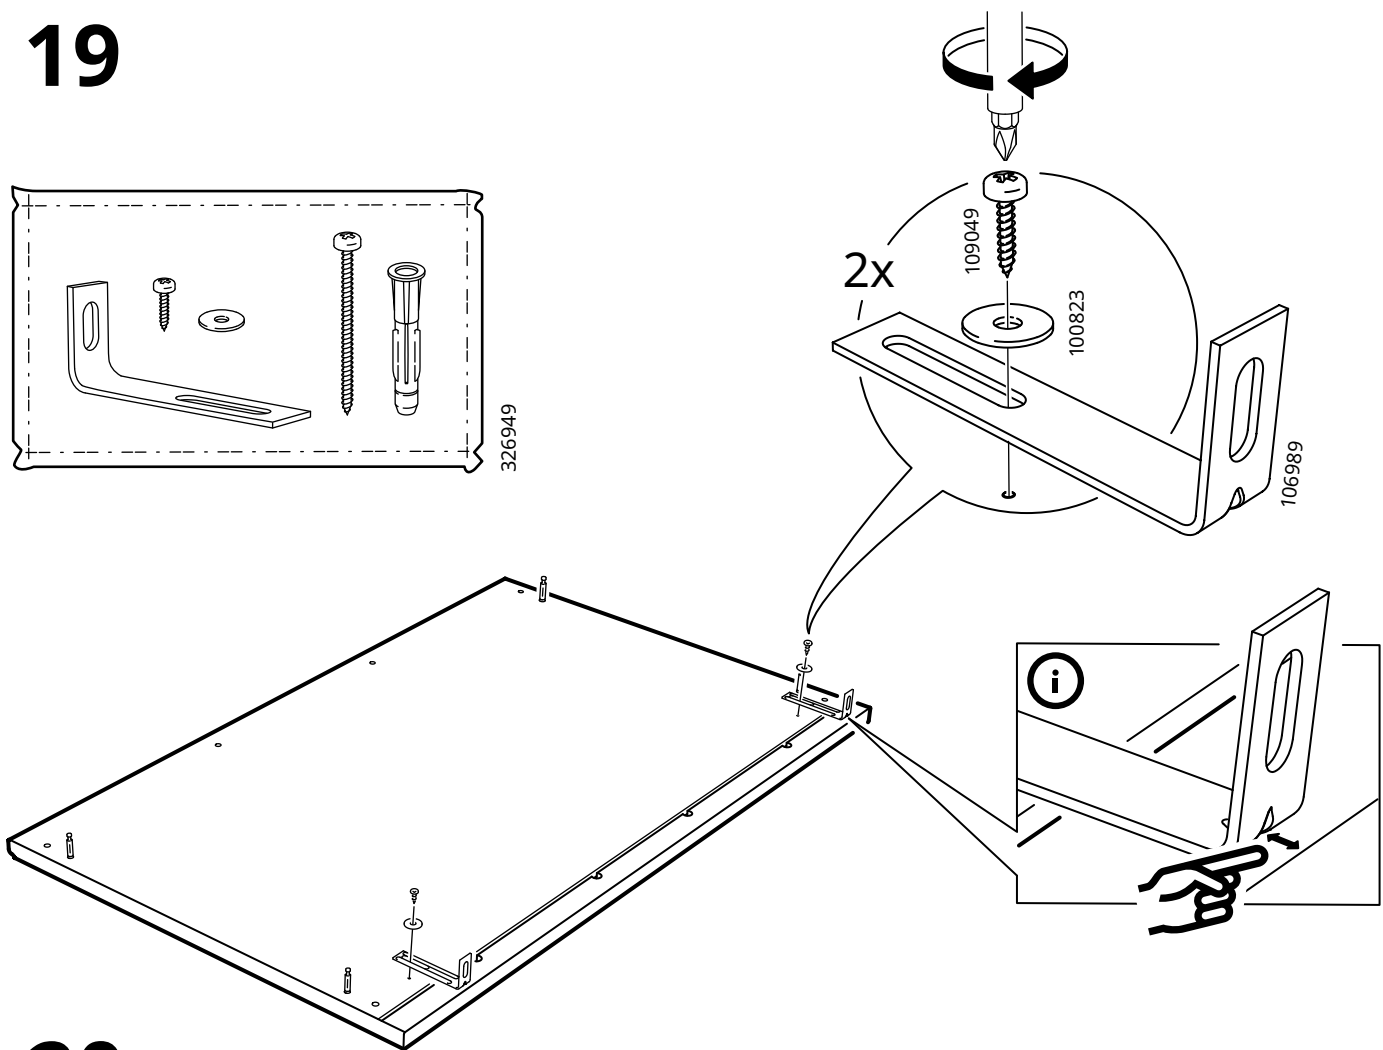 


20

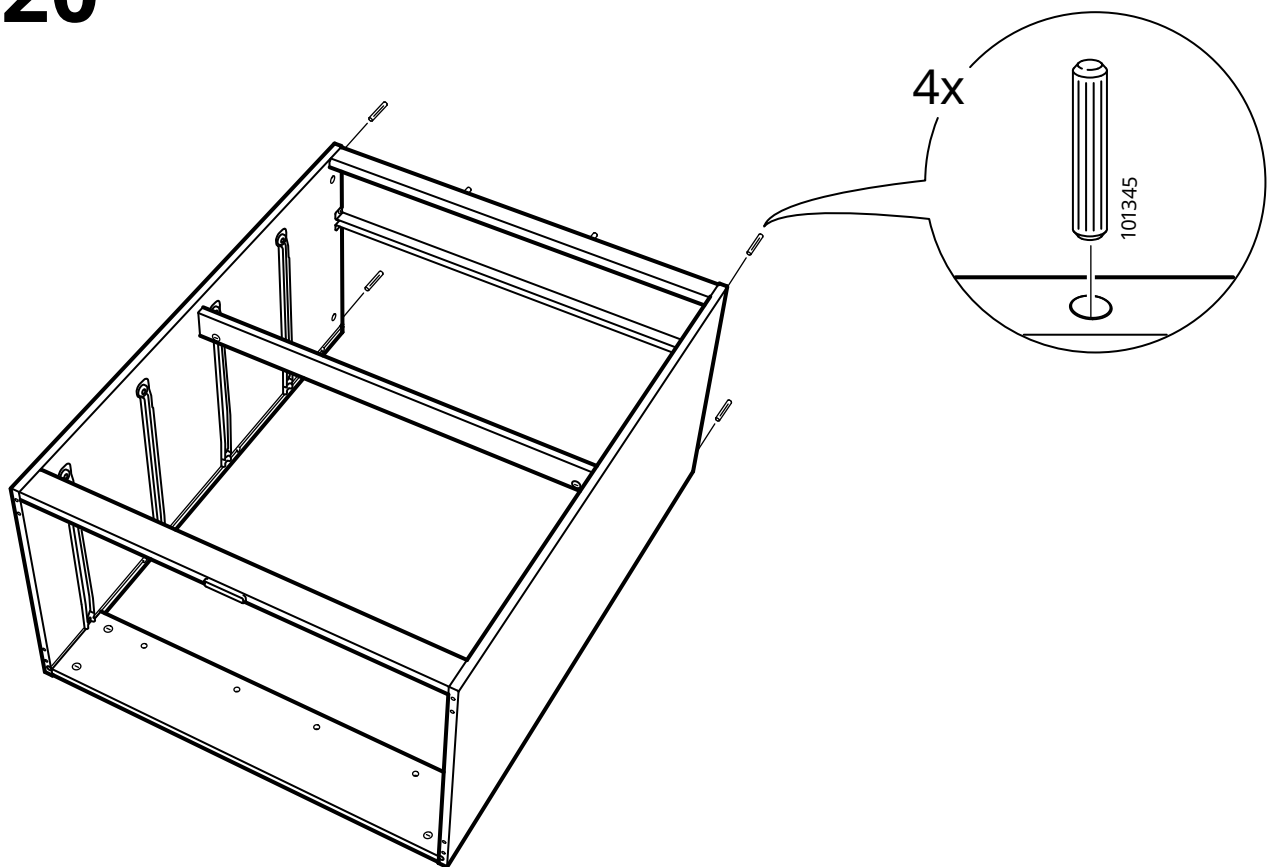 




21

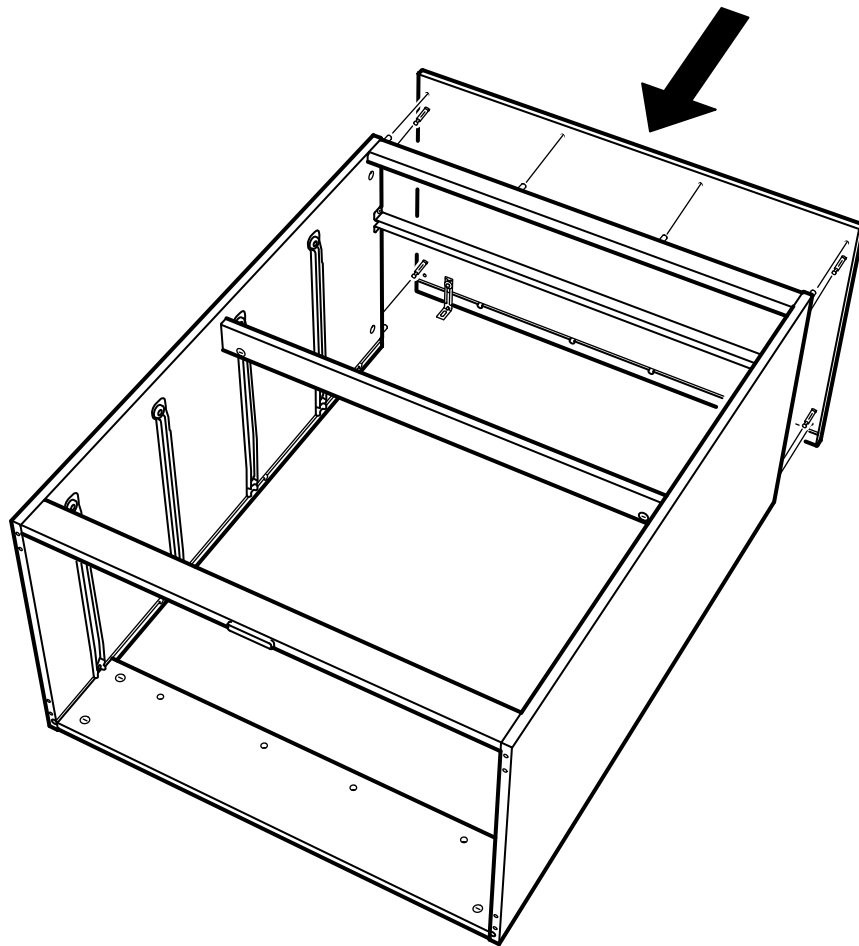 

22



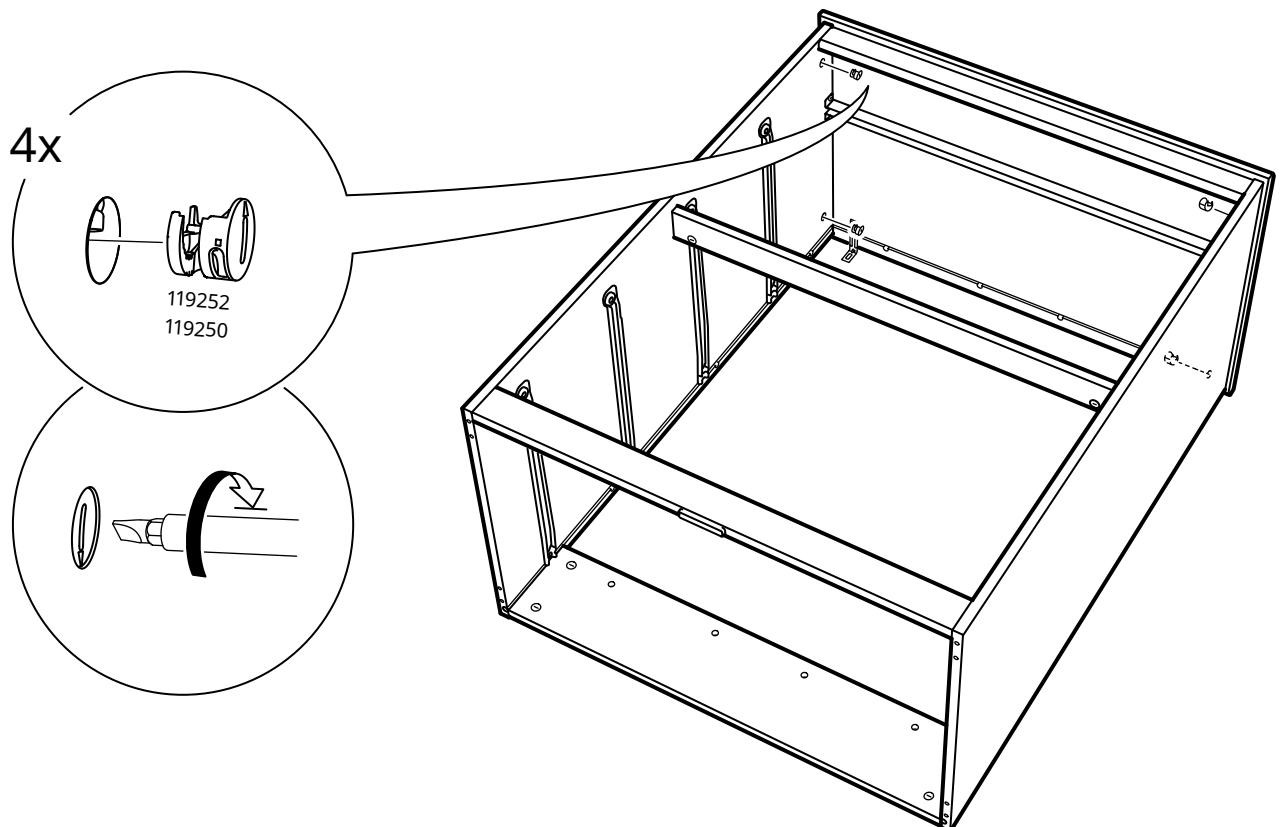 


23

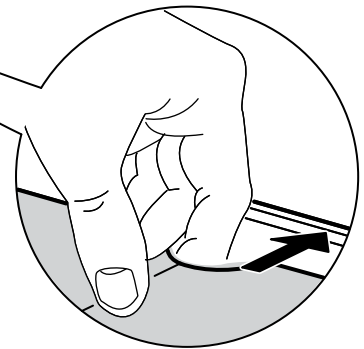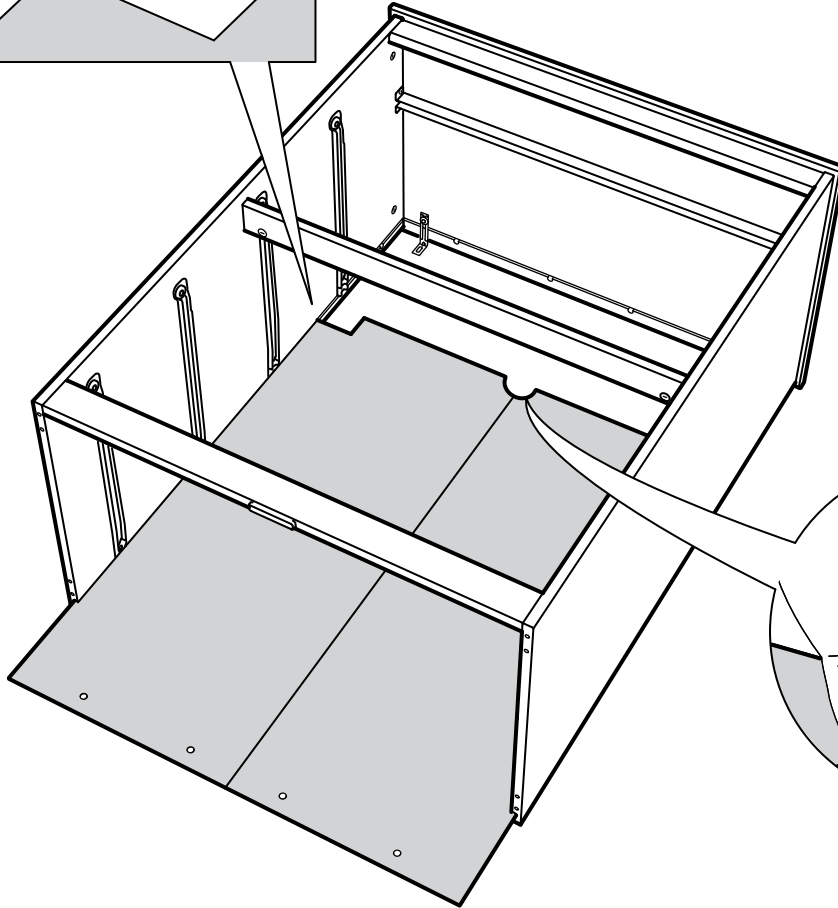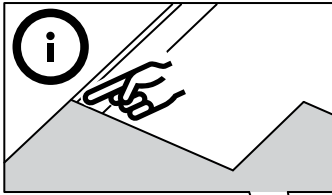   


24

   
4x

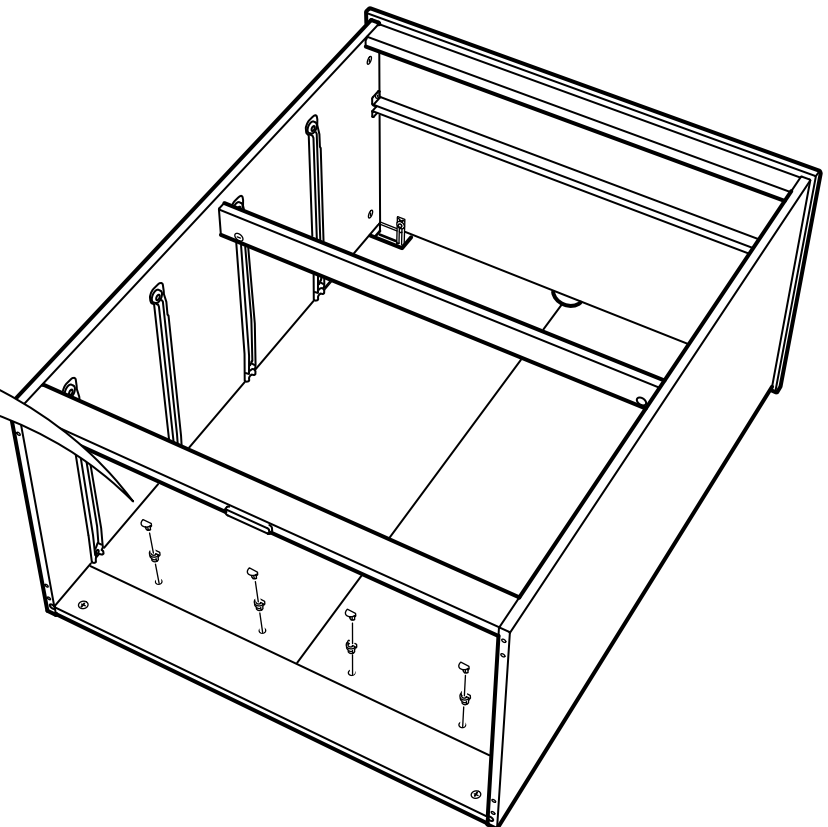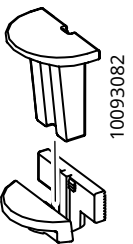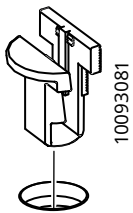



25

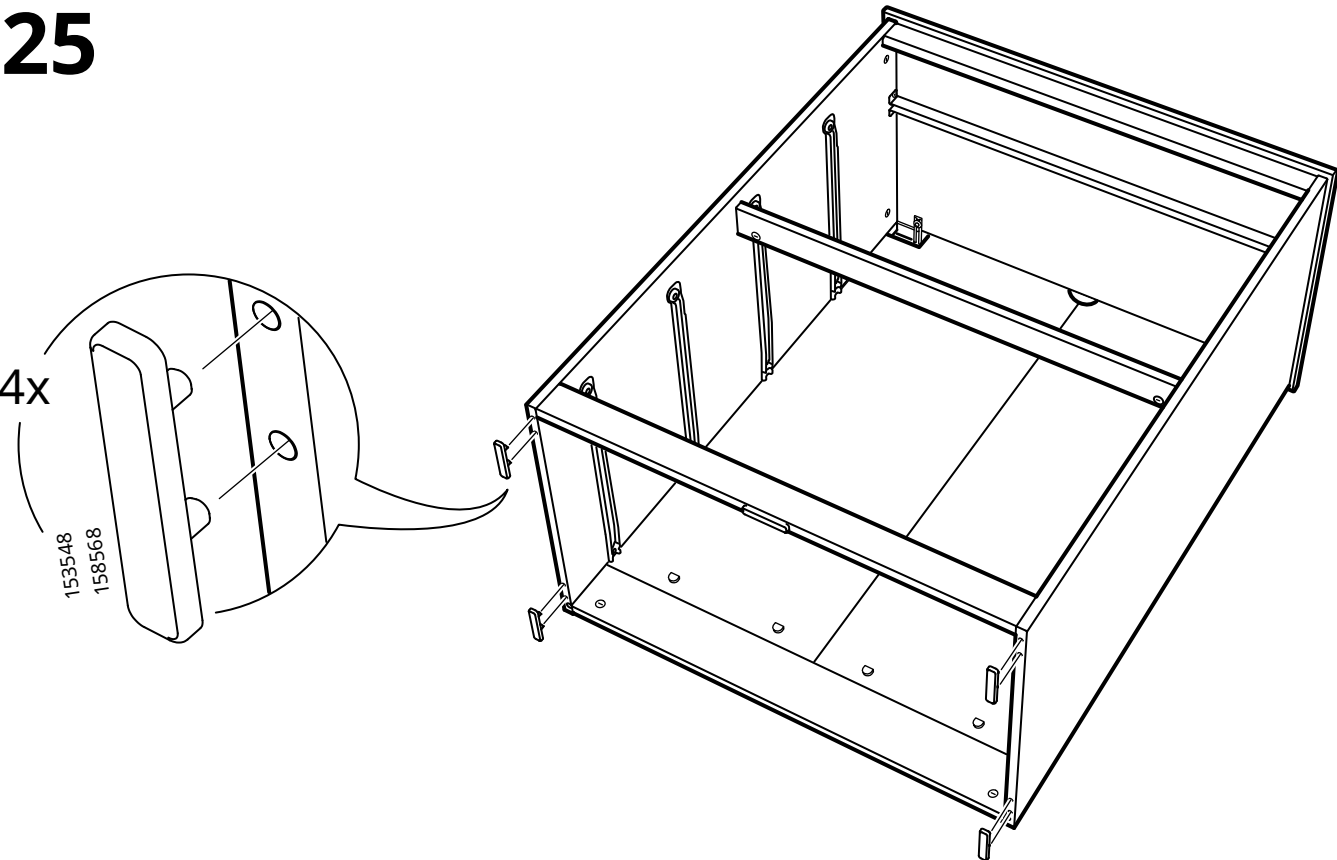 



26

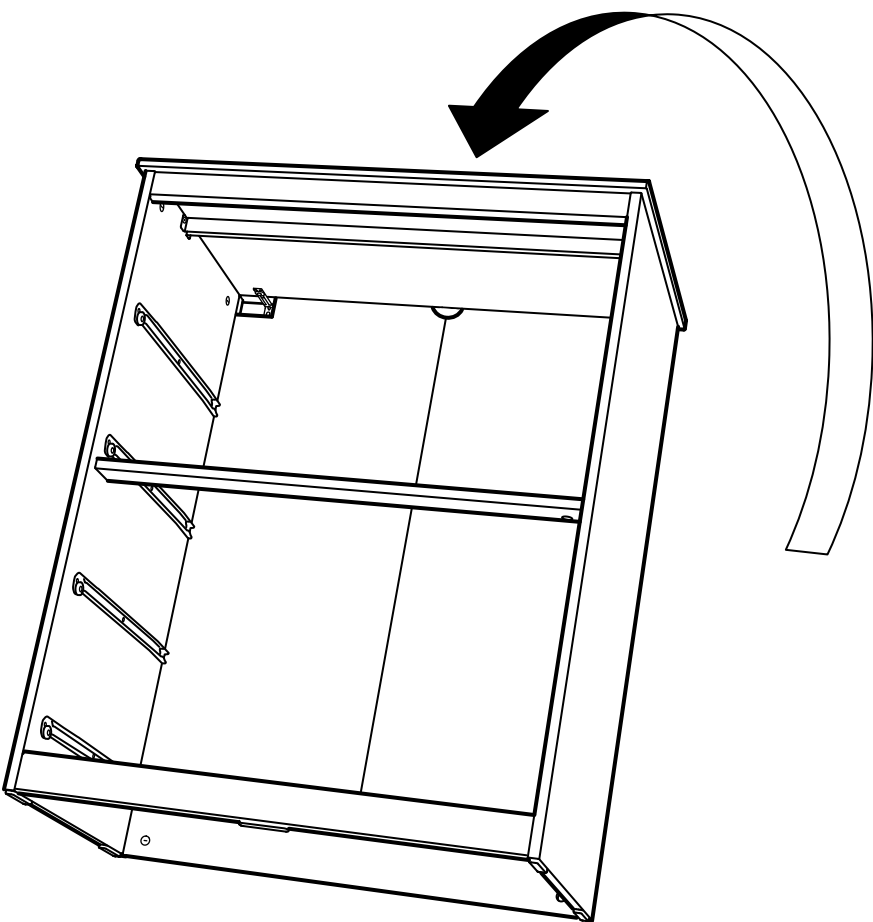 


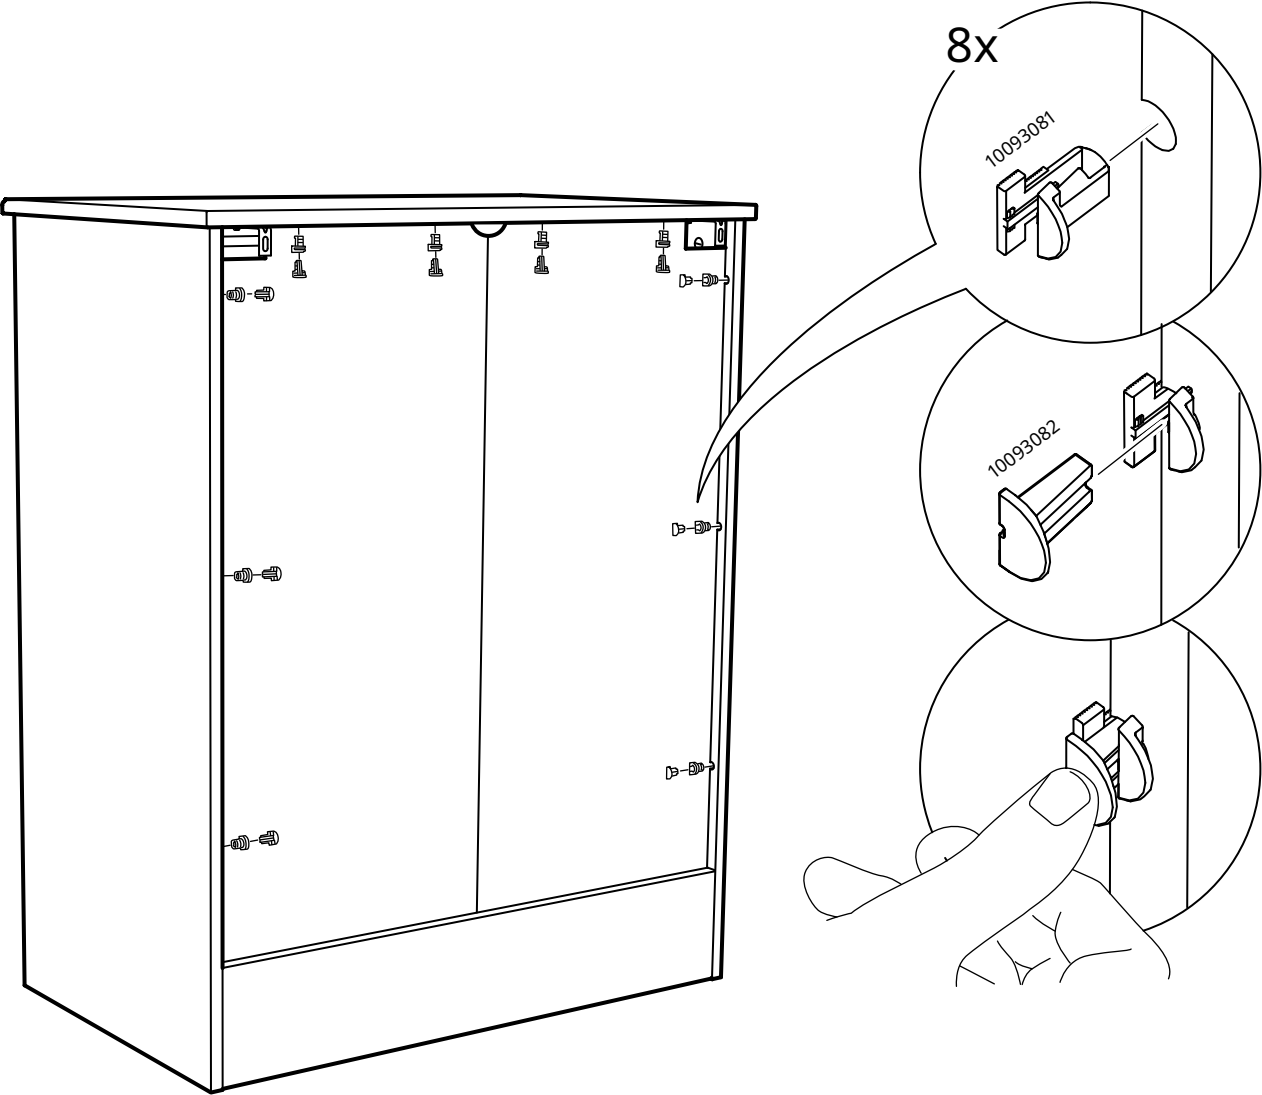 

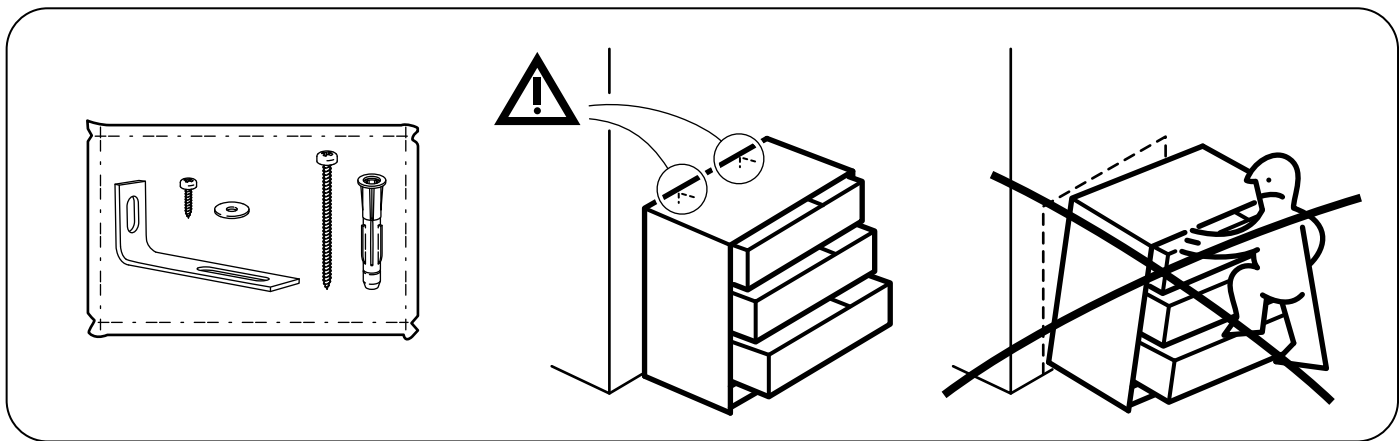 


28

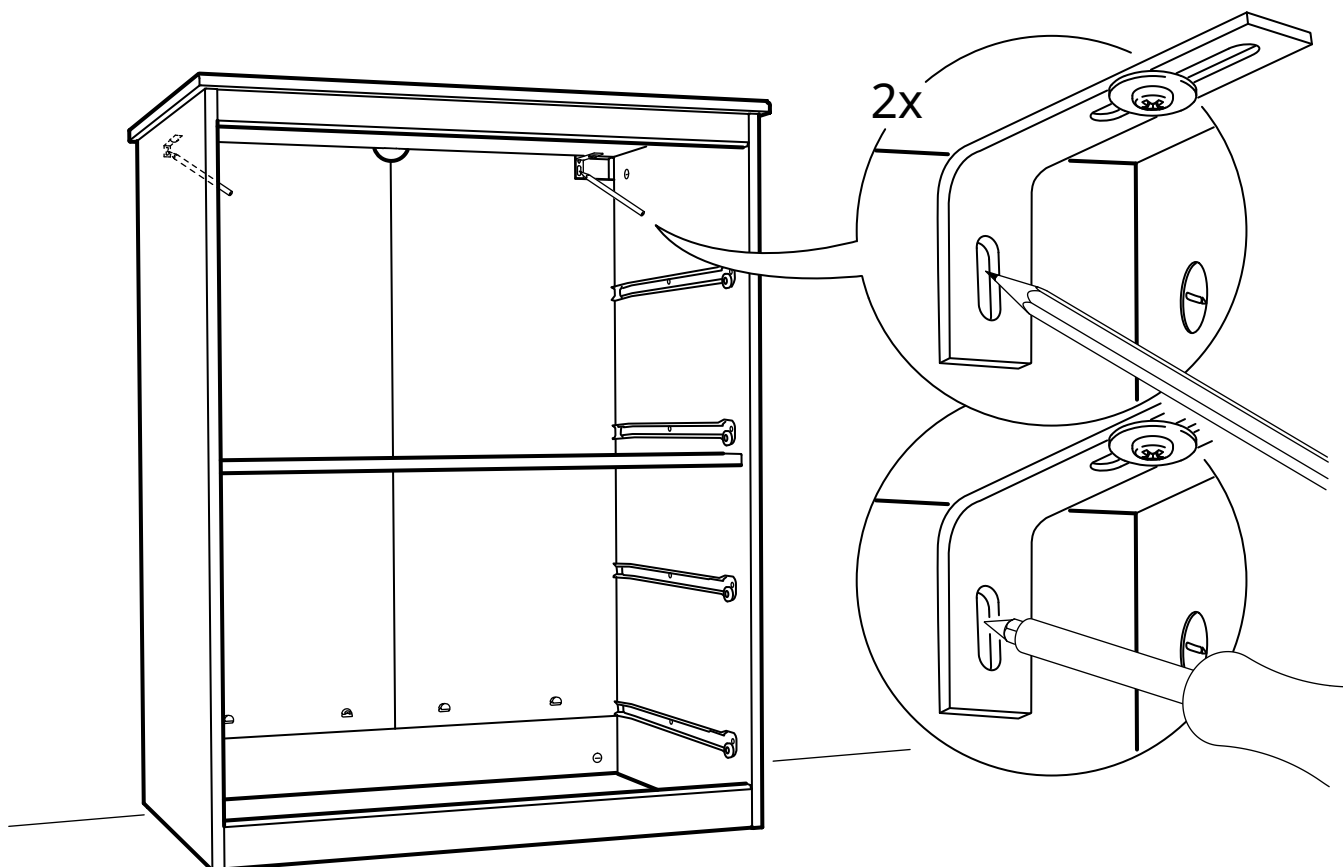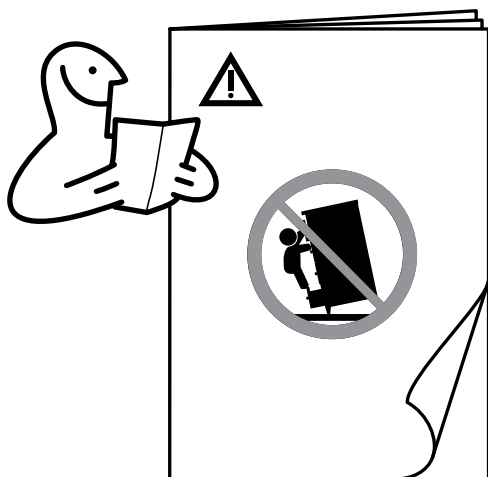  



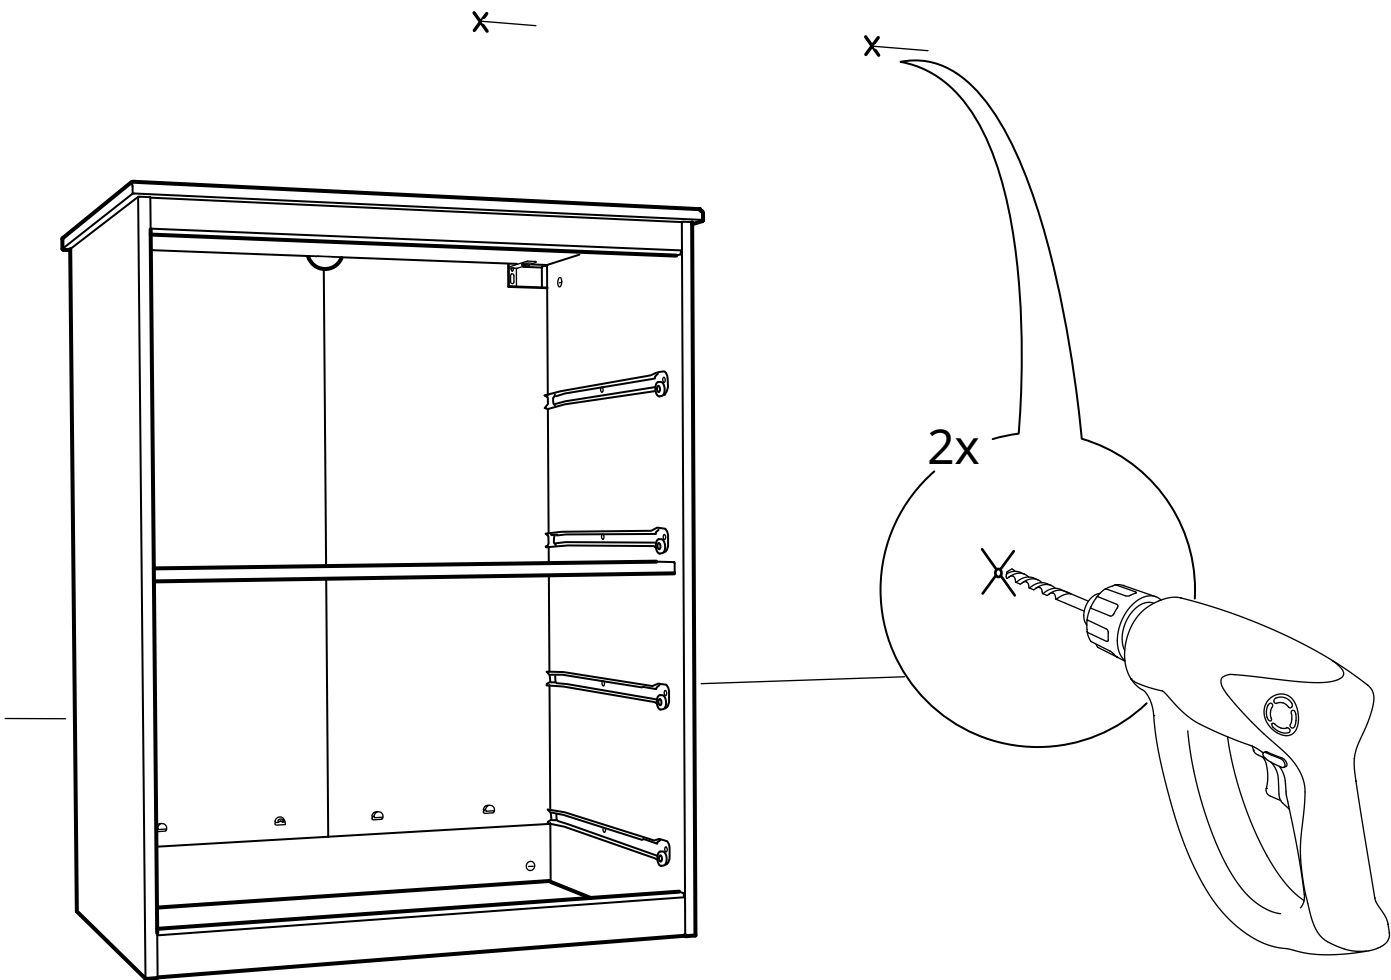 


30

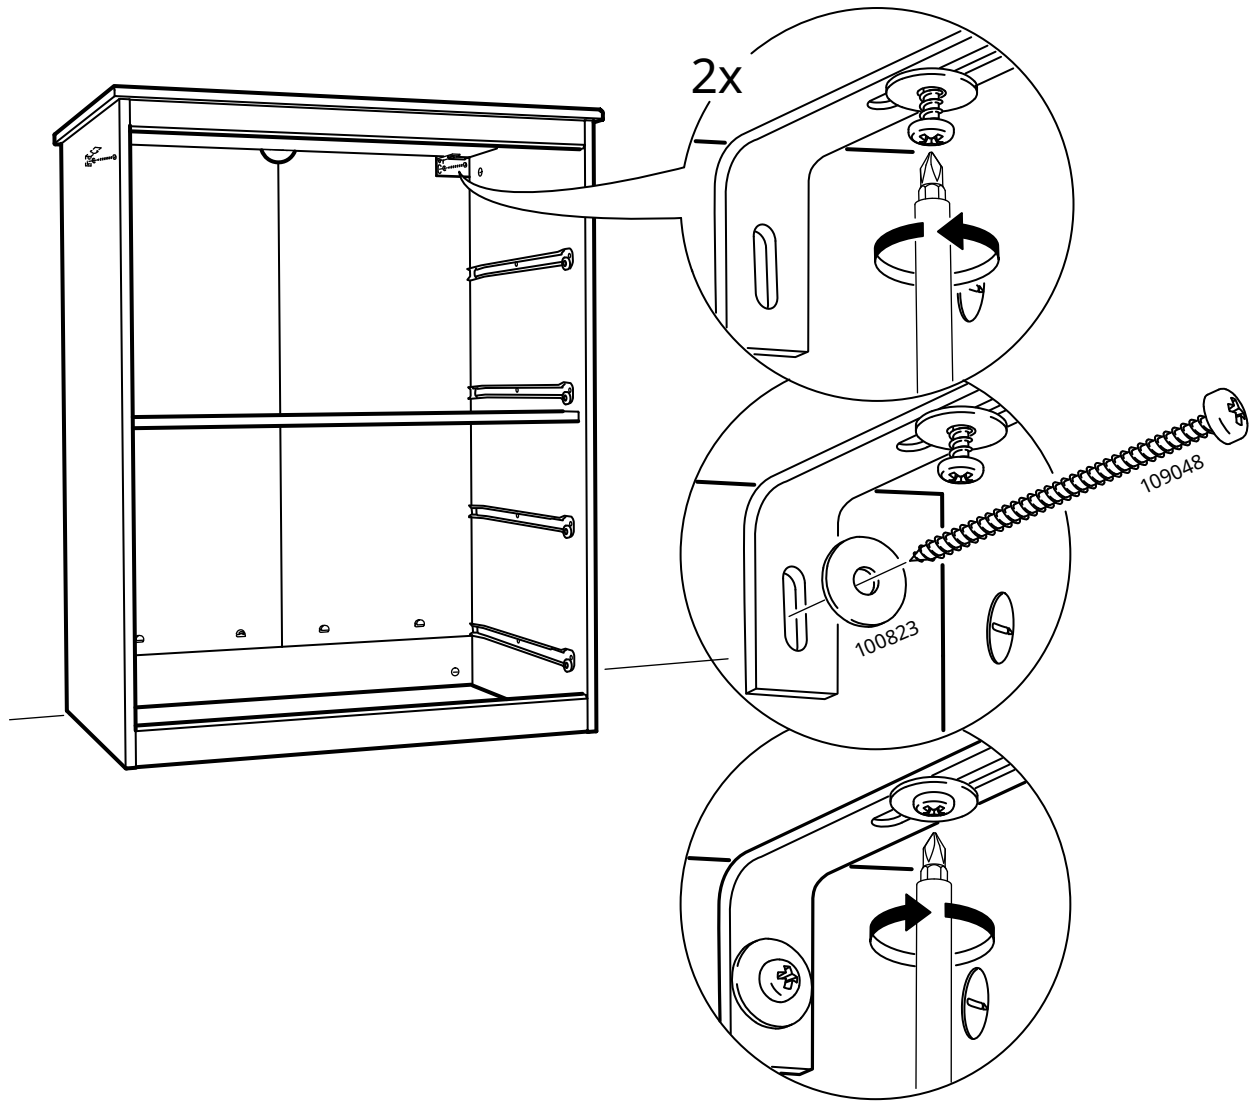 

31

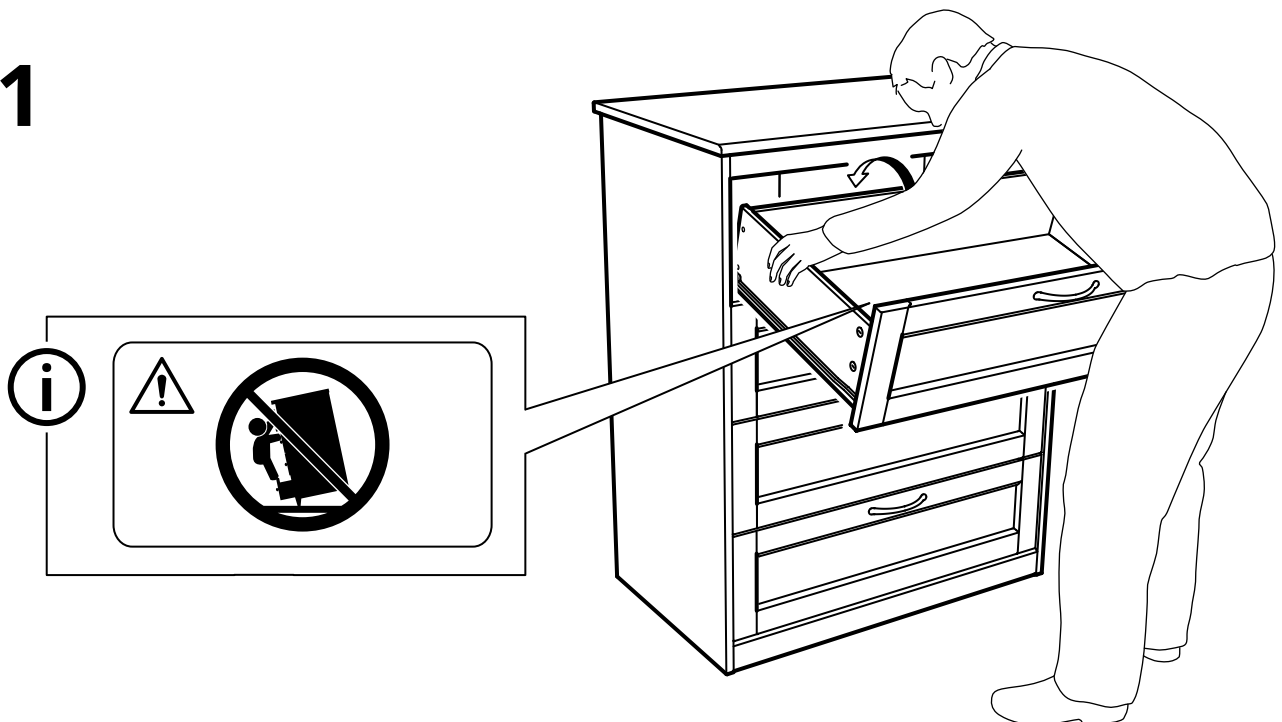 

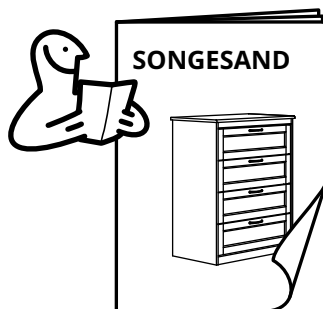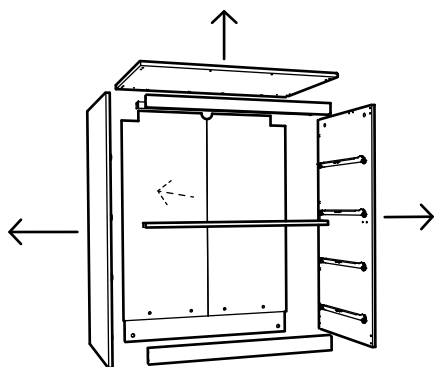  

27 → 1

