

USING THE SOUND BAR

- 1) Short press Pause/Play, Long press Power ON/OFF
- 2 Short press to reduce the volume, Long press to return to the previous song.
- 3 Short press to increase the volume. Long press the next song long.
- 4 "M" Click to switch light mode and FM Radio mode.
- (5) TF Card Play auotmatically starts when a Thumb Flash drive is inserted.
- (6) USB charging (Plug the charging cable into the DC5V USB charging port)

USING BLUETOOTH WIRELESS

- 1. Turn on the power, the speaker will enter the Bluetooth mode automatically.
- 2. Open the bluetooth of your device, then search and find the bluetooth name "BY-BS-005", Pairing code is "0000" if needed.
- 3. After pairing successfully, the device will connect the speaker automatically next time both devices are powered on and within 33 feet of each other.

USING FM RADIO MODE

Short press the M button (4) until you hear radio static. Press the Play/Pause button (1) to begin frequency scanning, this will automatically scan the available frequencies and set up FM channel presets. When the radio play stops on one channel scanning is complete. Use the plus (3) and minus (2)

buttons to search through frequencies to find your desired channel. If the sound is not coming in clearly, attach the included charge cable, which can be used like an FM antenna.

SAFFTY INSTRUCTIONS

- Never disassemble the Gaming Sound Bar in an attempt to make any repairs as this could result in electrical shock, burns or product failure.
- Use extra caution in high temperatures.
- Do not expose the device to direct sunlight, heat or flame.
- Product is not covered under warranty when the product has metal rust. surface damage or any other natural oxidation.
- Damage, shock, and/or injury can occur if these warnings are not heeded.
- Make sure the product has plenty of ventilation.
- Only use dry cloth to keep product clean from dust.
- Do not use chemicals on this product.
- Never try to repair this product yourself, take it to a certified technician. Trying to remove panels or repairing the unit yourself could lead to electric shock. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
- Do not insert foreign objects into the product.
- Avoid dropping the product, as harsh impacts could damage the product.

COMMON PROBLEMS AND SOLUTIONS:

- 1. The speaker maybe turn off automatically for the low battery power if you use it for a long time. Please just charge it with the USB charging cord and turn on the speaker to use it.
- 2. The music will freeze if the speaker is beyond the effective bluetooth connection distance or there is an obstacle between the speaker and the Bluetooth device.
- Unsuccessful pairina:
 - a. Check the speaker is turn on.
 - b. Make sure the speaker is within the bluetooth connection distance,
 - c. There are too many Bluetooth devices surrounding, which makes the bluetooth searching difficult. Turn off other Bluetooth devices.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation, Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- -Regrient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or

WARRANTY- 12 MONTH

Please visit our website Bytechintl.com/warranty

©2025 BYTECH NY INC.

BYTECH™ is a registered trademark of Bytech NY INC.

*A|| Trademarks and copyrights are the property of the respective companies

*Nintendo Switch™ and Nintendo 3DS™ are reaistered trademarks of Nintendo of America Inc.

*XBox One™ is a trademark of Microsoft Corporation.

 
*PS4™ and PSP™ are registered trademarks of Sony Interactive Entertainment Inc.

WWW.BYTECHINTL.COM

Bytech NY Inc. 2585 West 13street Brooklyn NY 11223 (718) 449-3700







BLACK-ONLY, ONE SIDED ACCORDIAN STYLE FOLD

