
尺寸: 105x148.5mm 材质: 100g书纸 工艺: 单黑双面印刷 折页方式: 骑马钉

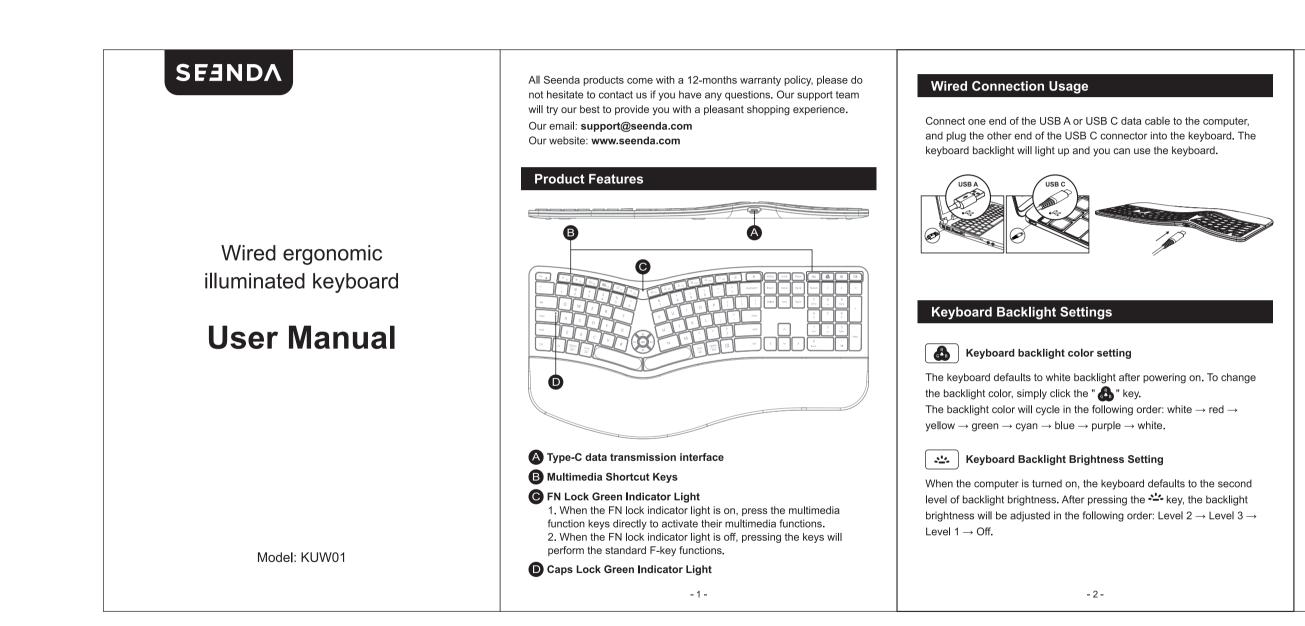

Note: By using the FN lock key, you can switch between the standard

functions and multimedia functions of the F1 to F12 keys.

Key	Mac OS	Windows
sc 📠	FN lock	FN lock
F1	Brightness -	Brightness -
∯ F2	Brightness +	Brightness +
를 _{F3}	Task Center	Switch Task Windows
88 _{F4}	Switch Task Windows	Task View
ゴ _{F5}	Return to Desktop	Return to Desktop
۲ _{F6}	Search	Search
F7	Select All	Select All
⊋ _{F8}	Сору	Сору
% _{F9}	Cut	Cut
F10	Paste	Paste
1× _{F11}	Mute	Mute
→ F12	Task Center	Web Page
0	Screenshot	Screenshot
٥	No Function	Settings
	No Function	Calculator
-	Lock Screen	Lock Screen
	No Function	Menu

	Product Parameters	
	Working Current (Backlight off)	
	Working Current (Backlight on r	
	Sleep Current	
	Wake Up Way	
S	Dimension	
	System Requirements	
	Tips	
	1. When you restart the computeremembered, but when you was etting will be retained. 2. In order to save power and poperation within 10 minutes, the mode and turn off the backlight any key.	

Sleep Mode maximum) ≤170mA Press any key 480x244x26mm Windows XP, Windows 7~11 systems; Mac Book system

minutes of inactivity and the indicator light will be off.

▶ USB & USB-C Combo to Type-C Data Cable *1

up again and starts to work within 1 second.

Packaging Content

Keyboard *1

▶ User Manual *1

outer, the backlight setting will not be vake up from sleep mode, the backlight protect the environment, if there is no key the keyboard will automatically enter sleep nt. To turn the backlight back on, just press

Safety Warning 1. The keyboard will automatically enter the sleep mode after 10 IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these safety instructions. 2. Please press any key to wake up the keyboard. The indicator will light ⚠ Heat Exposure: Avoid leaving the item in high-temperature environments or in direct sunlight, which could result in a fire Liquid Exposure: Keep the item away from water and liquids. Do not use if wet until thoroughly dried. ▲ Damage and Leakage: Cease usage and consult customer service if the item is damaged or the battery leaks. ▲ Correct Disposal: Follow local regulations for disposing of electronic devices and batteries. Do not dispose of with household ▲ Radio Frequency Interference: This device may cause interference with other electronics. Keep a safe distance from sensitive devices. ⚠ Child Safety: Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised. **CAUTION:** Non-compliance with the above warnings can lead to serious injury or property damage. For further assistance or information, please contact our customer Email: support@seenda.com