

INSTRUCTION MANUAL



MILK FROTHER MACHINE

MODEL:HS005

Technical Data:

Rated voltage: 220-240V ~ 50Hz

Rated power input: 550W

Max capacity: 240ML

IMPORTANT SAFEGUARDS

The instructions are part of the appliance.

Read and follow all instructions to avoid possible harm and damage. Save these instructions and pass them on to any subsequent owner.

Avoid risk of fatal electric shock and fire.


- Only plug the Housing into suitable, earthed mains connection. Make sure that the voltage of the power source is the same as that specified on the rating plate.
- Do not pull the cable over sharp edges, clamp it or allow it to hang down. Keep the cable away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons.
- Disconnect the Housing from the mains, when not in use for long periods. Disconnect by pulling out the plug and not pulling the cable itself, as this may damage the cable.
- Never immerse the Housing in water. Electricity and water together risk a fatal electric shock.

Avoid possible harm when operating the appliance

- The appliance is intended to prepare beverages according to these instructions. This appliance is intended to be used in household and similar applications such as :staff kitchen areas in shops, offices and other working environments; bed and breakfast type environments. No liability is accepted for any damage resulting from use for other purposes, faulty operation or amateur repairs. Guarantee services are excluded in such cases.
- Never leave the appliance unattended during operation. Keep it out of the reach of children. The appliance is only for use by persons who have sufficient

experience and knowledge and are physically, sensory, and mentally able to operate the machine safely in accordance with these instructions.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if damaged. A damaged appliance can cause electric shock, burns and fire.
- To avoid hazard, never place the appliance on or beside hot surfaces, for example, radiators, cooking rings, gas burners or similar.
- Only use the appliance with the base provided.
- The appliance is intended to prepare drinks according to these instructions. It is for use in private households. No liability is accepted for any damage resulting from use for other purposes, faulty operation or amateur repairs. Guarantee services are also excluded in such cases.

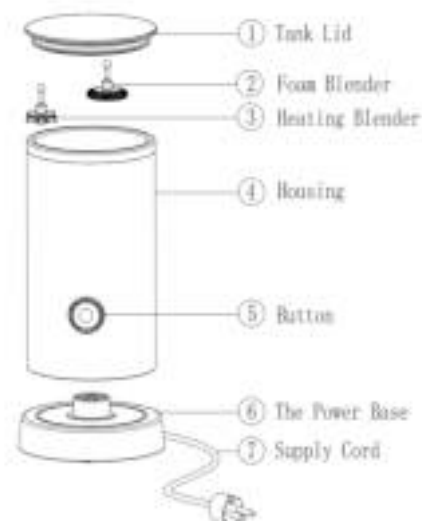

PREPARATION

TIP: Use cold, fresh, full-fat or semi-skimmed milk.

1. Underside of the jug must be dry before using the device.
2. Plug base into the socket before use. Press On-off Button located on the housing of the unit .
3. Jug internal side must be cleaned with a cloth suitable for non-stick surfaces.

Preparation Times:

Hot milk froth of 130mL (MAX): 90 seconds approximately

Cold milk froth of 130ml (MAX): 90 seconds approximately

Heating milk of 240ml (MAX): 90 seconds approximately

4. Attach relevant blender.
5. Press button to start .Stops automatically

For hot preparations, press button and the lamp ring color is Red

For cold milk froth, press the button twice and the lamp ring color is Blue

WARNING

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 2. Children should be supervised to ensure that they do not play with the appliance.
 3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
 4. Our product is non-water-proof. Never clean the appliance in a dishwasher.
- Clean after each preparation. Only use non abrasive cloth, never use a brush. Jug is non-water-proof. Do not put in dishwasher.