

# 2.1 CH SOUNDBAR WITH SUBWOOFER



*Enjoy it.*

## Specifications

- 2.1CH wired subwoofer
- 40W\*2+80W Output
- AUX/USB/HDMI ARC/Optical input
- 4-Digit Digital LED indicator
- Plastic Case, Digital Amplifier with DSP
- Remote controller
- Driver Unit SB: 2.25"\*4, SUB: 6.5"\*1
- Power Supply: AC 110-240V 50/60Hz
- Impedance: 4Ω\*4+4Ω\*1
- S/N Ratio: - ≥ 83dB
- Frequency Response: - 45Hz-20Khz
- Distortion: ≤ 1%(1K/1W)
- Input Sensitivity: - SB: 800mV±50mV  
SW: 400mV±50mV



## Preparation for Use

### Setting Up and Unpacking Instructions:

- Remove the Soundbar from its packaging, ensuring all packing materials are removed.
- Take off any descriptive labels or stickers on the front or top of the Soundbar's exterior casing.
- Do not remove any labels or stickers from the back or bottom of the devices exterior casing.
- Place the Soundbar on a flat surface like a table, desk, or shelf near an AC supply. Ensure it's away from direct sunlight and sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

### Protect Your Furniture

- The Soundbar is equipped with non skid rubber 'feet' slippage
- These 'feet' are made from a special non-migrating rubber material to avoid leaving marks on furniture.
- However, certain oil based furniture polishes, wood preservatives, or cleaning sprays may soften the rubber 'feet', potentially leaving marks or residue.
- To safeguard your furniture, consider purchasing small self-adhesive felt pads from hardware or home improvement stores.


### Power Source





- The Soundbar is designed to operate on standard AC power and is compatible with SMPS110V-240V 50/60Hz power supply, suitable for India
- Do not attempt to operate the Soundbar on any other power source, as it may cause a damage not covered by the warranty.


## Important Notes

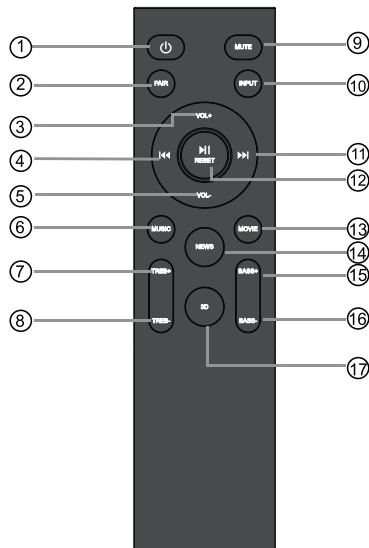- This soundbar is designed specifically for use with LED/LCD/Plasma TVs. Avoid using it with CRT TVs to prevent image interference.
- Keep the safety and operating instruction manual for future reference.
- Do not expose the soundbar to dripping, splashing, or humid conditions.
- Avoid installing the product in the following areas:
  - Direct sunlight or near radiators.
  - On top of stereo equipment that emits excessive heat, obstructs ventilation, or in dusty environments.
  - Places with constant vibrations.

## Remote control



1.  : Standby mode for power on/off.
2. PAIR: Connect or disconnect to the pairing device.  
(Press the button more than 2 seconds).
3. Volume+: Master volume up
4.  : Pre button: Previous program (Only work under USB & BT mode of smartphone).
5. Volume - : Master volume down
6. MUSIC: Select the Music EQ
7. TR+: Treble volume UP.
8. TR-: Treble volume down.
9. MUTE: Mute mode.
- 10.INPUT: Input mode(AUX/USB/HDMI TV(ARC)/OPT/BT).
11.  : Next button: Next program. (Only work under USB & BT mode of smartphone).
12.  : Play/Pause (Only work under USB & BT mode of smartphone).  
Reset: Press and hold the button more than 2 sec. to Set all functions to manufacturer defaults.
13. MOVIE: Select the Movie EQ
14. NEWS: Select the News EQ.
15. Bass + : To increase the bass. (Refer to Bass chapter for reference.)
16. Bass - : To decrease the bass. (Refer to Bass chapter for reference.)
17. 3D: Select the 3D EQ.

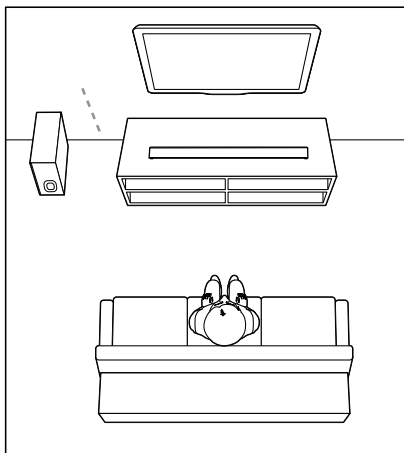

## Positioning Soundbar

### Table Placement

- Position the soundbar horizontally on a stable surface like a TV unit or shelves, ensuring it's centrally aligned with the TV screen. For optimal sound output and airflow, arrange both the soundbar and subwoofer as illustrated on the right

## Operating Instructions

### Setting the Soundbar

1. Connect the power cord to the mains to activate the display.
2. Turn on the soundbar by pressing either the power button on the soundbar itself or the STANDBY button on the remote control. Once powered on, the default input mode will be displayed.
3. Use the INPUT button on the remote control or the soundbar to select the desired input mode.
4. Choose from the available input modes:


**BT** : Bluetooth Pairing mode, **Hd** : HDMI mode  
**Opt** : Optical mode, **Usb** : USB mode  
**AUH** : AUX mode

### Auto Standby

1. The soundbar will enter standby mode after 20 minutes of no audio input automatically. Pressing any button or receiving a new audio source will awaken it from standby mode.
2. When disconnecting the TV or any external unit:
  - Ensure it is switched off.
  - For complete shutdown, disconnect the mains plug from the socket.
  - Please turn off the unit entirely to conserve energy during periods of inactivity.

### Powering On/Off

1. Plug the power cord of the soundbar into a wall outlet, it will automatically enter standby mode
2. Turn on the soundbar by pressing either the STANDBY button on the soundbar or the POWER button on the remote control. Select your desired input mode by pressing the INPUT button on the remote or the power button on the soundbar.
3. To power off, press the STANDBY button on the soundbar or the POWER button on the remote control. The soundbar will enter standby mode. Then, unplug it from the wall outlet.

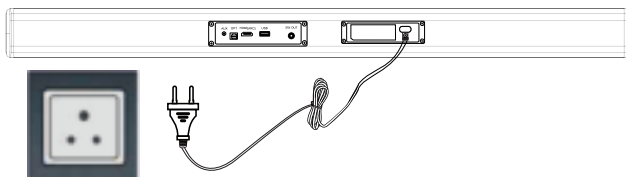

## Playing Audio via BT Connection

1. To activate the soundbar, press the STANDBY button on the soundbar itself or the POWER button on the remote control. Select Bluetooth mode by pressing either button. Upon selecting Bluetooth, "bt" will be displayed on the LED screen
2. Enable Bluetooth on your device, then locate and select **BLAUPUNKT SBW** from your Bluetooth list to establish the connection.
3. Upon successful pairing, a tone will sound, and The flickering of the "bt" indicator will cease, indicating a stable connection.
4. Adjust the volume using either the volume buttons on the soundbar or those on the remote control.
5. The remote-control features playback controls for Bluetooth mode. Hold the PAIR button for over 2 seconds to disconnect or reconnect with the previously paired Bluetooth device
6. If desired, modify the audio settings using the corresponding buttons on the remote control.

### Note

1. Within Bluetooth mode, the remote enables control over music playback, including play/pause and track selection. The PREV/NEXT/PLAY & PAUSE buttons exclusively function in Bluetooth and USB modes, without affecting other modes.
2. Once paired, subsequent connections with the same device don't require repeating the pairing procedure.
3. If the connected device powers off or is manually disconnected, the soundbar will automatically enter pairing mode.
4. Should the connected device move beyond the wireless range (up to 10 meters), disconnection occurs. Upon re-entering Bluetooth range, reconnection to the device is automatic. Repeat the pairing steps to connect to other devices..
5. Upon startup, the soundbar connects to the last paired device. To pair with a new device, unpair the current connection. There's no automatic shutdown in pairing mode, so manually power off the soundbar when not in use, as it remains in pairing mode even without a paired device.
6. Within Bluetooth mode, the remote enables control over music playback, including play/pause and track selection. The PREV/NEXT/PLAY & PAUSE buttons exclusively function in Bluetooth and USB modes, without affecting other modes.
7. Once paired, subsequent connections with the same device don't require repeating the pairing procedure.
8. If the connected device powers off or is manually disconnected, the soundbar will automatically enter pairing mode.
9. Should the connected device move beyond the wireless range (up to 10 meters), disconnection occurs. Upon re-entering Bluetooth range, reconnection to the device is automatic. Repeat the pairing steps to connect to other devices.
10. Upon startup, the soundbar connects to the last paired device. To pair with a new device, unpair the current connection. There's no automatic shutdown in pairing mode, so manually power off the soundbar when not in use, as it remains in pairing mode even without a paired device.



## Playing Audio via USB Port


- The soundbar transitions to USB input mode automatically upon detecting the insertion of a USB flash drive, indicated by the LED display showing "Usb".
  - If the soundbar fails to switch automatically when powered on with a USB flash drive inserted, press the INPUT key on the remote control or soundbar to manually switch to USB input mode. The LED display will illuminate "USB", and music from the USB will commence playback.
  - USB input mode is exclusive to the soundbar and activates only when a USB flash drive is connected.
1. Before use, ensure your USB flash drive contains MP3 audio files, as other file types are not supported.
  2. Connect the USB flash drive directly to the soundbar's USB port or via a USB adapter (or your USB extension cable connected to the port), triggering automatic playback of the music
  3. The remote-control features playback controls specifically for USB input mode.

## Audio input(Aux)Connection

1. Begin by connecting the soundbar to your PC, laptop, smartphone, TV, or any other audio device using the provided AUX cable. Ensure that these devices feature both AUX IN and AUX OUT terminals.
2. Next, press the INPUT button on either the remote control or the soundbar itself to switch the soundbar to AUX mode. Once successfully connected in AUX mode, the screen will indicate "AUH". Audio playback from your connected device will commence, with playback control managed exclusively on your connected device.

### Note

- For certain computers, it may be necessary to access the audio control panel to manually designate the soundbar as the audio output device. Follow the steps outlined above to complete this process.

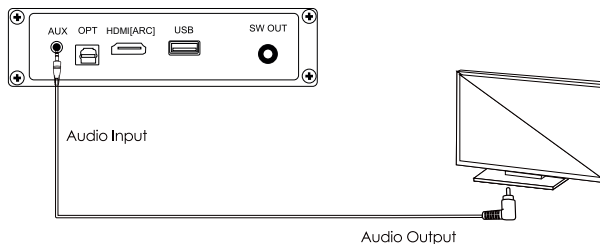



## Optical Mode


- Remove the cap from the optical cable (retain the cap for future use) and ensure correct alignment of the plug. Proceed to connect the soundbar to the TV using the optical cable.
- Utilize this mode for playing music from a TV featuring an optical digital output on the soundbar. In the TV's sound settings, opt for the soundbar's optical connection (set as audio output). Upon optical cable connection, the TV's audio output defaults to PCM format.

**Ensure the TV possesses an optical digital output and use the provided optical cable for the connection, following these steps:**

1. Attach one end of the optical cable to your TV's optical digital output.
2. Connect the other end of the optical cable to the optical digital input of your soundbar.
3. Switch on the TV set and the soundbar. Set the connected TV to "PCM Stereo". Set the audio output mode as <automatic> or <decoded output as PCM state>.
4. Commence playback on the TV.
5. Press the "INPUT" button on either the remote control or the soundbar to select the OPT OPTICAL mode.
6. Adjust the volume using the volume buttons to suit your preferences.
7. Modify the audio settings using the appropriate buttons on the remote control as needed.

### Note

1. When connecting a device such as a TV/Set-top box/ DVD/ game console with optical cable, set the audio output mode of the device to PCM mode (digital optical output).
2. Do not bend the optical cable, otherwise the cable inside will be damaged.

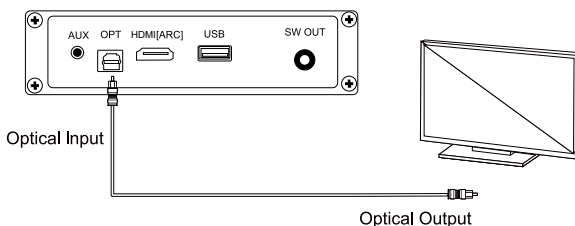


## HDMI(ARC) Mode

1. The soundbar boasts HDMI (ARC) compatibility, allowing you to stream TV audio through it using just one HDMI (ARC) cable, provided your TV supports ARC.
2. Simply link the HDMI (ARC) port on your soundbar to the corresponding port on your TV using a high-speed HDMI (ARC) cable. Note that your TV's HDMI (ARC) port might be named differently; consult your TV's user manual for specifics.
3. After connecting via HDMI (ARC), ensure your TV's sound output setting is configured to <external PCM Stereo>, and the digital audio output mode is either <automatic> or <decoded output as PCM state>. This setup enables the TV's digital audio output to match the aspect format. Once configured, start playing music on your TV.
4. To activate HDMI (ARC) mode, use either the "INPUT" button on your remote control or the corresponding option on the soundbar. Specific settings may vary across different TVs, so consult your TV's user manual for guidance.
5. Adjust the volume to your liking using the dedicated volume buttons on either the remote control or the soundbar itself.

### Note

1. When linking devices like a TV, set-top box, DVD player, or game console using an HDMI (ARC) cable, ensure the audio output mode of the device is set to PCM mode <digital HDMI (ARC) output>.
2. Connecting your TV to a HDMI (ARC) port with a soundbar is a straightforward process. While setup menus may vary between TVs, the operational steps remain consistent.
3. If you need to connect a set-top box as well, start by connecting the HDMI (ARC) cable and pairing it with the soundbar. After this initial connection, proceed to connect the set-top box.

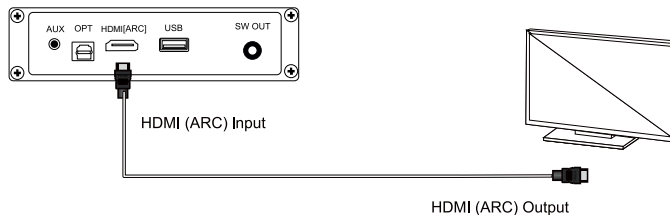

## Trouble Shooting

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from sound bar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of sound bar or TV/other device is adjusted too low.	Increase the volume level on sound bar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the sound bar and the output jack on the playback device.
	Signals that the sound bar cannot playback when being input.	When sound bar and TV or other devices are connected by an audio cable through TV (ARC) port output, Select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our sound bar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
The sound is distorted or echoed.	TV volume is not muted.	If you play audio from TV through the sound bar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The sound bar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the sound bar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the sound bar. Make sure our product cannot be used in sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the sound bar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the sound bar and try pairing again. You have not enabled the Bluetooth function of the device; see the user manual of the device on how to enable the function and correctly connected the device. The sound bar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.

## Trouble Shooting

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the sound bar, or remove any obstacle between the device and the sound bar.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near device that emit electromagnetic waves.
There is no sound from sound bar - HDMI TV (ARC) Mode	Incorrect HDMI cable is used causing no signal to be sent to soundbar. Incorrect input mode is selected.	1. Make sure that the user connected TV and sound bar by a 19-core HD ARC cable. 2. The sound bar and TV are connected through TV (ARC) port output; make sure that the TV is ARC compliant. 3. Set the TV to HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)
There is no sound from sound bar (OPTICAL Mode)	OPTICAL cable might be damaged and no signal is received by the soundbar due to a failed connection and incorrect operation mode selected.	1. Replace the OPTICAL cable with a new one to connect. 2. Set your TV audio output to PCM format. (Pls refer to your TV user manual)
There is no sound from sound bar (USB mode)	USB file type is not support & Sound bar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3 files because other file types are not supported. Switch the input mode once again, then playback again.

## Important Safety Instruction

Thank you for purchasing the home theater BLAUPUNKT SBW

Please read this user manual carefully and keep for future reference.

### Warning:



### Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. The unit has no user-serviceable parts inside. Refer servicing to qualified personnel only



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

**Notice:**

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long periods of time or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.

3. The appliance is not intended to be operated by means of an external timer or separate remote control system.

4. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.

7. The apparatus must not be exposed to dripping or splashing. Do not place objects filled with liquids such as vases, bottles or humidifiers on the unit.

8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.

9. Do not locate this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.

10. Do not place this unit close to a strong magnetic field.

11. Do not place the unit on a amplifier or receiver.

12. Do not place this unit in a damp area as the moisture will affect the life of electric components.

13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

## Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other devices (including amplifiers) that produce heat.
6. Do not ignore the safety measures of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
7. Protect the power cord from being walked on or pinched. Pay special attention to the positioning of cords, plugs, power sockets especially the point where they exit from the unit.
8. Unplug this apparatus during lightning storms or when not in use
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### ATTENTION!

Please be careful while listening to music. Blaupunkt has always ensured that every audio product is powerful and produces massive bass and other audio ranges. Please raise the volume levels slowly and do not play music at full volume levels as this could hurt your ears.

### 1 Year Warranty

If you have any issue with your product please contact our Authorized Customer Care team.

Blaupunkt Authorized Service Center:

Envent World Wide Pvt Ltd.

Khasra. No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New Delhi- 110037

Email- [wecare@blaupunktaudio.in](mailto:wecare@blaupunktaudio.in)

Whatsapp Chat Support: 8860 022 600

Please submit the following information while claiming product warranty:

-Serial Number

-Date of purchase

-A copy of proof of purchase in case of warranty

**Note-** If you do return the product, please use the original packaging or other suitable packaging to protect it in transit