



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Tv/ Radio
	0
	Back / Return
	Info / Angle
	Guide / EPG / -/--
	Menu / Home

Original	Replacement
	Up
	Exit / Cancel / Clear
	Left
	OK
	Right
	Play / Slow
	Down
	Audio / Lang 1/11
	Pause / Step / Freeze
	Fav / Marker / PC
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	>> / Tune+
	Subtitle / EQ



