


Lofi-12 XT v1.1 Update Guide

[Note] Use the AC adapter or new batteries.

Never interrupt the power during a firmware update.

- 1 Using the Lofi-12 XT's card reader mode or connect the SD card to the PC/Mac by inserting it into the PC/Mac's card slot.
- 2 Unzip the downloaded firmware (.zip) and copy the binary file (Lofi-12 XT.bin) to the root folder on the SD card.
- 3 Deactivate the Lofi-12 XT's card reader mode or remove the SD card from the PC/Mac and insert it into the Lofi-12 XT.
- 4 While pressing **PAD** button, press and hold the power button.
- 5 Select **SYSTEM UPDATE** and press OK.

When **Are you sure?** is indicated, press **OK** again to start the update.

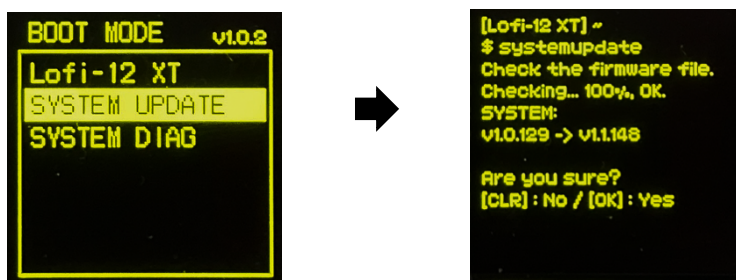

Screen display varies by version

- 6 After it completes, turn off the power and turn it on again.
- 7 On the **SND** screen, push the **A** knob to display **TAG SEARCH**, push **B** knob to update the audio file database.

