


DJI MIC 3

Quick Start Guide

快速入门指南

v1.0

Instrukcja obsługi

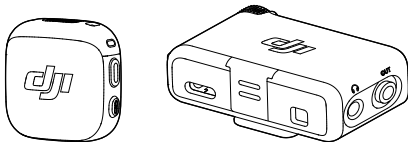



DJI is a trademark of DJI.
Copyright © 2025 DJI All Rights Reserved.



DJI Support/ 技术支持
<https://www.dji.com/support>



YCBZ5500321803

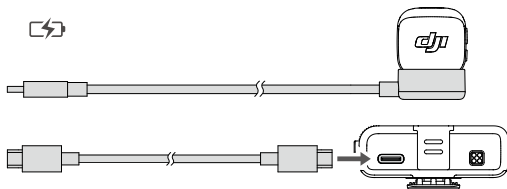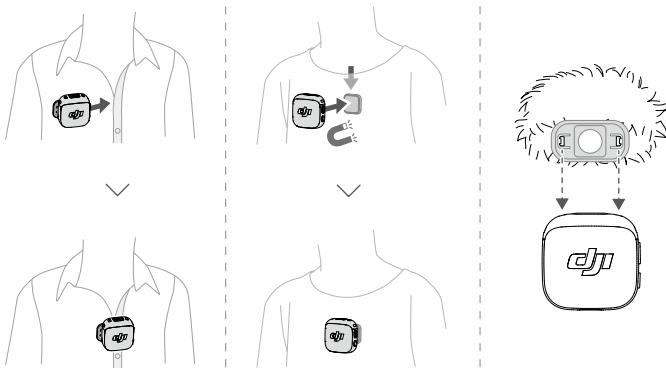


TX




RX





A

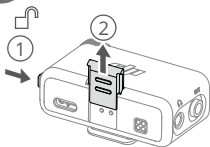


RX

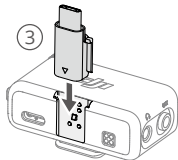

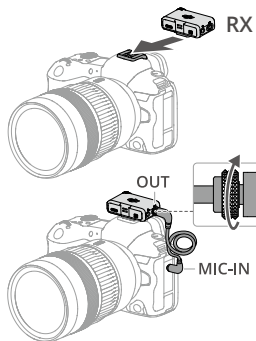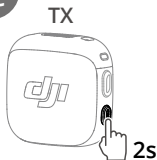
B**C**

 Osmo Action 4 /
Osmo Action 5 Pro




Osmo Pocket 3



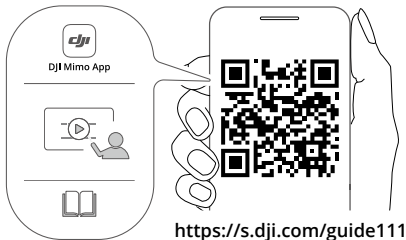


<https://s.dji.com/guide111>

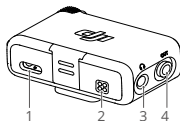


EN

 1. USB-C Port
2. Charging Contacts
3. Monitor Port
4. Output Port
5. Touchscreen
6. Dial
7. Power Button
8. Release Button






CHS

 1. USB-C 接口
2. 充电触点
3. 监听接口
4. 输出接口
5. 触摸屏
6. 拨轮
7. 电源按键
8. 解锁按键



PL

1. Port USB-C
2. Styk ładowania
3. Port monitora
4. Port wyjściowy
5. Ekran dotykowy
6. Pokrętło
7. Przycisk zasilania
8. Przycisk zwalniania

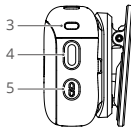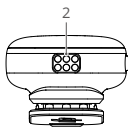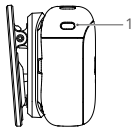

EN

1. Recording Status LED
2. Charging Contacts
3. System Status LED
4. Power Button
5. Linking Button

CHS

1. 录音状态指示灯
2. 充电触点
3. 系统状态指示灯
4. 电源按键
5. 配对按键

PL

1. Dioda stanu nagrywania
2. Styk ładowania
3. Dioda LED stanu systemu
4. Przycisk zasilania
5. Przycisk łączenia

