



# GETTING TO KNOW YOUR **2024 TRAX**



[chevrolet.com](https://chevrolet.com)

Review this quick reference guide for an overview of some important features in your Chevrolet Trax. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [chevrolet.com/owners](https://chevrolet.com/owners). For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



# INSTRUMENT PANEL

Cruise Control/  
Forward Collision  
Alert/Heated Steering  
Wheel Buttons

Turn Signal  
Lever/  
IntelliBeam  
Control

Digital Driver  
Information  
Center

Driver Information  
Center Controls/  
Voice Recognition  
Buttons

Windshield  
Wipers/Rear  
Wiper Lever



Power  
Mirror/  
Window  
Switches

Exterior Lamps/  
Instrument Panel  
Lighting Controls

Audio Favorite  
Station or Seek  
Controls (back of  
steering wheel)

Steering Wheel  
Adjustment  
Lever

Audio Volume  
Controls  
(back of  
steering wheel)

Engine  
Start-Stop  
Button (on  
instrument  
panel)

## SYMBOLS



Low Fuel



Brake System Warning



Cruise Control Set



Security



Automatic Emergency Braking



Airbag Readiness



Traction Control/  
StabiliTrak Active



High-Beam Headlamps



Check Engine



Adaptive Cruise Control



Traction Control Off



Stability Control Off



Lights On Reminder



Antilock Brake System



Charging System



Low Tire Pressure








Lane Keep Assist



RS model shown

-  Pedestrian Ahead
-  Engine Oil Pressure
-  Engine Coolant Temperature Warning
-  Auto Stop
-  Door Ajar

- PARK**  Parking Brake Set
-  Vehicle Ahead
-  Service Electric Parking Brake
-  Driver Seat Belt Reminder
-  Front Passenger Seat Belt Reminder

*Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.*

**See Introduction in your Owner's Manual.**

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)♦

### Lock

Press to lock all doors.

### Unlock

Press to unlock the driver's door.

Press again to unlock all doors.

### Vehicle Locator/ Panic Alarm


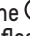 
Press and release to locate your vehicle.


Press and hold to activate the alarm.

Press again to cancel the alarm.



### Remote Vehicle Start♦

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- The engine will run for 15 minutes. Repeat the steps to extend the remote start an additional 15 minutes.
- To cancel a remote start, press the  button until the parking lamps turn off.

**Note:** To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS ACCESS SYSTEM♦

The Keyless Access System enables operation of the front doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

### KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and liftgate.
- ▶ Press the button on the front passenger's door handle to unlock all doors and liftgate.
- ▶ Press the touchpad above the license plate to open the liftgate.



### KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and liftgate immediately.
- ▶ All doors will lock automatically after a short delay if Passive Locking is turned on in the Settings menu.

**Note:** To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

## DOOR KEY ACCESS

If vehicle power is lost, access the lock cylinder located behind the cap (A) on the rear edge of the driver's door handle.

1. Press the button on the side of the key fob to pull out the door key from the fob.
2. Pull and hold the door handle.
3. Insert the key behind the door handle and press the key blade into the clip to release the key cylinder cap. Remove the cap.
4. Use the key to lock or unlock the door.



*See Keys, Doors and Windows in your Owner's Manual.*

## KEYLESS (PUSH-BUTTON) START ♦

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

### STARTING THE ENGINE/ON

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.



**Note:** If the key fob battery is weak, place the key fob in the tray pocket behind the cupholders in the center console to enable the engine to start. Replace the key fob battery as soon as possible.

### STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

### ACCESSORY MODE

- ▶ With the engine off and the brake pedal not applied, press the **ENGINE START/STOP** button to place the ignition in Accessory Mode. The amber button indicator will illuminate.

*See Driving and Operating in your Owner's Manual.*

 
## KEYED IGNITION (IF EQUIPPED)

### STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

### TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counterclockwise to the Lock/Off position (2).

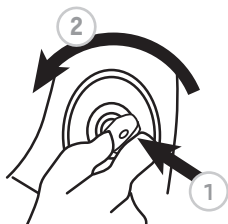

*See Driving and Operating in your Owner's Manual.*

## AUTO ENGINE STOP/START OPERATION

The fuel-saving Engine Stop/Start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is applied and the vehicle is at a complete stop, if certain operating conditions are met. When stopped, the tachometer reads AUTO STOP or the (A) symbol displays in the Driver Information Center\*. The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.



### AUTO STOP DISABLE

- ▶ To turn off the system, press the (A) Auto Stop Off button (A) on the center console. The button indicator will turn on when the system is off.

The Engine Stop/Start system is enabled each time the vehicle is started.

*See Driving and Operating in your Owner's Manual.*

## TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system mutes the audio of the radio or any device paired with the vehicle, and may prevent the vehicle from shifting out of Park, if front seat occupants aren't wearing their seat belts. It also provides audible and visual warnings when the vehicle is traveling over predetermined speeds. An in-vehicle Report Card is produced at the end of every driving cycle with data about driving behavior.

When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

 
- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

*See Infotainment System in your Owner's Manual.*

## STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

*See Instruments and Controls in your Owner's Manual.*

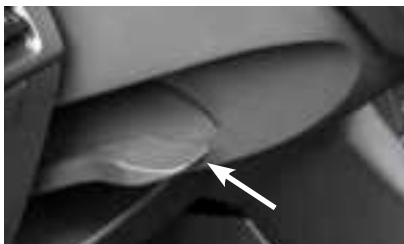

## POWER FRONT SEATS

### POWER SEAT ADJUSTMENTS

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

 
#### B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.

*See Seats and Restraints in your Owner's Manual.*

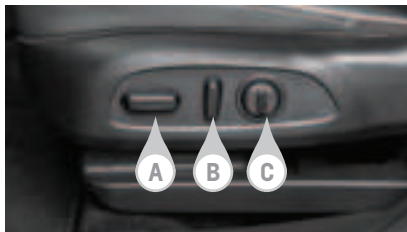

## REAR SEATS

### FOLDING THE REAR SEATBACKS

- ▶ Pull the lever on top of the seatback (A) and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To raise each seatback, lift it up until it locks in place.

*See Seats and Restraints in your Owner's Manual.*





## DIGITAL DRIVER INFORMATION CENTER\*

The Driver Information Center (DIC) displays a variety of vehicle messages and system information. It features a compass (A) in the top-left corner of the display and a fuel gauge with a remaining fuel range estimate (B) in the bottom-left corner of the display.

### DIC CONTROLS



Use the controls on the right side of the steering wheel to view and select Vehicle, Audio and Phone information.

- ▶ Rotate the thumbwheel up or down to scroll through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

 
 
### CLUSTER DISPLAY LAYOUT

1. Press and hold the thumbwheel for 2 seconds to view the cluster display menu.
2. Use the thumbwheel to scroll through the available display layouts.
3. Press the thumbwheel to select the desired display layout.

### VEHICLE INFORMATION

1. Press the  Vehicle Status icon on the infotainment screen to view all available vehicle information.
2. Select the Maintenance (tire pressure, engine oil life), Gauges (battery voltage, coolant temperature) or Trip (fuel economy, trip information) tab.
3. When viewing an item, select the  icon to view additional information or to reset an item.
4. To display the item on the DIC, select Show in Cluster. Select Remove from Cluster to remove an item from the DIC.

See *Instruments and Controls* in your Owner's Manual.

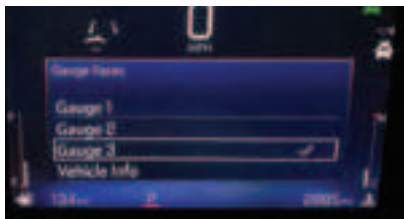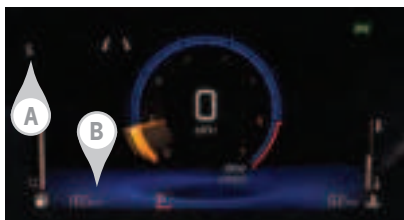



# INFOTAINMENT SYSTEM<sup>♦</sup>


Read your Owner's Manual for important information about using the infotainment system while driving.



Uplevel infotainment system<sup>♦</sup> shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit [chevrolet.com/support](http://chevrolet.com/support).

## MANAGING HOME PAGE ICONS

1. Press the  Home icon.
2. To enter edit mode, touch and hold the icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

## STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM<sup>♦</sup>) can be stored in any order.

1. Tune in a radio station. The sources menu is at the top of the Audio page.
2. Select the desired page of favorite buttons.
3. Touch and hold one of the favorite buttons.

## AUDIO SOURCES

1. Select the current Source (icon with arrow) at the top of the Audio page.
2. Select the desired audio source or radio band.

See Infotainment System in your Owner's Manual.

## INFOTAINMENT SYSTEM♦

### SIRIUSXM WITH 360L™♦

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See [siriusxm.com](http://siriusxm.com) and [onstar.com](http://onstar.com) for details.

### APPLE CARPLAY® AND ANDROID AUTO™†

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection:
  - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
  - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
2. Follow the instructions on the infotainment system and the phone.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
  - ▶ To exit Apple CarPlay or Android Auto, press the Home icon. To return to Apple CarPlay or Android Auto, press and hold the Home icon.

### PORTABLE AUDIO DEVICES


An iPod®, iPhone®, MP3 player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console.

- ▶ Touch Audio and then touch the Source icon to select the USB device.

The USB ports♦ on the rear of the center console are for charging only.

### NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech. Example: "Call Dave." Say "Help" for assistance.

*See Infotainment System in your Owner's Manual.*




†Android Auto is a trademark of Google LLC; Apple CarPlay is a trademark of Apple Inc.

## BLUETOOTH® SYSTEM♦

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit [chevrolet.com/support](http://chevrolet.com/support) for more information.

### PAIR A PHONE

1. Press the  **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected) or select the Phone icon > Manage Phones > Add Phone on the infotainment screen.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

### FIRST TO CONNECT PAIRED PHONE


Multiple phones can be paired to the Bluetooth system. The system connects to the paired phone that is set as First to Connect.

 
- To set the First to Connect phone, select Settings > System > Phone > Options for the connected phone > First to Connect.

*See Infotainment System in your Owner's Manual*

## WIRELESS PHONE CHARGING♦

The wireless charging system for smartphones is located at the front of the center console. To check device compatibility, visit [chevrolet.com/support](http://chevrolet.com/support). See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before placing it on the pad again.

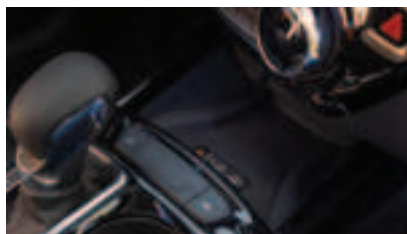

*See Instruments and Controls in your Owner's Manual.*

## 4G LTE WI-FI® HOTSPOT♦

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. Visit [onstar.com](http://onstar.com) for information about all the services included in the standard 3-year Onstar & Connected Services Plan.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot on the infotainment system.

*See Infotainment System in your Owner's Manual.*

## AUDIO/PHONE STEERING WHEEL CONTROLS

### **Push to Talk**

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

### **End Call/Mute**

Press to end or decline a call.

Press to mute/unmute the speakers.

### **Audio**

Press to display the Audio source on the Driver Information Center.

### **Phone**

Press to answer an incoming call.

### **Volume (back of right side of steering wheel)**

Press the top or bottom button to adjust the volume.

 
### **Next/Previous Favorite Station (back of left side of steering wheel)**

Press the top or bottom button to go to the next or previous favorite radio station or track (on a connected device).



*See Infotainment System in your Owner's Manual*

## CLIMATE CONTROLS♦

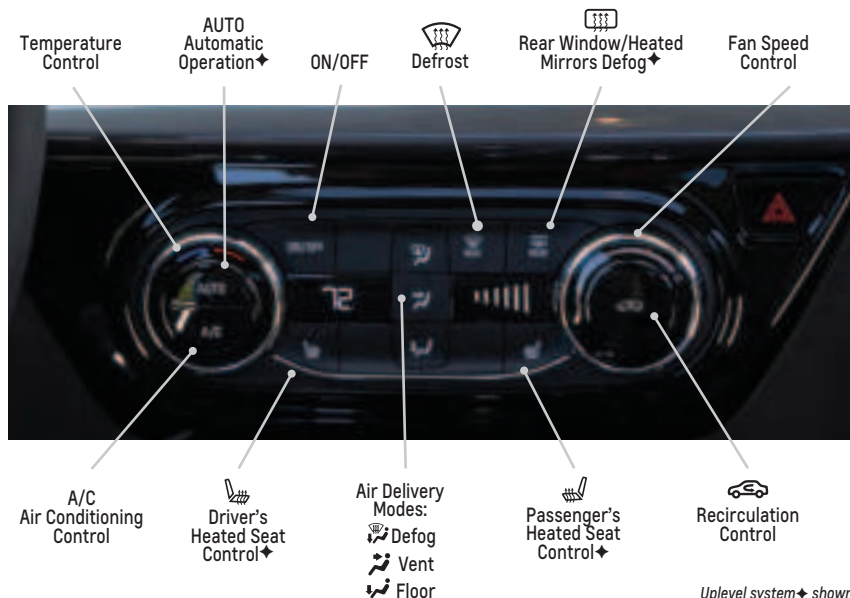

### AUTOMATIC OPERATION♦

- Press AUTO.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

### CLIMATE DISPLAY

- Select the Climate icon on the Home page of the infotainment screen to view and adjust the current operation of the Climate Controls.

*See Climate Controls in your Owner's Manual.*



## VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menu on the infotainment screen, including Buckle to Drive, Driver Assistance and others.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press < Back to exit each menu.



*See Infotainment System in your Owner's Manual.*

## WIPERS AND WASHERS

### WINDSHIELD WIPERS

Raise or lower the wiper lever.

#### HI Fast Wipes

#### LO Slow Wipes

#### INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

#### OFF

#### 1x Single Wipe



#### Washer Fluid

Pull the lever to wash the windshield.



### REAR WINDOW WIPER

Rotate the end of the wiper lever.

#### OFF

#### INT Intermittent Wipes

#### ON



#### Rear Washer Fluid

Push the lever to wash the rear window.

*See Instruments and Controls in your Owner's Manual.*

## LIGHTING

### EXTERIOR LAMP CONTROLS

 **Off/On**

#### AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**


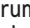 
### INSTRUMENT PANEL LIGHTING


 **Instrument Panel Brightness**

Press and release the knob to extend it.

Turn the knob to adjust the instrument panel lighting.

### INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions to provide enhanced visibility while driving at night. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.





- ▶ With the lamp control in the AUTO or Headlamps position, push the turn signal lever forward twice or press the  button♦ on the turn signal lever to turn the IntelliBeam system on or off.

**Note:** IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

*See Lighting in your Owner's Manual.*



## SUNROOF♦

- ▶ Press and release the rear of the  Slide switch (A) to express-open the sunroof. Press and release the front of the  switch to express-close the sunroof.
- ▶ Press and release the rear of the  Vent switch (B) to vent the sunroof. Press and release the front of the  switch to close the sunroof.








*See Keys, Doors and Windows in your Owner's Manual.*



## CRUISE CONTROL

### SETTING CRUISE CONTROL

- ▶ Press the  **On/Off** button. The  Cruise Control or  Adaptive Cruise Control<sup>♦</sup> symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, press down the switch to the SET position to set the speed. The  Cruise Control or  Adaptive Cruise Control<sup>♦</sup> symbol will illuminate in green on the instrument cluster.



### ADJUSTING CRUISE CONTROL


#### +RES Resume/Accelerate

Press up to resume a set speed. When active, press once to increase speed 1 mph; press and hold to continue increase speed.

#### -SET Set/Coast

When active, press down once to decrease speed 1 mph; press and hold to continue decreasing speed.





#### Cancel

Press the  button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

### ADAPTIVE CRUISE CONTROL<sup>♦</sup>

The system enhances regular Cruise Control to automatically maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.

 
*See Driving and Operating in your Owner's Manual.*

## DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

### CHEVY SAFETY ASSIST PACKAGE

- ▶ To turn some of the following systems on/off or to change some settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

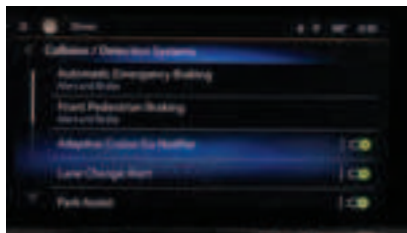

**FORWARD COLLISION ALERT** – The Vehicle Ahead Indicator is green on the instrument cluster when a vehicle that you're following is detected, and it is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.

**FOLLOWING DISTANCE INDICATOR** – The following distance to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

**AUTOMATIC EMERGENCY BRAKING** – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

**FRONT PEDESTRIAN BRAKING** – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.


**LANE KEEP ASSIST WITH LANE DEPARTURE WARNING** – The system may help you avoid collisions due to unintentional lane departures. The Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber may flash and beeps may sound on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- ▶ To turn on or off, press the **Lane Keep Assist** button on the center console.

**Note:** IntelliBeam automatic high-beam headlamps are included with the Chevy Safety Assist Package. See Lighting on page 15.

See Driving and Operating in your Owner's Manual.

## DRIVER ASSISTANCE SYSTEMS

**LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT** – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

**REAR PARK ASSIST** – During low-speed parking maneuvers, the system provides “distance to closest object” information on the instrument cluster and a beep sounds. When an object is very close, 5 beeps sound.


- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.



**REAR CROSS-TRAFFIC ALERT** – When in Reverse, the system warns of detected cross traffic approaching in either direction by displaying a red alert on the infotainment screen and sounding beeps.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.



**REAR VISION CAMERA** – When the vehicle is in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen.

- ▶ Touch the  **Guidance Lines** button on the screen to turn the guidelines on or off.

*See Driving and Operating in your Owner's Manual.*



## ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the  Parking Brake switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal and then press the  switch.

*See Driving and Operating in your Owner's Manual.*



## AUTOMATIC TRANSMISSION MANUAL MODE

Manual mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving downhill.

1. Move the shift lever to L (Manual Mode).
2. Press the + (plus) or - (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.


If vehicle speed is too high or low for the requested gear, the shift will not occur.

 


*See Driving and Operating in your Owner's Manual.*

## TRACTION CONTROL & STABILITRAK SYSTEMS


The traction control system limits wheel-spin and the StabiliTrak® electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- To turn traction control or electronic stability control (ESC) on or off, select the  Traction Control icon on the infotainment screen.

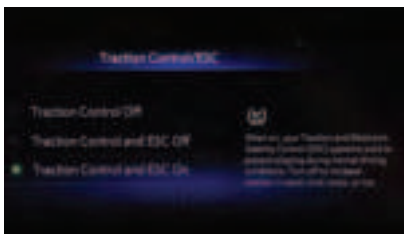

*See Driving and Operating in your Owner's Manual.*

## TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated (excluding the spare tire). Fill the tires to the recommended pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended cold tire pressure (excluding the spare tire). With the vehicle on, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

*See Vehicle Care in your Owner's Manual.*

## ROADSIDE ASSISTANCE

1-800-CHEV-USA 1-800-243-8872

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

### ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827) or refer to your Owner's Manual.

## MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.*

## MY CHEVROLET ACCOUNT

Get to know more about your vehicle and review your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Scan the QR code or go to **chevrolet.com/owners** to create an account today.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



B5522264

We recommend always using  
ACDelco or GM Genuine Parts.



85522264 A