

QUICK START GUIDE

 
MODEL:LT-55N7115A

JVC

1 PARTS LIST


In the box you will find:

- 1 x 55" 4K UHD LED TV
- 2 x Base Stands
- 4 x Screws
- 1 x Remote Control
- 2 x AAA Batteries
- 1 x Instruction Manual
- 1 x Quick Start Guide
- 1 x Warranty Card
- 1 x 3.5mm to RCA connector cable

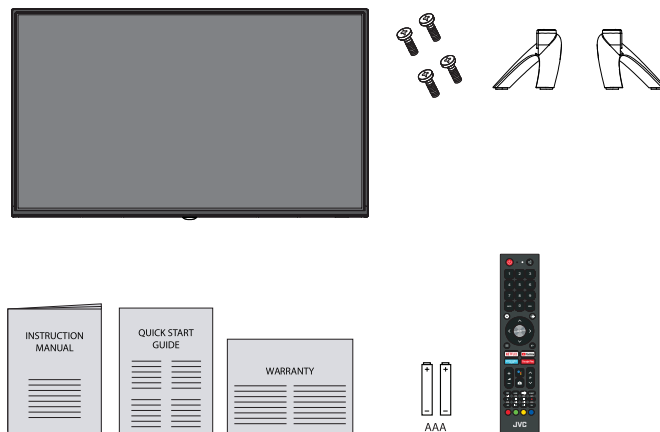

2 CONNECTIONS

 1. LAN
2. HDMI IN 1/2/3
3. ANTENNA INPUT
4. USB ports
5. AV INPUT
6. HEADPHONE OUT
7. OPTICAL OUT

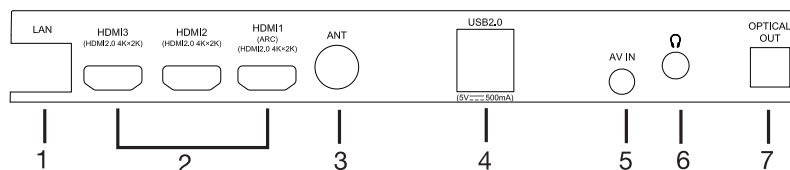

3 INSTALLATION

AND POWER CONNECTION

- 1 Spread a soft towel on a flat surface and lay the TV face down on the towel to avoid scratches.
- 2 Align the Base Stands with the screw holes on the bottom of the TV. Insert and tighten the Screws to attach the Base Stands to the TV.
- 3 Insert batteries into the remote control.
- 4 Connect the antenna cable to the ANTENNA socket of the TV.
- 5 Connect the power plug to the mains power socket.
- 6 Press the  button on the remote control to turn the TV on.

QUICK START GUIDE

MODEL:LT-55N7115A

JVC

4 HELP

 
The Help feature offers a lot of information about your TV operation. To use the Help feature, press the Home button, and then use the arrow and OK buttons to access the Help menu. You can find how to troubleshoot from the list or keyword search.

If you update APK, the Help feature and information will be updated.

Note: Use the Arrow and OK buttons to move through the menu and make selections.


Step 1

Press the Home button on the remote control. Select 'AI PONT' from the options.

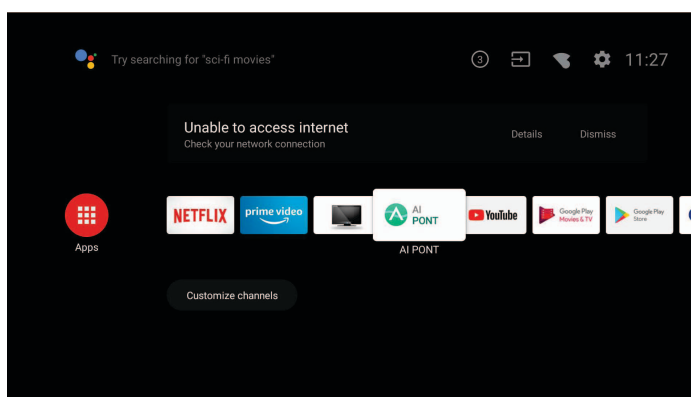

Step 2

 
Select 'Help' from the options.

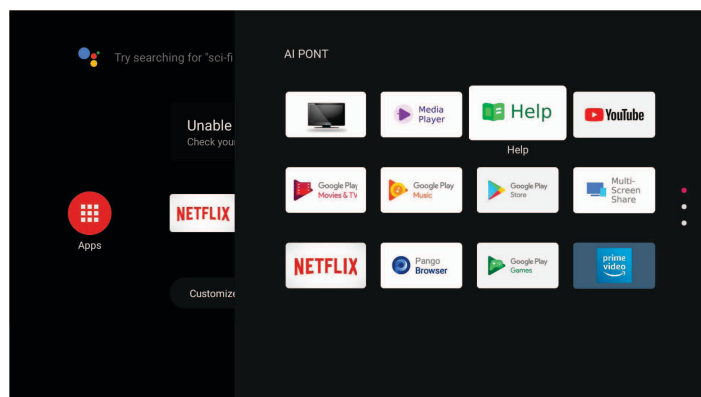

Step 3

Select the desired Help topic.

 Note: The password for the Specs section is 3138.

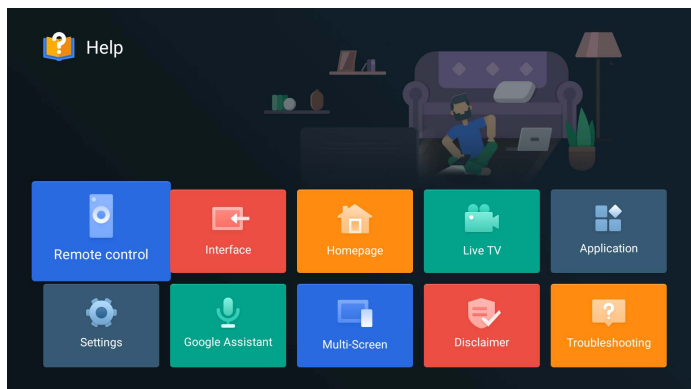

You can use the arrow and OK buttons to make a selection.