 




Asus X54C Keyboard Replacement

Asus X54C Keyboard Replacement

Written By: ZFix

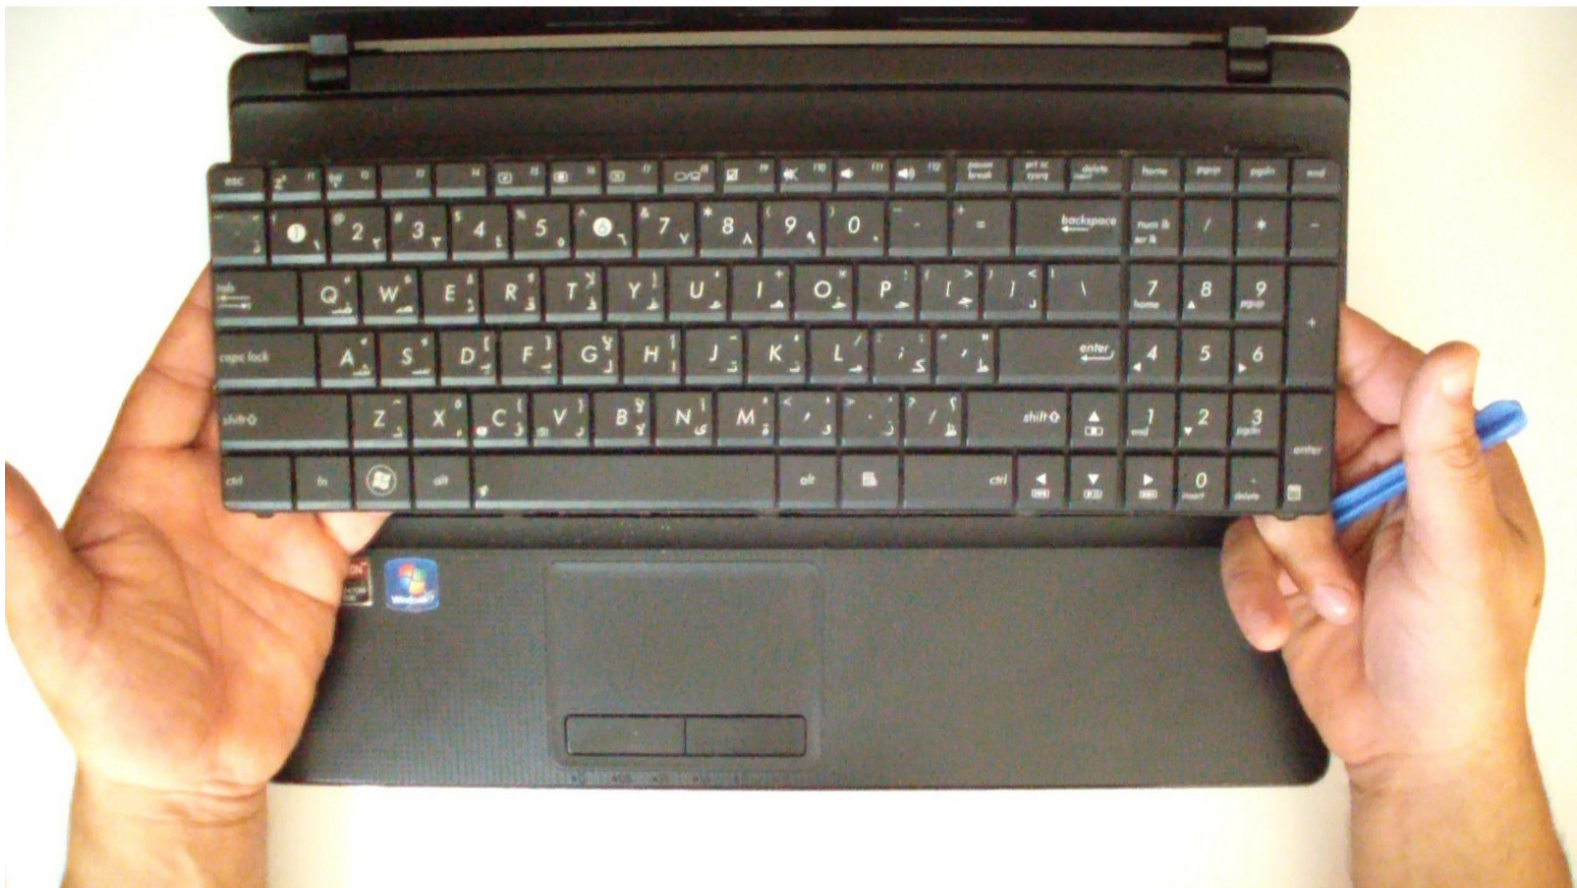

INTRODUCTION

ASUS X54C X54H X54HR - How to remove and replace the keyboard.

[video: <https://www.youtube.com/watch?v=d3qs94osEP0>]



TOOLS:

 
- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [paper cutter](#) (1)
-

Step 1 — Battery



- Disconnect the charger and switch off the laptop.
- Two keys keep locked battery.

Step 2 — Keyboard

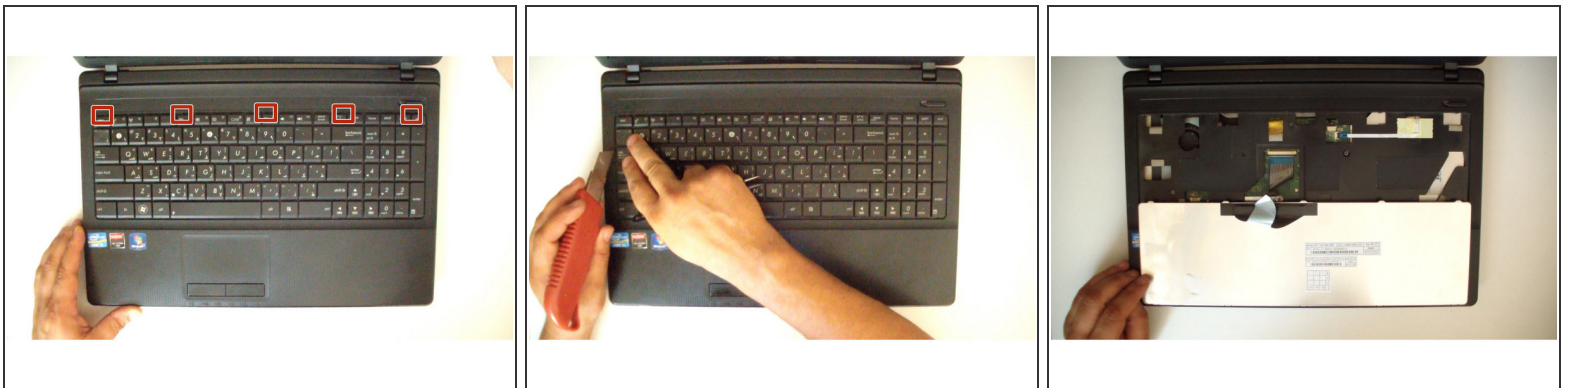

- The Keyboard is held by 5x locking clips.
- Use a tool with with a thin tip and lift slightly the KB from the left side.
- Unlock clips one by one.
- Disconnect the KB ribbon cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-11 09:01:49 AM.