



POWERWAVE

ACCESSORIES

INSTRUCTIONS

DELUXE CASE



Contents

PRODUCT OVERVIEW	2
LAYOUT	2
CONTENTS	3
PRODUCT CARE AND SAFETY	3





DELUXE CASE

INSTRUCTIONS

Product Overview

Designed specifically for the Nintendo Switch™ 2, the Powerwave Deluxe Case features dedicated compartments to secure your devices in place while on the go, ensuring that everything remains well protected in your travels.

The spacious design allows for storage of all your essential devices including Console, Dock, AC Adapter and Controllers, all in a convenient and sturdy case.

Layout





DELUXE CASE

INSTRUCTIONS

Contents

1x Deluxe Case
1x Clip On Carry Strap

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.