



HOT-2-TROT TRAVEL IRON

Instruction Manual



3 Year Limited Warranty

This device has a limited warranty of 3 years from the original date of purchase against workmanship and defects in material. If under normal use, your product fails to operate, please contact our customer service department at info@sunbeamhome.com. A replacement or refund will be provided to you with proof of purchase. Star Elite Inc. may deny claims of damage caused by misuse or modifications of this product.

© 2023 Sunbeam® Products, Inc. All rights reserved.
SUNBEAM® and SHOT OF STEAM® are a registered trademarks of Sunbeam® Products, Inc. used under license.
Distributed by Star Elite Inc., Montreal, Canada H3B 3X9.
SE010-100523

Questions? info@sunbeamhome.com
or 1-877-383-6399
(8:30 am - 5:00 pm EST) Monday - Friday

Printed in China



MODEL 32610001
ITEM 17043

www.sunbeamhome.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Use iron only for its intended use.
- To protect against risk of electric shock, do not immerse the iron in water or other liquids.
- The Steam Selector must be OFF when filling the water in tank.
- Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance. Do not leave iron unattended while plugged in or turned on or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down – there may be hot water in the tank.
- If the iron is not operating normally, disconnect it from the power supply.
- Your iron is designed to rest on the heel rest. Do not leave the iron unattended. Do not set the iron on an unprotected surface, even if it is on its heel rest.
- **Note:** We test each iron at the factory to ensure that it functions correctly. The test may leave a small, harmless amount of water within the water tank.


SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the extension cord so that it cannot be pulled or tripped over.

FOR PRODUCTS PURCHASED IN THE UNITED STATES AND CANADA

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

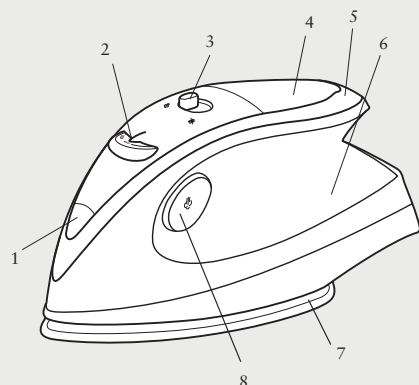

FEATURES OF YOUR HOT-2-TROT TRAVEL IRON

1. Lens
2. Temperature Select Dial
3. Steam Selector
4. Water Fill Door
5. Handle
6. Water Tank
7. Soleplate
8. Shot of Steam Buttons (both sides)
9. Voltage Selector Switch (not shown)

TO FILL THE WATER TANK (use tap water)

1. Make sure the iron is unplugged. Set the Steam Selector to ☒ (Dry) and the Temperature Select Dial to OFF.
2. Lift the Water Fill Door.
3. Pour tap water into iron water tank. Do not fill water tank beyond maximum fill level.

WARNING: To prevent the risk of burns, be careful when filling a hot iron with water. Hot metal parts, hot water and steam can cause injuries.

DRY IRONING

1. Make sure the Steam Selector is turned to the ☒ (Dry) setting.
2. Plug the cord into a 120-Volt AC outlet or 240 V based on the specific country Electrical Output.
3. Select the temperature setting you desire using the dial. Allow the iron to heat for 2 minutes. While the iron is heating, make sure it is sitting on its heel rest on a stable, protected surface.

WARNING: DO NOT turn the Steam Selector to ON position when using the iron in Low temperature.

STEAM IRONING

1. Follow the instructions for "To Fill the Water Tank."
2. Plug the cord into a 120-Volt AC outlet or 240 V based on the specific country's Electrical Output.
3. Select the temperature setting to either ●● or MAX using the dial. Allow the iron to heat for 2 minutes. While the iron is heating, make sure it is sitting on its heel rest on a stable, protected surface.
4. Turn the Steam Selector to the ☁ Steam Setting and begin ironing.

Important: When not ironing, always set the Steam Selector to ☒ (Dry) and the Temperature Select Dial to OFF.

USING THE IRON'S SPECIAL FEATURES

SHOT OF STEAM® FEATURE

Shot of Steam® feature provides an extra burst of steam for deep penetration of stubborn wrinkles. You can use this feature while Dry or Steam ironing, but the water tank must be at least 1/4 full of water.

TO USE THE SHOT OF STEAM®: Place the iron on top of the wrinkle and press both the buttons each time you would like an extra burst of steam. The Shot of Steam® feature may be used continuously in approximately 3 second intervals.

CARING FOR YOUR IRON AFTER USE

TURNING OFF YOUR IRON

1. Turn the Steam Selector to ☒ (Dry) and Temperature Select Dial to OFF.
2. Unplug the iron from the power source.

WARNING: NEVER yank the power cord when unplugging the iron. This can damage the cord.

STORING YOUR IRON

1. Turn off and allow the iron to cool.
2. If you do not use your iron on a daily basis, empty the water tank after each use for a longer iron life. To do so, unplug the iron, turn the iron upside down, open the fill hole cover, and allow water to flow from the Water Fill Door. Shake the iron gently to remove trapped water drops.
3. Loosely loop the power cord around the iron body and store the iron on its heel rest.

Important: Wrapping the cord around the iron too tightly can damage the cord.

MAINTAINING YOUR IRON

CLEANING THE SOLEPLATE

Clean the soleplate if starch or other residue accumulate.

TO CLEAN THE SOLEPLATE

Turn off and allow the iron to cool and then wipe it with a soft, damp cloth.

WARNING: DO NOT use abrasive cleansers, scouring pads or vinegar to clean the soleplate. This will damage the finish.