



Instruction Manual

3-in-1 Starry Skies Sheep Soother



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

4-10 years

3-6 years

Birth-36 months



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **3-in-1 Starry Skies Sheep Soother**.

Let this sweet lamb soothe your child to sleep with soft music, peaceful nature sounds and softly pulsing lights. Three light discs provide a night light, starry night effect or kaleidoscope style light projections. Choose among three timer options, and rest assured—if your child wakes up crying, the soother responds with comforting sounds. Remove the electronic module so you can give the sheep to your child to cuddle when they wake up.

Volume Control Buttons — Sound Sensor

Lullaby Button

Sound Button

Nursery Rhyme Button

Light Control Button

On/Off Switch

Time Setting Switch



INCLUDED IN THE PACKAGE

- 3-in-1 Starry Skies Sheep Soother
- Electronic module
- Three light discs
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE


Please save this Instruction Manual as it contains important information.

The **3-in-1 Starry Skies Sheep Soother** is hand washable. Remove the electronic module first. See instructions below and on page 9.



This product is in Try-Me mode in the packaging. After opening the package, please remove the demo tag from the bottom of the electronic module, then turn the unit off and on again to proceed with normal play. If the unit repeatedly powers down or if the light fades out during play, please install a new set of batteries.


The cord is not part of this toy. For your child's safety, please cut and discard the cord before using the product.

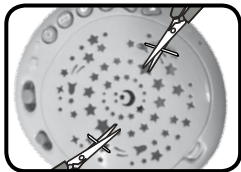

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the electronic module. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

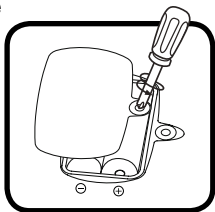

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On**  position. You will hear a soothing song, two nursery rhymes and 10 melodies. To turn the unit **Off**, slide the **On/Off Switch** to the **Off**  position.




2. Timer Switch

Slide the **Timer Switch** to select the length of time the unit will play audio for. When the time is up, the unit will automatically shut off.



3. Volume Control Buttons

Press the  **Button** to increase the volume or the  **Button** to decrease the volume. There are seven volume levels, with the default volume set to level three.

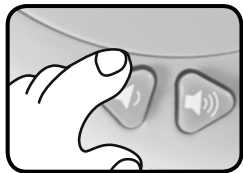


NOTE:

The default volume level is set to level three when the unit is first turned on or when the batteries are changed. Select a preferred volume level, and the unit will use this as its new default volume level (excluding level one, which is silent mode). If silent mode is selected, the unit will default to volume level two when reactivated after automatically powering down.

4. **Light Control Button**

Press the **Light Control Button** to select one of six light effects, including a no-light setting.

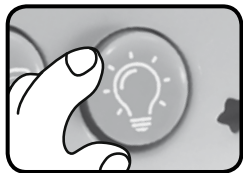

5. **Sound Sensor**

The **3-in-1 Starry Skies Sheep Soother** is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically shut off. The sensor will reactivate the program if it detects that your baby's cry has continued for approximately four seconds without interruption. The unit will reactivate and play lullabies. The sound sensor will be disabled after 12 hours of inactivity.

6. **Light Discs**

Three **Light Discs** are included with the sheep, each giving a different light effect. Snap the star pattern disc on to project a starry night sky. The refractor pattern projects fun kaleidoscope style lights. Insert the plain disc cover to give a soft, glowing night-light effect.

7. **Automatic Shut Off**

To preserve battery life, the **3-in-1 Starry Skies Sheep Soother** will automatically shut down after the selected time has ended. The unit can be turned on again by pressing any button. It will also turn on automatically when the sound sensor detects your baby's cry.

ASSEMBLY INSTRUCTIONS

With the **3-in-1 Starry Skies Sheep Soother**, safety comes first. To ensure your child's safety, adult assembly is required.

1. To change the **Light Disc**, pull on the tab with one hand while removing the disc with your other hand. To attach the **Light Disc**, insert the disc tab into the slot on the electronic module, pressing it down until it snaps into place.
2. Store the light discs under the electronic module, inside the **3-in-1 Starry Skies Sheep Soother**.
3. To remove the electronic module from the sheep, simply pull out the electronic module and seal the hook and loop closure. To insert the electronic module, open the hook and loop closure and spread and reshape material to make a large enough opening for the electronic module to fit inside.



ACTIVITIES

1. Sound Button

Press the **Sound Button** to hear a combination of soothing nature sounds or white noise. Press the **Sound Button** again to hear the next sound. The light pattern will fade in and fade out slowly with the sounds if the **Light Control Button** has not been pressed.



2. Nursery Rhyme Button

Press the **Nursery Rhyme Button** to hear five nursery rhymes with fun sounds followed by soft melodies. Press the **Nursery Rhyme Button** again to hear the next rhyme or melody. The light pattern will fade in and fade out slowly with the sounds if the **Light Control Button** has not been pressed.



3. Lullaby Button

Press the **Lullaby Button** to hear three soothing songs followed by soft melodies. Press the **Lullaby Button** again to hear the next song or melody. The light pattern will fade in and fade out slowly with the sounds if the **Light Control Button** has not been pressed.



MELODIES

1. Mary Had a Little Lamb
2. Row, Row, Row Your Boat
3. Here We Go 'Round the Mulberry Bush
4. Hickory, Dickory, Dock
5. Roses Are Red
6. Eine kleine Nachtmusik: Allegro - Mozart
7. Minuet in G - Bach
8. Morning Mood (Peer Gynt) - Grieg
9. Prelude - Fugue No. 1 (Well Tempered Clavier) - Bach
10. Greensleeves
11. Autumn (Four Seasons) - Vivaldi
12. Winter (Four Seasons) - Vivaldi
13. Spring (Four Seasons) - Vivaldi
14. Summer (Four Seasons) - Vivaldi
15. Air - Bach
16. Berceuse - Brahms
17. Cello Suite No.1 in G - Bach
18. Happy Farmer
19. Rondo a Capriccio - Beethoven
20. Brandenburg Concerto No. 3 in G Major, BWV 1048: Allegro - Bach
21. Magic Flute - Mozart
22. Serenade - Haydn
23. Moonlight Sonata - Beethoven
24. Nocturne Op. 9 No. 2 - Chopin
25. Spring Song - Mendelssohn
26. Kinderszenen - Schumann
27. Klipp-Klapp Galopp - Strauss
28. Sleeping Beauty Waltz - Tchaikovsky
29. Piano Sonata in C, K545 1st Movement - Mozart
30. Cradle Song - Mozart

- 31. Blue Danube Waltz - Strauss
- 32. Canon in D - Pachelbel
- 33. Berceuse, Op. 57 - Chopin
- 34. Turkish March - Mozart
- 35. The Nutcracker Suite -Tchaikovsky
- 36. Swan Lake - Tchaikovsky
- 37. Ode to Joy - Beethoven
- 38. Water Music - Handel
- 39. Für Elise - Beethoven
- 40. The Swan (Carnival of the Animals) - Saint-Saëns

SONG LYRICS

Song 1

Winkum, winkum, close your eyes,
I will sing you sweet lullabies.

Song 2

It's time to close your eyes,
Little one, little one.
It's time to close your eyes,
And have sweet dreams.

Song 3

Hush little baby, it's time to sleep,
Close your eyes, and count some sheep.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

