Download and install the editor software and audio drivers. Connect with computer via USB to access the editor software control.

LOOPER&DRUM When connecting with computer, USB connect will be displayed on the screen, The can be controlled by the software only, Buttons and footswit ches will not respond in this mode.



## Interface of editor software

List on the right hand side shows 40 save slots in MEMORY, Slot name in dark indicates the looper file and its duration; Slot name in grey indicates empty slot.



## **Import:** Click on the to import the audio file from computer to current slot, If loop file

already exists in current slot, you can choose to replace the previous file.

**Export:** Click on the 📵 to export loop file from current slot to computer, If current slot is empty, the icon will turn grey 🛅 and cannot be clicked.

Delete: Click on the 🔞 icon to delete looper file in current slot. If the slot is empty, the icon will turn grey m and cannot be clicked.

MERGE: Press SHIFT/CTRL and left click on the files to choose multiple files simultaneously. You can import/outport/delete selected files.

**RESET:** Click on Frase all to reset LOOPER&DRUM to factory settings.

## Notice:

**Editor Software** 

- 1. The exported audio file from the LOOPER recording, without the RHYTHM sound.
- 2. Deleting a looper file from a slot will set the volume, BPM, rhythm type or other parameters of back to default settings.