

INSTRUCTIONS MANUAL

FEATURES

- Time Telling Mode (Hours, Minutes, Seconds, and Day of the Week)
- Calendar Mode (Month, Date, and Day of the Week)
- 24 Hour Alarm with Snooze for 5 Minutes
- Hourly Chime: One 'Beep' sound every full Hour
- Chronograph Mode: Hours, Minutes, Seconds and 1/100 of a Second with lap Operation
- 12/24 Hour (Military Time)
- Water Resistant as indicated on the watch
- INSTALITE - Electro luminescent Display

EL LIGHT FEATURE

1. Press 'C' in any mode to illuminate the watch face. The backlight will remain lit for 3 seconds.

NOTE: EXCESSIVE USE OF LIGHT WILL SHORTEN BATTERY LIFE.

SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, and Day of the Week.
2. From Time Telling Mode, press and hold 'C'. Calendar Mode appears and the Month, Date, and Day of the Week are displayed. Release 'C' to return to Time Telling Mode.
3. From Time Telling Mode, press 'A' once. Chronograph appears. Press 'A' three times to return to Time Telling Mode.
4. From Time Telling Mode, press 'A' twice. Alarm Mode appears. Press 'A' twice to return to Time Telling Mode.

SETTING THE TIME AND CALENDAR

Analog

1. Pull the **CROWN** out. The Second Hand stops.
Rotate the **CROWN** in either direction until the desired time is obtained.
2. Push the **CROWN** back in to re-engage time keeping.

Digital


1. From Time Telling Mode, press 'A' three times. Seconds flash. Press 'C' to zero out the Seconds.
NOTE: Zeroing out 30 or more seconds automatically adds one minute to time.
2. Press 'B'. Minutes flash. Press 'C' to advance the Minutes.
3. Press 'B'. Hours flash. Press 'C' to advance the Hours.
NOTE: Pressing and holding 'C' will advance digits rapidly. When 12 Hour Format is selected, 'A' indicates 'a.m.' times; 'P' indicates 'p.m.' times; 'H' indicates 24 Hour (Military Time).
4. Press 'B'. The Date flashes. Press 'C' to advance the Date.
5. Press 'B'. The Months flash. Press 'C' to advance the Month.
6. Press 'B'. The Day of the Week flashes. Press 'C' to advance the Day.
7. Press 'A' to end sequence and return to Time Telling Mode.

STOPWATCH

1. From Time Telling Mode, press 'A' once to enter the Stopwatch Mode.
2. Press 'C' to start timing.
3. Press 'C' again to stop timing.
4. Press 'B' to reset to zero.
5. Press 'A' to return to Time Telling Mode.

SPLIT TIME

1. While in the Stopwatch Mode, press 'C' to start timing.
2. Press 'B' to measure and display SplitTimes.
3. Press 'C' to stop timing at the end of the event.
4. Press 'B' to reveal the final Split Time.
5. Press 'B' again to reset to zero.
6. Press 'A' to return to Time Telling Mode.

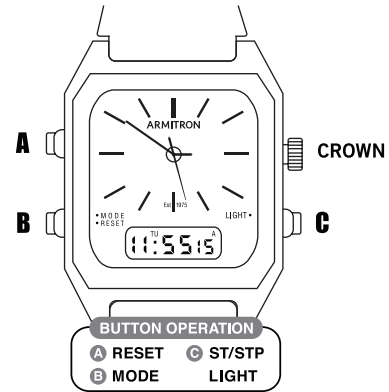

SETTING THE ALARM

1. From Time Telling Mode, press 'B' twice to enter the Alarm Mode. The Alarm Hour flashes.
2. Press 'C' to adjust the Hours.
NOTE: Pressing and holding 'C' will advance digits rapidly. When 12 Hour Format is selected, 'A' indicates 'a.m.' times; 'P' indicates 'p.m.' times; 'H' indicates 24 Hour (Military Time).
3. Press 'B'. Alarm Minutes flash. Press 'C' to adjust the Minutes.
4. Press 'A' to end set sequence and return to Time Telling Mode.

ACTIVATING THE ALARM, HOURLY CHIME, & SNOOZE

1. While in Time Telling Mode, press and hold 'B' to display the Alarm Time. At the same time, press 'A' to activate or deactivate the Hourly Chime.
NOTE: All of the Days of the Week appear when the Hourly Chime is activated. When the Hourly Chime is activated, one "Beep" will sound every hour on the hour.
2. While in Time Telling Mode, press and hold 'B' to display the Alarm Time. At the same time, press 'C' to activate or deactivate the Alarm.
NOTE: The Alarm Symbol appears when the Alarm is activated. When the Alarm is activated, the Alarm will sound at the preset Alarm Time for 60 seconds or until 'B' or 'C' is pressed.

Snooze

1. When the Alarm sounds, press 'C' to stop the Alarm for 5 minutes. The Alarm will sound again after 5 minutes.
2. Press 'B' to stop the Alarm.

INSTRUCTIONS MANUAL

CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent only. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

WATER RESISTANCE

This is a **WATER RESISTANT** watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron Adventure approved Service Centers are available in your area. These repair facilities use Armitron Adventure parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

RETURN YOUR WATCH FOR SERVICING

Please call **(718) 482-4195** for a listing of all approved and authorized service centers and locations, or visit our website at:

WWW.ARMITRON.COM

YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE. Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.