



BEAMZ
MADE
EAZY

154.067 V1.1

DMX65W CONTROLLER
QUICK START GUIDE

WIRELESS DMX

This controller has a wireless DMX transmission on board which operates on 2.4Ghz frequency band. The controller acts as a transmitter and needs a receiver (item 154.077 BPP Wireless DMX Transmitter/Receiver) or Beamz fixture with built-in 2.4Ghz DMX transmission.

To activate wireless DMX:

- Press **⏮** button,
- Select **⚙** and confirm with **⏮** button,

Note: Keeps DMX address standard at value "1", in complex installation you can change start address.

- Select **📶** and confirm with **⏮** button,
 - Select **📶 ON** and press **⏮** button to switch between "ON" and "OFF".
- Select **📶** and press **⏮** button to select your wireless DMX universe with number 1 to 7.

Ready? Go back to the "main" menu with **⏮** button.

DMX UNIVERSE	COLOUR	DMX CHANNELS
1	Red	1 - 512
2	Green	1 - 512
3	Yellow	1 - 512
4	Blue	1 - 512
5	Magenta	1 - 512
6	Cyan	1 - 512
7	White	1 - 512

Note: If you want to turn off the LED indicator near the display, you can easily do this by going to **⚙**, **📶**, **📶 LED** and press **⏮** button to select "OFF".


CREATE A CHASE

With this controller you are able to create 8 different chases with 15 steps each, play chase with adjustable speed and fade time.

Create your own chase:

- Press **⏮** button,
- Select **⚙** and confirm with **⏮** button,
- Select **🎭** and confirm with **⏮** button,
 - Select your chase ID with **⏮** or **⏭** button and confirm with **⏮** button,
- Select **✎** and confirm with **⏮** button.

Before we go further you need to know each function in OLED display:

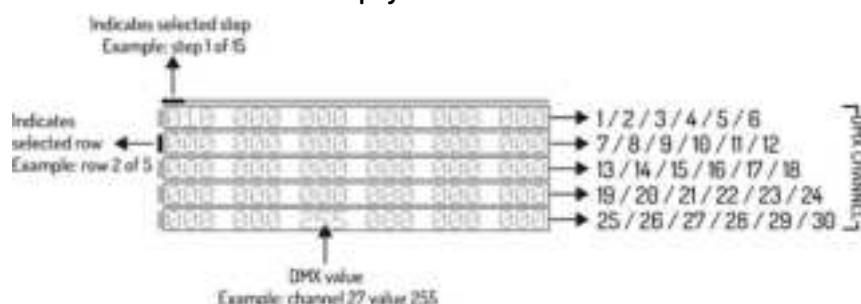

- Select DMX channel with **⏮** button and select DMX value with the fader corresponding to the DMX channel,
- Select step with **⏮** button and repeat the above step up to a maximum of 15 steps.

Note: Last step must be confirmed with **⏮** button.

Ready? Go back to the "effects" menu with **⏮** button.

PLAY CHASE

Play your own chase:

- Press **⏮** button,
- Select **⚙** and confirm with **⏮** button,
- Select **🎭** and confirm with **⏮** button,
 - Select your desired light output with master fader
 - Select your desired chase ID with chase fader
 - Select your desired chase speed with speed fader
 - Select your desired fade time between each step with fade fader

Ready? Go back to the "effects" menu with **⏮** button.

DELETE CHASE

Delete your own chase:

- › Press **⏮** button,
- › Select **EFFECTS** and confirm with **ENTER** button,
- › Select **ID** and confirm with **ENTER** button,
 - › Select your chase ID with **▲** or **▼** button and confirm with **ENTER** button,
- › Select **DELETE CHASE** and confirm with **ENTER** button,

Note: This step cannot be undone!!

TIMER FUNCTION

This controller is able to activate and deactivate a chase (ID number) at a specific time.



CAUTION! When using the timer function, do not switch off the controller!

Set your timer function:

- › Press **⏮** button,
- › Select **SETTINGS** and confirm with **ENTER** button,
- › Select **POWER UP** and confirm with **ENTER** button,
 - › Select your chase ID with **▲** or **▼** button and confirm with **ENTER** button,

Note: number 8 means manually

- › Select **TIME** and confirm with **ENTER** button,
 - › Enter the actual time by "TIME"
 - › Enter start time by "POWER ON"
 - › Enter end time by "POWER OFF"

Note: For long-term and optimal battery life, we recommend setting "POWER OFF BAT" at a minimum of 10%. Controller will automatically switched off as soon as set percentage is reached.

Ready? Go back to the "main" menu with **⏮** button.

DISPLAY

For longer operation and to save battery energy, you can automatically switch off OLED display after no operation has taken place for a certain period of time.

Set your display battery saver:

- › Press **⏮** button,
- › Select **SETTINGS** and confirm with **ENTER** button,
- › Select **DISPLAY** and confirm with **ENTER** button,
- › Select **SCREEN MODE** and select "ON", "OFF" or "LOGO" with **⏮** button,
- › Select **SCREEN TIME** and confirm with **ENTER** button,
 - › Select your time between 3 till 255 seconds with **▲** or **▼** button and confirm with **ENTER** button.

Ready? Go back to the "main" menu with **⏮** button.

PASSWORD

When used in public spaces, unauthorized persons can consciously or unconsciously change the lighting settings. This is usually undesirable and you can therefore set a password.

Set your password:

- › Press **⏮** button,
- › Select **SETTINGS** and confirm with **ENTER** button,
- › Select **PASSWORD** and select "ON" or "OFF" with **⏮** button,
- › Select **SET PASSWORD** and confirm with **ENTER** button,
 - › Fill in the standard password **▲**, **▼**, **▲**, **▼**.
 - › Now you can create your own password with **⏮**, **▲**, **▼** or **⏮** buttons.

Ready? Go back to the "main" menu with **⏮** button.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.



BEAMZLIGHTING.COM