


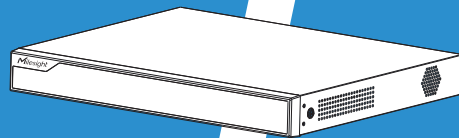

QUICK START GUIDE

SE0201-K/Nx



Milesight | *Make Sensing Matter*

🏢 Milesight IoT Co., Ltd. 🌐 www.milesight.com



Table of Contents

1.Package Contents.....	2
2.Hardware Introduction.....	2
3.Interfaces.....	3
4.Installation.....	3
5.OpenVision Server Software Wizard.....	8
6.Ready to Start.....	8

1. Packing List



OpenVision Server
x1



Quick Start Guide
x1



Warranty Card
x1



2.5" HDD Screw
x8



3.5" HDD Screw
x8



Mounting Bracket
x2



Mounting Bracket Screw
x4



HDD Power Cable
x1



Power Cord
x1



Power Adapter
x1




SATA Cable x2

2. Hardware Introduction




51.8mm

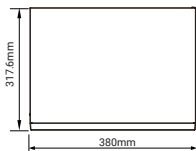

317.6mm

380mm


3. Interfaces

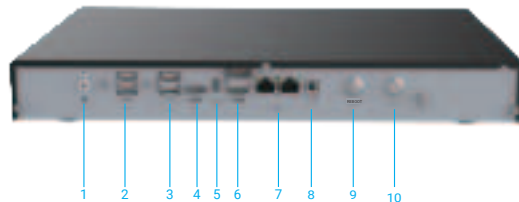


- | | | | |
|--------------|--------------------------|------------------|------------------|
| 1. Audio | 4. HDMI Port | 7. 2*LAN Port | 10. Power Button |
| 2. 2*USB 3.0 | 5. USB-C | 8. Power Port | |
| 3. 2*USB 2.0 | 6. DP Port and HDMI Port | 9. Reboot Button | |

4. Installation


Step1: Using a cross screwdriver to remove the screws at the rear panel and side panel in an anticlockwise direction.

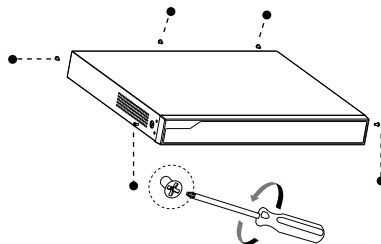


Step2: Slide the upper casing to the rear first and lift it up.

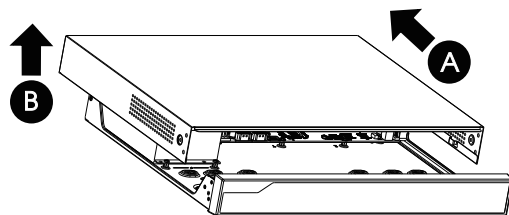

Step3: Secure the HDD from the bottom of the casing. 4 screws for each HDD.

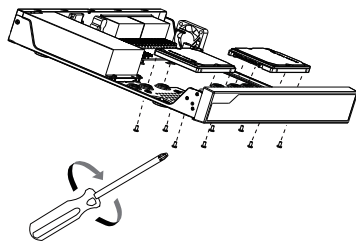


(2.5" HDD Installation)

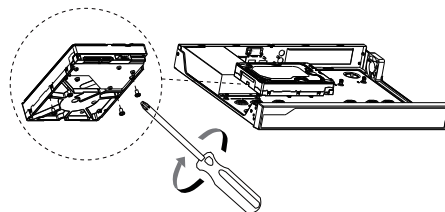


(3.5" HDD Installation)


Step4: After that, check if all the screws are tightened. Then connect the power cable and data cable to each HDD.

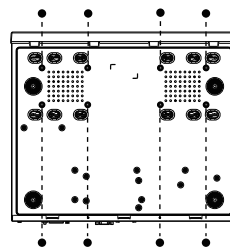


(Screw Position of 2.5" HDD)

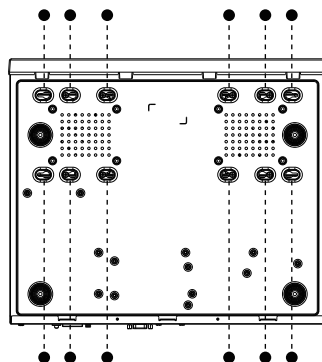


(Screw Position of 3.5" HDD)

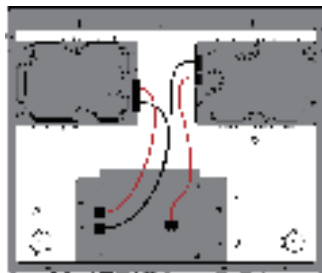

Step5: Pull down the upper casing and slide it to the front.

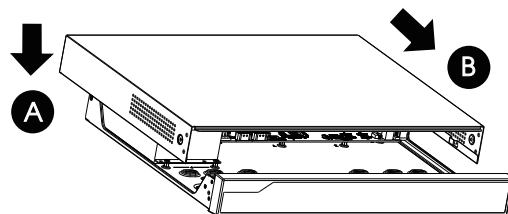


Step6: Lock the screws on the rear panel and side panel.

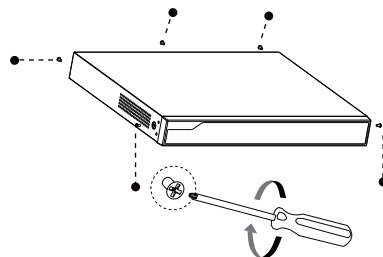

5. OpenVision Server Software Wizard

Step 1: Prepare the monitor, mouse, and keyboard. Turn on the computer and enter the default Ubuntu password 1234 (the default username for Ubuntu is msadmin).

Step2: Use the browser on the server itself to access 127.0.0.1:7001 to perform the initialization of the Nx server. If using another computer within the LAN, you can access it via the current server's IP address and port 7001.

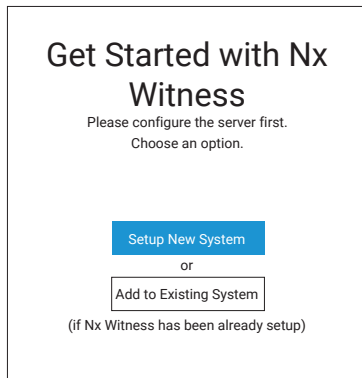

Note:

By default, Nx Client is not pre-installed. Users can use Nx Client on another computer to configure and access the OpenVision Server.

6. Ready to Start

When Machine is connected to a power source, it will power up automatically (Power up recovery is enabled by default).