 




| Original                                                                                     | Recharge                                                                                          | Original                                                                                           | Recharge                                                                                    |
|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|  Power      |  Power           |  Cancel         |  Back    |
|  Auto Off   |  Shift + Power   |  Repeat         |  Text    |
|  Sleep      |  Sleep           |  Random         |  Options |
|  Muting     |  Mute            |  Tape           |  Red     |
|  1 / Disc 1 |  1               |  CD             |  Green   |
|  2 / Disc 2 |  2               |  Tuner          |  Yellow  |
|  3 / Disc 3 |  3               |  AUX            |  Blue    |
|  4 / Disc 4 |  4               |  EQ             |  Subt    |
|  5 / Disc 5 |  5               |  I<< / <<       |  <<      |
|  6          |  6               |  I<< / <<       |  I<<     |
|  7         |  7              |  >> / >>I      |  >>I    |
|  8        |  8             |  >> / >>I     |  >>    |
|  9        |  9             |  Pause / Down |  Pause |
|  0        |  0             |  Pause / Down |  Down  |
|  ≥10      |  Guide         |  Pause / Down |  Left  |
|  Disc     |  Media         |  Stop / Clear |  Stop  |
|  Program  |  Shift + Sleep |  Stop / Clear |  Exit  |



